

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY MR24GA AKB76045003 Voice Magic Remote Control User Manual

ALLIMITY MR24GA AKB76045003

ALLIMITY MR24GA AKB76045003 Voice Magic Remote Control User Manual

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your ALLIMITY MR24GA AKB76045003 Voice Magic Remote Control. This remote is designed as a replacement for various LG 4K Smart OLED TV models, including 43NANO81T6A, 43UT81006LA, 50UT91006LA, OLED42C44LA, OLED97G45LW, and is also compatible with MR23GA, MR22GA, and MR21GA series remotes. Please read this manual thoroughly before use to ensure proper functionality.






This image displays the front of the ALLIMITY MR24GA AKB76045003 remote control, showing the power button, number pad, navigation controls, voice command button, and dedicated app buttons for Netflix, Prime Video, Disney+, Rakuten TV, L channels, and Alea.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch to open it.
3. Insert two AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside.
4. Replace the battery cover by sliding it back into position until it clicks securely.

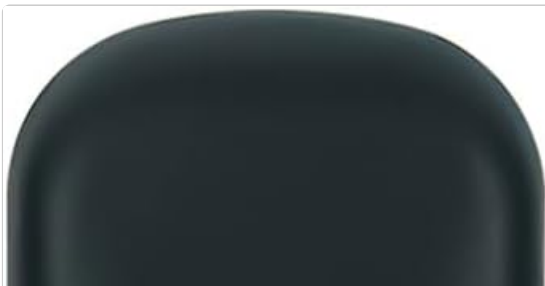



This image shows the back of the remote control with the battery cover removed, revealing the battery compartment designed for two AAA batteries. The battery cover is shown detached next to the remote.

2. Pairing with Your Device

This is a voice replacement remote control and requires pairing with your LG Smart TV before use. The pairing process may vary slightly depending on your TV model. Generally, follow these steps:

1. Ensure your TV is powered on.
2. Point the remote control towards your TV.
3. Press and hold the **Home** button (usually depicted as a house icon) and the **Back** button (usually depicted as an arrow curving left) simultaneously for about 5-10 seconds.
4. A pairing message should appear on your TV screen, indicating that the remote is connecting.
5. Once paired, the remote control will be ready for use. If pairing fails, try replacing the batteries and repeating the process.

OPERATING THE REMOTE CONTROL

The ALLIMITY MR24GA AKB76045003 remote control offers intuitive navigation and voice control for your LG Smart TV.

Key Functions:

- **Power Button** (⏻): Turns the TV on or off.
- **Number Pad (0-9)**: Directly input channel numbers or other numerical data.
- **Navigation Wheel/Buttons**: Use the central wheel and directional buttons to navigate menus and select items.
- **Voice Command Button** (🗣️): Press and hold to activate voice search or commands. Speak clearly into the remote.
- **Volume Up/Down**: Adjusts the TV volume.
- **Channel Up/Down**: Changes TV channels.
- **Home Button** (🏠): Accesses the TV's main Smart Home dashboard.
- **Back Button** (↶): Returns to the previous screen or menu.
- **Quick Access Buttons**: Dedicated buttons for popular streaming services like Netflix, Prime Video, Disney+, Rakuten TV, L channels, and Alea for direct access.

Using Voice Search:

To use the voice search feature, press and hold the Voice Command button. While holding the button, speak your command or search query clearly into the remote. Release the button when you are finished speaking. The TV will process your voice input.

MAINTENANCE

Cleaning the Remote:

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as

these can damage the remote's electronics.

Battery Replacement:

If the remote control becomes unresponsive or its range decreases, it may be time to replace the batteries. Follow the battery installation steps outlined in the Setup section. Always replace both batteries at the same time with new AAA alkaline batteries for optimal performance.

TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure there are no obstructions between the remote control and your TV.
 - Check if the batteries are correctly inserted and have sufficient charge. Replace them if necessary.
 - Try re-pairing the remote control with your TV as described in the Setup section.
- **Voice Control Not Working:**
 - Make sure the remote is properly paired with your TV.
 - Ensure you are pressing and holding the Voice Command button while speaking.
 - Speak clearly and at a normal volume.
 - Check your TV's settings to ensure voice recognition is enabled.
- **Buttons Not Functioning:**
 - Clean the remote control, especially around the buttons, to remove any dirt or debris that might be causing sticking.
 - Replace the batteries.

SPECIFICATIONS

Model Number	MR24GA AKB76045003
Brand	ALLIMITY
Product Dimensions	5 x 1 x 0.5 inches (approximately 19.2 cm x 4.4 cm)
Item Weight	3.25 ounces
Special Feature	Voice Search
Color	Black
Max Number of Supported Devices	18
Compatible Devices	Television (LG 4K Smart OLED TV models)



This image illustrates the physical dimensions of the remote control. It measures approximately 19.2 cm (7.56 inches) in length and 4.4 cm (1.73 inches) in width.

WARRANTY INFORMATION

Specific warranty details for the ALLIMITY MR24GA AKB76045003 Voice Magic Remote Control are not provided in the product data. Please refer to the seller's return policy or contact the seller directly for warranty inquiries.

CUSTOMER SUPPORT

Specific customer support contact information for the ALLIMITY MR24GA AKB76045003 Voice Magic Remote Control is not provided in the product data. For assistance, please contact the retailer from whom you purchased the product.