

- Manuals.plus /
- › Ejoyous /
- › Ejoyous Kitchen Faucet User Manual

Ejoyous Ejoyous45d18qwbzo-11

Ejoyous Kitchen Faucet User Manual

Model: Ejoyous45d18qwbzo-11 | Brand: Ejoyous

INTRODUCTION

Thank you for choosing the Ejoyous Kitchen Faucet. This manual provides detailed instructions for the installation, operation, and maintenance of your new faucet. Please read this manual thoroughly before installation and use to ensure proper function and longevity of the product. Keep this manual for future reference.



Image: Overall view of the Ejoyous Kitchen Faucet, showcasing its sleek black design and pull-out sprayer.

SAFETY INSTRUCTIONS

- Always turn off the main water supply before attempting any installation or maintenance.
- Ensure all connections are secure to prevent leaks.
- If you are unsure about any part of the installation process, consult a qualified plumber.
- Do not use abrasive cleaners or harsh chemicals on the faucet's surface, as this may damage the finish.
- Protect the faucet from freezing temperatures to prevent damage to internal components.

PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning installation.

- 1 x Ejoyous Kitchen Faucet (Black)
- 1 x Brass Connector
- Installation Hardware (nuts, washers, seals) - *Note: Specific hardware details may vary slightly.*

SETUP AND INSTALLATION

The Ejoyous Kitchen Faucet is designed for easy installation and is suitable for most kitchen sinks. It features a universal installation type with a valve seat diameter of approximately 3.2-4.2 cm (1.26-1.65 inches).

1. **Prepare the Sink:** Ensure the sink hole is clean and free of debris. The faucet is designed for embedded installation.
 2. **Mount the Faucet:** Insert the faucet base into the sink hole. From underneath the sink, secure the faucet using the provided mounting hardware (washer and nut). Tighten firmly but do not overtighten.
 3. **Connect Water Lines:** Attach the hot and cold water supply lines to the corresponding inlets on the faucet. Use the brass connector if necessary. Ensure all connections are hand-tightened, then use a wrench for a final quarter-turn to secure.
 4. **Test for Leaks:** Slowly turn on the main water supply and check all connections for any signs of leaks. If leaks occur, tighten the connections further.
-

Widely Applicable

The waterfall sink faucet is easy to install, suitable for most kitchen sinks, single handle device, easy one handed control, elegant appearance, improve the kitchen experience.



Image: The Ejoyous Kitchen Faucet shown installed in a kitchen sink, demonstrating its compatibility and elegant appearance.

OPERATING INSTRUCTIONS

Hot and Cold Water Control

The faucet features a dual hot and cold control design, allowing for easy temperature adjustment. Simply move the single lever handle to the left for hot water and to the right for cold water. The further you move the handle, the higher the flow rate.

Hot And Cold Control

Kitchen sink faucet adopts hot and cold dual control design, temperature simple control, explosion proof, high temperature resistant, low temperature anti freezing, long service life.



Image: Close-up of the faucet handle, illustrating the hot and cold water control mechanism.

3 Water Modes

The pull-out sprayer offers three distinct water modes for various cleaning tasks:

- **Pressurized Blade Mode:** Ideal for stubborn dirt and powerful rinsing.
- **Strong Water Mode (Aerated Stream):** A robust, aerated stream for general washing.
- **Waterfall Water Mode (Soft Stream):** A gentle, wide cascade for delicate rinsing or filling.

Switch between modes by pressing the button on the sprayer head.

3 Water Modes

Flexible switching of 3 water modes, easier cleaning, multi scene application. Pressurized blade mode, strong water, bubble water mode, soft, waterfall water mode, a wider range of cleaning.



Image: The faucet head demonstrating the different water spray patterns available.



Image: A detailed view of the sprayer head, highlighting the different nozzle types for each water mode.

Rotatable Sprayer

The faucet's sprayer can be rotated 360 degrees, allowing you to easily reach all corners of your sink without effort. This flexible rotation supports both horizontal waterfall mode and vertical faucet mode for versatile use.

Rotatable Sprayer

Sink faucet's sprayer can be rotated 360 degrees, rinsing corners without effort, flexible rotation and operating, support horizontal waterfall mode, vertical faucet mode.



Image: The faucet head rotated to demonstrate its 360-degree swivel capability, useful for reaching all areas of the sink.

MAINTENANCE

The Ejoyous Kitchen Faucet is constructed from fine copper, making it resistant to high temperatures and rust. It features a ceramic valve spool designed for leak-free operation and comes with a bubbler to increase pressure.

- **Cleaning:** To maintain the finish, clean the faucet regularly with a soft cloth and mild soap. Rinse thoroughly with clean water and dry immediately. Avoid using abrasive cleaners, steel wool, or harsh chemicals, as these can damage the surface.
- **Aerator Maintenance:** If water flow decreases, the aerator (bubbler) may be clogged. Unscrew the aerator from the sprayer head, clean any mineral deposits or debris, and then reattach it.
- **Leak Prevention:** The ceramic valve spool is designed for durability and to prevent leaks. If a leak occurs from the handle, it may indicate a worn O-ring or cartridge. Consult a professional for replacement if necessary.

Premium Material

This kitchen faucet is made of fine copper, high temperature resistant, not easy to rust. Ceramic valve spool, no leakage, comes with bubbler to increase pressure.



Image: A view of the faucet highlighting its premium material construction, emphasizing its durability and resistance to rust.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Water Flow	Clogged aerator or mineral buildup.	Remove and clean the aerator. Check water supply lines for kinks.
Leaks from Faucet Base	Loose mounting nut or worn seal.	Tighten the mounting nut under the sink. Check and replace seals if damaged.
Leaks from Handle	Worn cartridge or O-rings.	Contact customer support or a qualified plumber for cartridge replacement.

Problem	Possible Cause	Solution
No Hot/Cold Water	Water supply valves are closed or lines are blocked.	Ensure hot/cold water supply valves under the sink are fully open. Check for kinks in supply lines.

SPECIFICATIONS

- **Product Type:** Kitchen Faucet
- **Brand:** Ejoyous
- **Model Number:** Ejoyous45d18qwbzo-11
- **Color:** Black
- **Material:** Fine Copper, Ceramic Valve Spool
- **Dimensions (Approx.):** 31 x 14 x 19 cm / 12.2 x 5.5 x 7.5 inches (Height x Spout Reach x Base Width)
- **Gross Weight (Approx.):** 1098 g / 2.4 lb
- **Installation Type:** Embedded, Universal Installation
- **Valve Seat Diameter:** 3.2-4.2 cm / 1.26-1.65 inches
- **Features:** 3 Water Modes (Pressurized Blade, Strong, Waterfall), 360° Rotatable Sprayer, Hot & Cold Dual Control, Anti-explosion, High Temperature Resistant, Anti-freezing.

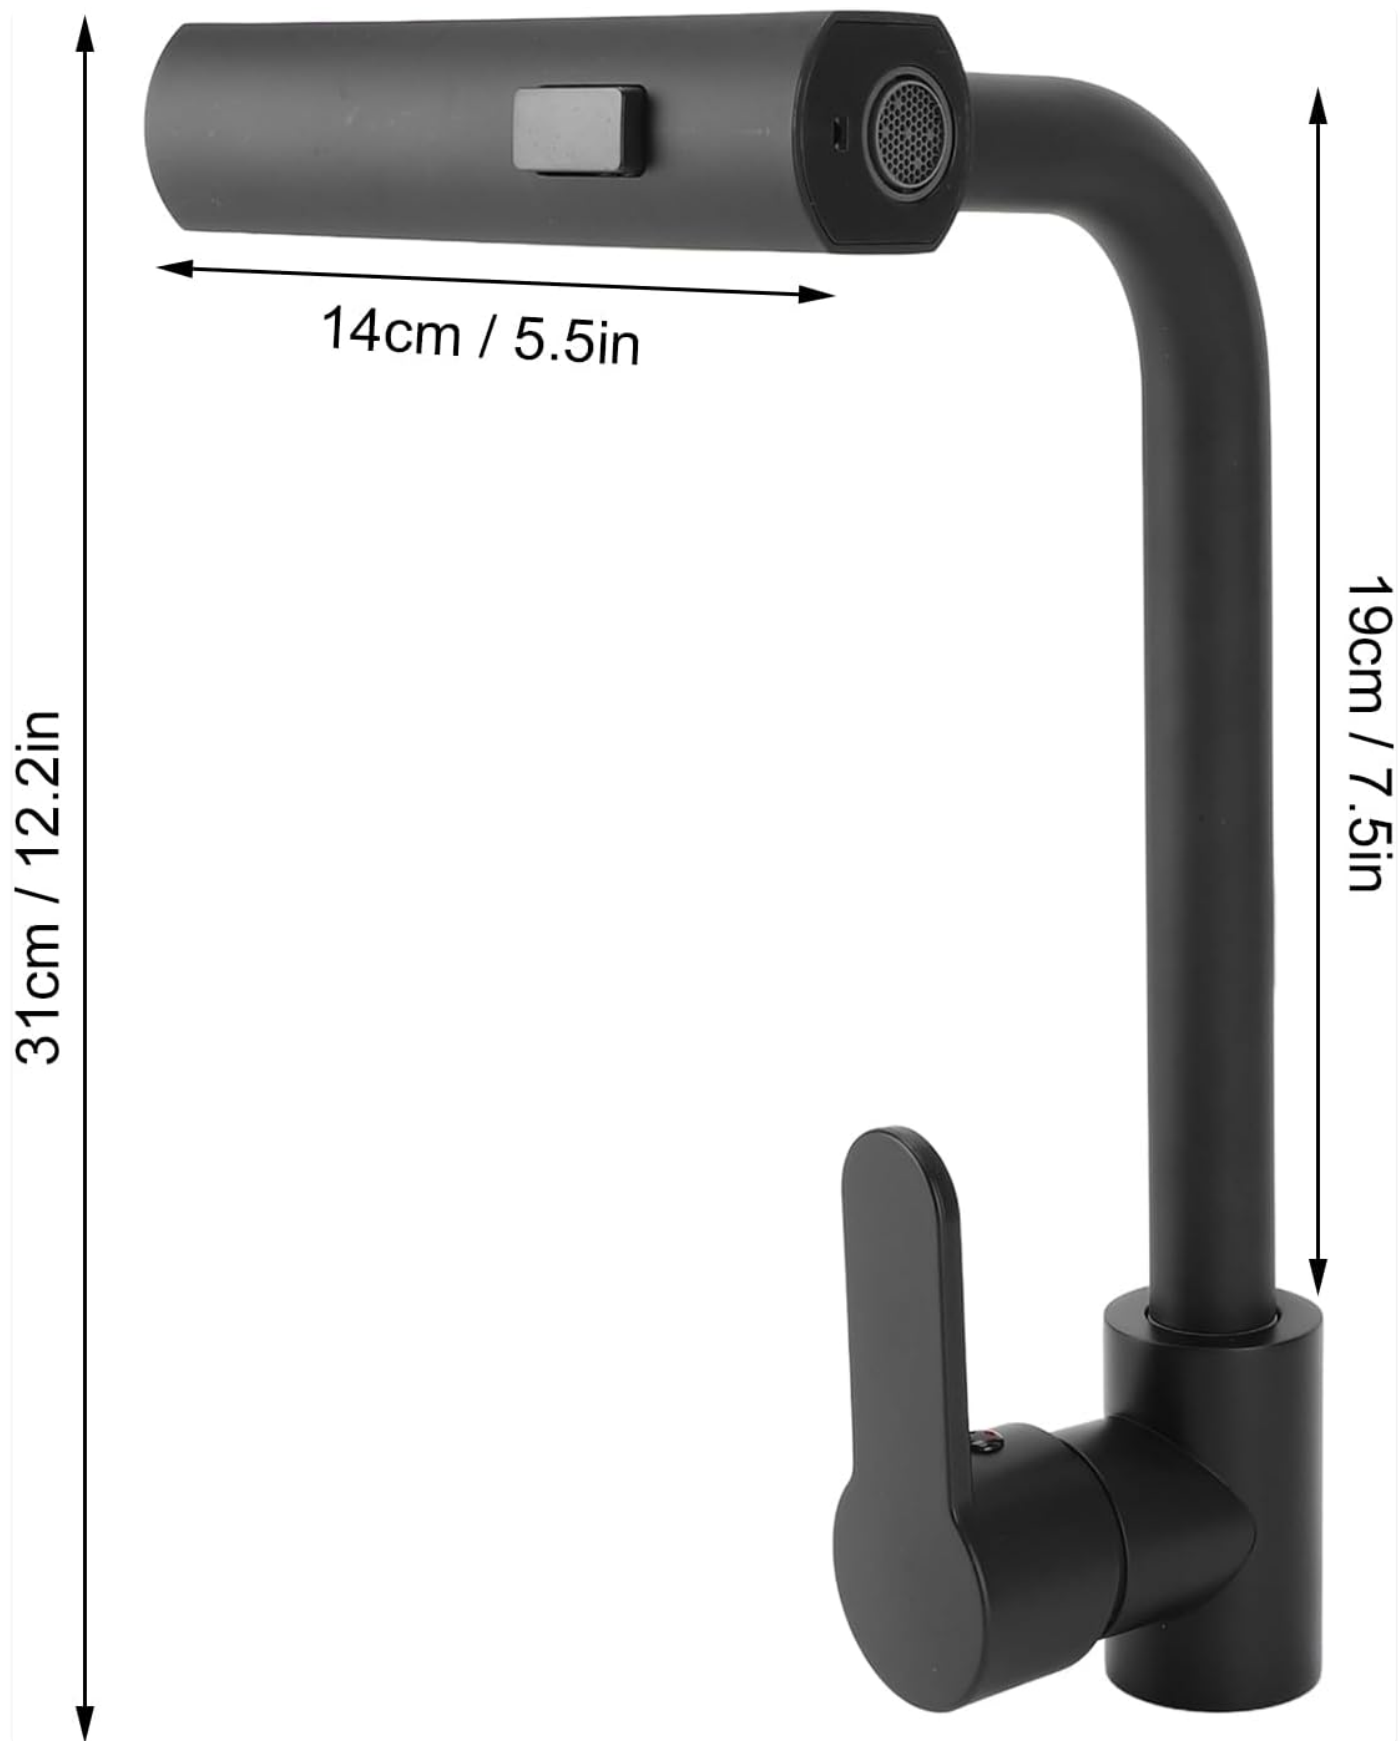


Image: Diagram showing the key dimensions of the Ejoyous Kitchen Faucet, including height, spout reach, and base width.

WARRANTY AND SUPPORT

Ejoyous is committed to providing high-quality products. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims. For technical support, troubleshooting assistance, or inquiries about replacement parts, please contact your retailer or visit the official Ejoyous brand store on Amazon:

[Ejoyous Brand Store](#)

Please note that manual measurements may have slight errors, as indicated in the product description.

© 2024 Ejoyous. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question