

[Manuals.plus](#) /

> [SONGMICS](#) /

> SONGMICS RLS460B01 200L Rolling Laundry Hamper Instruction Manual

SONGMICS RLS460B01

SONGMICS RLS460B01 200L Rolling Laundry Hamper Instruction Manual

Model: RLS460B01 | Brand: SONGMICS

1. INTRODUCTION

Thank you for choosing the SONGMICS RLS460B01 200L Rolling Laundry Hamper. This manual provides essential information for the safe assembly, operation, and maintenance of your new laundry sorter. Please read these instructions carefully before use and retain them for future reference. This hamper is designed to simplify your laundry routine with its four compartments, large capacity, and mobile design.

2. SAFETY INSTRUCTIONS

- Keep all packaging materials away from children to prevent choking hazards.
- Ensure all parts are securely assembled before use. Loose parts can cause instability.
- Do not overload the hamper beyond its stated weight capacity of 20 kg. Overloading may cause damage or injury.
- Do not allow children to climb on or play with the laundry hamper.
- Place the hamper on a flat, stable surface. Use the locking wheels when the hamper needs to remain stationary.
- Keep the product away from open flames or high heat sources.
- Avoid contact with sharp objects to prevent damage to the fabric bags.

3. PACKAGE CONTENTS

Please check that all components are present before beginning assembly:

- Steel Frame Components (tubes, connectors)
- 4 x Fabric Laundry Bags (600D Oxford fabric)
- 4 x Wheels (2 with locking mechanism)
- 5 x Sorting Labels (e.g., Dark, Light, Others, Towels, Color)
- Assembly Hardware (screws, wrench if needed)
- Instruction Manual

4. SETUP AND ASSEMBLY

Follow these steps to assemble your laundry hamper:

1. **Assemble the Base Frame:** Connect the steel tubes to form the rectangular base of the hamper. Ensure all connections are secure.
2. **Attach the Wheels:** Insert the four wheels into the designated holes on the base frame. Ensure the two lockable wheels are positioned on the same side for easy access.



Figure 1: Attaching the wheels, showing the locking mechanism.

3. **Install the Vertical Supports and Top Frame:** Attach the vertical steel tubes to the base, then connect them with the top frame tubes to complete the main structure.
4. **Insert the Laundry Bags:** Place each of the four fabric laundry bags into its respective compartment within the steel frame. Secure the bags using the Velcro fasteners along the top edges of the frame.



Figure 2: Securing the laundry bags with Velcro fasteners.

5. **Apply Sorting Labels:** Attach the provided sorting labels (e.g., Dark, Light, Others, Towels) to the front of each compartment as desired. These labels are typically made of synthetic leather and attach via Velcro.



Figure 3: Fully assembled laundry hamper with sorting labels.

5. OPERATING INSTRUCTIONS

- **Sorting Laundry:** Use the four designated compartments and labels to sort your laundry by color, fabric type, or washing requirements (e.g., Darks, Lights, Delicates, Towels).



Figure 4: Sorting laundry into the 200L capacity compartments.

- **Moving the Hamper:** To move the hamper, unlock the two lockable wheels by flipping their levers. Push the hamper using the integrated handles.
- **Securing the Hamper:** To keep the hamper stationary, engage the locking mechanism on the two lockable wheels by flipping their levers down.
- **Removing Laundry Bags:** When a compartment is full, detach the fabric bag from the frame by releasing the Velcro fasteners. The bags have handles for easy transport to your washing machine.

6. MAINTENANCE

- **Cleaning the Fabric Bags:** The 600D Oxford fabric bags have a PE coating, making them water-resistant and easy to clean. Wipe

them with a damp cloth and mild detergent. Do not machine wash or tumble dry to preserve the coating.

- **Cleaning the Frame:** Wipe the steel frame with a soft, damp cloth. Avoid abrasive cleaners.
- **Wheel Maintenance:** Periodically check the wheels for lint or debris and clean as necessary to ensure smooth rolling.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Hamper is unstable or wobbly.	Loose connections in the frame.	Check all screws and connections and tighten them securely.
Wheels do not roll smoothly.	Debris caught in wheels; wheels are locked.	Clean any debris from the wheels. Ensure the locking mechanism is disengaged.
Laundry bags detach easily.	Velcro not fully engaged; bag overloaded.	Ensure Velcro fasteners are firmly pressed together. Do not exceed the 20 kg weight capacity.

8. SPECIFICATIONS

Model: RLS460B01

Brand: SONGMICS

Capacity: 200 Liters

Dimensions (L x W x H): 79 x 40 x 91 cm (31.1 x 15.7 x 35.8 inches)

Item Weight: 3.5 kg (7.7 lbs)

Material: Steel (frame), 600D Oxford Fabric (bags), Synthetic Leather (labels)

Color: Ink Black

Special Features: 4 Sorting Compartments, Rolling Wheels (2 lockable), Removable Bags, Water-resistant Coating

Max. Load Capacity: 20 kg (44 lbs)



Figure 5: Product dimensions.

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the purchase platform or contact SONGMICS customer service directly. Keep your proof of purchase for any warranty claims.

Contact Information: Please visit the official SONGMICS website or the seller's page on the platform where you purchased the product for the most up-to-date contact details.



© 2026 SONGMICS. All rights reserved.