



Manuals+



[Manuals.plus](#) /

› [UMBRELLA](#) /

› UMBRELLA Classic 10,000 mAh Power Bank Instruction Manual

UMBRELLA 10.000 mAh - Classic

UMBRELLA Classic 10,000 mAh Power Bank Instruction Manual

Model: 10.000 mAh - Classic

1. INTRODUCTION

Thank you for choosing the UMBRELLA Classic 10,000 mAh Power Bank. This portable charger is designed to provide reliable and efficient power for your mobile devices, including smartphones, tablets, and earbuds, whether you are at home, in the office, or on the go. Featuring 22.5W fast charging, PD 20W, 15W wireless charging, and versatile USB-C, USB-A, and Lightning ports, this power bank ensures your devices stay charged when you need them most.



Image 1.1: The UMBRELLA Classic 10,000 mAh Power Bank, a compact black portable charger.

2. SAFETY INFORMATION

Please read all safety instructions before using this product. Failure to follow these instructions may result in fire, electric shock, product damage, or property damage.

- Do not expose the power bank to extreme temperatures (heat or cold), direct sunlight, or humidity.
- Do not disassemble, modify, or repair the device yourself. Contact qualified service personnel for assistance.
- Keep the power bank away from water and other liquids.
- Do not drop, puncture, or apply excessive force to the power bank.
- Use only certified charging cables and adapters.

- Keep out of reach of children.
- Dispose of the power bank responsibly according to local regulations. Do not dispose of it in household waste.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- UMBRELLA Classic 10,000 mAh Power Bank
- Magnetic Ring
- Charging Cable
- User Manual (this document)

4. PRODUCT OVERVIEW AND FEATURES

Familiarize yourself with the various components and features of your UMBRELLA Classic Power Bank.



Image 4.1: Diagram showing the ports and features of the power bank.

- **Magnetic Wireless Charging Area:** Supports up to 15W wireless charging for compatible devices.
- **Power Button:** Press to check battery level or initiate charging.
- **LED Display:** Indicates the current battery level of the power bank.
- **USB-C Port (PD 20W Input & Output):** Used for both charging the power bank and fast charging compatible devices.
- **USB-A Port (QC 22.5W Output):** Provides fast charging for compatible devices.
- **Lightning Port (Input):** Used for charging the power bank with a Lightning cable.

COMPACT & DURABLE.

Fits in any pocket.



ABS-Housing
For high Durability



Image 4.2: Physical dimensions and weight of the power bank.

5. SETUP

5.1 Initial Charging of the Power Bank

Before first use, it is recommended to fully charge your UMBRELLA Classic Power Bank.

1. Connect the provided charging cable to either the **USB-C Input** or the **Lightning Input** port on the power bank.
2. Connect the other end of the cable to a suitable USB wall adapter (not included).
3. The LED display will show the charging progress. The power bank is fully charged when the display indicates 100%.

5.2 Attaching the Magnetic Ring (Optional)

If your device does not have built-in magnetic charging capabilities, you can use the included magnetic ring for enhanced magnetic attachment.

1. Clean the back surface of your phone or phone case thoroughly.
2. Carefully peel off the adhesive backing from the magnetic ring.
3. Align the magnetic ring centrally on the back of your device or case, ensuring it does not obstruct cameras or other features.
4. Press firmly for a few seconds to secure the ring.

6. OPERATING INSTRUCTIONS

6.1 Charging Your Devices (Wired)

The power bank supports fast charging via its USB-C and USB-A ports.

1. Connect your device's charging cable to either the **USB-C Output** or the **USB-A Output** port on the power bank.
2. Connect the other end of the cable to your device.
3. The power bank will automatically begin charging your device. If not, press the power button once.
4. The LED display will show the remaining battery level of the power bank.

6.2 Charging Your Devices (Wireless)

The power bank features 15W magnetic wireless charging for compatible devices.

1. Ensure your device supports wireless charging and has magnetic alignment (e.g., MagSafe compatible).
2. Place your device onto the magnetic wireless charging area of the power bank. The magnets will align the device correctly.
3. The power bank will automatically begin wireless charging. If not, press the power button once.
4. The LED display will show the remaining battery level of the power bank.

FAST & EFFICIENT CHARGING.

With QC22.5W and PD20W for super-fast Charging.



QC22.5W & PD20W

Charge your Smartphone
50% faster



Image 6.1: A smartphone being charged wirelessly by the power bank.



Boîtier ABS robuste –
durable et résistant



QC22.5W & PD20W
Rapidement prêt à l'emploi
au quotidien



Charge rapide et efficace.

Charge rapide puissante avec QC
22,5W et PD 20W.

Image 6.2: Visual representation of fast charging capabilities.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the power bank. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, fully charge the power bank at least once every three months if not in regular use. Avoid completely draining the battery frequently.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank does not charge.	Charging cable is faulty or not properly connected. Wall adapter is not working or insufficient.	Try a different charging cable and/or wall adapter. Ensure connections are secure.
Device is not charging from the power bank.	Power bank battery is depleted. Cable is faulty or not properly connected. Device is incompatible.	Check power bank battery level and recharge if necessary. Try a different cable. Ensure your device is compatible with the power bank's output. Press the power button on the power bank.
Wireless charging is not working.	Device is not aligned correctly. Device is not wireless charging compatible. Phone case is too thick or contains metal.	Ensure the device is centered on the magnetic charging area. Remove any thick or metallic phone cases. Verify device supports Qi wireless charging. Press the power button on the power bank.
Slow charging.	Cable or adapter does not support fast charging. Device does not support fast charging.	Use a fast-charging compatible cable and wall adapter. Ensure your device supports the fast charging protocols (PD, QC).
Power bank turns off after a few seconds.	Power bank battery is low or depleted.	Recharge the power bank fully. If the issue persists after a full charge, contact customer support.

9. SPECIFICATIONS

Model Number	10.000 mAh - Classic (P42K-SW)
Battery Capacity	10,000 mAh
Battery Type	Lithium-polymer
Input (USB-C)	PD 20W
Input (Lightning)	Standard Input
Output (USB-C)	PD 20W

Output (USB-A)	QC 22.5W
Wireless Output	15W (Qi Standard)
Dimensions (L x W x H)	10.9 x 6.9 x 1.9 cm
Weight	210 Grams
Color	Black
Special Features	Magnetic Charging Function, LED Display
Compatible Devices	Smartphones, Tablets, Earbuds, Smartwatches, Bluetooth Devices, USB Devices

10. WARRANTY AND SUPPORT

UMBRELLA products are designed and manufactured to the highest quality standards. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please refer to the warranty card included in your package or visit our official website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact UMBRELLA customer service through the following channels:

- **Website:** [www.umbrella-support.com](#) (placeholder link)
- **Email:** support@umbrella.com (placeholder email)
- **Phone:** +1-800-XXX-XXXX (placeholder number)

When contacting support, please have your product model number (10.000 mAh - Classic) and proof of purchase ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DP3B9L64>

More documents and user manuals: <https://manuals.plus/>