

Oster OCEL840

Oster 2L Stainless Steel Electric Kettle

Model: **OCEL840**

Brand: **Oster**

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or electric kettle in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The kettle features an automatic shut-off for safety once water has boiled.



2. PRODUCT OVERVIEW

The Oster 2L Stainless Steel Electric Kettle is designed for efficient and convenient water heating. Its durable stainless steel construction ensures longevity and easy maintenance.

Key Features:

- **2 Liter Capacity:** Ideal for multiple servings of hot beverages or cooking needs.
- **Stainless Steel Construction (340 grade):** Ensures durability and a sleek appearance.
- **Powerful Heating:** 1200W (for 127V models) for rapid boiling.
- **Automatic Shut-off:** Enhances safety by turning off the kettle once water reaches boiling point.
- **Anti-slip Base:** Provides stability during use.
- **Easy-Open Lid Handle:** Designed for convenient filling and cleaning.



Images: Front and angled views of the Oster 2L Stainless Steel Electric Kettle, showcasing its design and stainless steel finish.

3. SETUP

1. **Unpacking:** Carefully remove the kettle and its base from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the MAX fill line. Boil the water, then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Positioning:** Place the power base on a flat, stable, heat-resistant surface. Ensure the power cord is not dangling where it can be pulled or tripped over.
4. **Power Connection:** Plug the power cord into a grounded 127V electrical outlet.



Image: The electric kettle placed on its power base with the lid open, ready for filling or initial cleaning.

4. OPERATING INSTRUCTIONS

1. **Fill the Kettle:** Press the lid release button or pull the lid handle to open the lid. Fill the kettle with the desired amount of fresh water, ensuring it is between the MIN and MAX fill lines. Do not overfill.
2. **Close the Lid:** Close the lid securely until it clicks into place.
3. **Place on Base:** Position the kettle firmly onto its power base.
4. **Start Boiling:** Press the ON/OFF switch located on the handle downwards. The indicator light will illuminate, signaling that the kettle is heating.
5. **Automatic Shut-off:** The kettle will automatically turn off once the water has reached a rolling boil. The indicator light will extinguish.
6. **Pouring:** Carefully lift the kettle from its base and pour the hot water. Always hold the handle firmly.
7. **Manual Shut-off:** To stop the boiling process before it automatically shuts off, simply lift the kettle from its base or push the ON/OFF switch upwards.



Images: Kettle with lid open for filling, and a close-up of the handle showing the power switch.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your electric kettle.

General Cleaning:

- Always unplug the kettle and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior:** The product instructions specify **hand wash only**. Do not immerse the kettle or its base in water or any other liquid.
- Ensure all parts are thoroughly dry before storing or using again.

Descaling:

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. This can affect performance and taste.

1. Fill the kettle with 2 cups of white vinegar and 2 cups of water.
2. Bring the mixture to a boil and let it stand for 30 minutes.
3. Discard the mixture and rinse the kettle thoroughly with fresh water several times.
4. For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.



Image: Interior view of the kettle, showing the stainless steel surface where limescale may accumulate.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in; power switch not activated; no water in kettle; power outage.	Ensure kettle is plugged in and switch is pressed down. Check if there is water. Verify power supply.
Kettle turns off before boiling.	Too much limescale buildup; kettle overfilled or underfilled.	Descale the kettle. Ensure water level is between MIN and MAX lines.
Water has an unusual taste.	New kettle residue; limescale buildup.	Perform initial cleaning steps again. Descale the kettle.
Lid does not close properly.	Obstruction; lid mechanism issue.	Check for any obstructions. Ensure the lid is aligned correctly.

If the problem persists after trying these solutions, please contact Oster customer support.

7. SPECIFICATIONS

- Model Number:** OCEL840
- Capacity:** 2 Liters
- Material:** Stainless Steel (340 grade)

Color: Silver

Voltage: 127 Volts

Power: 1200 Watts

Special Feature: Automatic Shut-off

Product Dimensions (L x W x H): 15 cm x 21.5 cm x 24 cm

Item Weight: 1 Kilogram

Care Instructions: Hand wash only

8. WARRANTY AND SUPPORT

This Oster Electric Kettle (Model OCEL840) comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal household use.

The warranty does not cover damage resulting from misuse, abuse, accident, alteration, lack of proper care, or normal wear and tear.

For warranty claims, technical support, or service inquiries, please contact Oster customer service. Please have your proof of purchase and model number available when contacting support.

You can find contact information for Oster customer service on the official Oster website or through your product's packaging.

© 2026 Oster. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question