

Monster Rockin' Roller 360

Monster Rockin' Roller 360 Portable Bluetooth Speaker User Manual

Model: Rockin' Roller 360

INTRODUCTION

Thank you for choosing the Monster Rockin' Roller 360 Portable Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. The Rockin' Roller 360 is designed to deliver powerful 360-degree sound for both indoor and outdoor environments, featuring extended battery life, TWS pairing capability, and weather resistance.

Key features include:

- Up to 240W of 360-degree sound output with a dedicated Bass button.
- Up to 100 hours of playtime on a single charge.
- True Wireless System (TWS) pairing for connecting two Rockin' Roller 360 speakers.
- IPX4 weather-resistant exterior for protection against splashes.
- Integrated features such as rugged 5-inch wheels, an adjustable top handle, built-in LED lighting, a telescoping handle, QI Wireless charger, USB port, and an included microphone for Karaoke/PA use.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the speaker.
- Do not expose the speaker to extreme temperatures, direct sunlight, or excessive humidity.
- Ensure the charging port cover is securely closed when not charging to maintain IPX4 weather resistance.
- Do not submerge the speaker in water. IPX4 rating protects against splashing water, not immersion.
- Use only the provided charging cable and adapter.
- Keep the speaker away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not block any ventilation openings.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Unplug the speaker during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PACKAGE CONTENTS

Please check to ensure all items are present:

- Monster Rockin' Roller 360 Portable Bluetooth Speaker
- QI Wireless charger (integrated)
- USB port (integrated)
- Microphone
- Power Adapter (not explicitly listed in "whats_in_the_box" but implied for charging)
- User Manual (this document)

SETUP GUIDE

1. Charging the Speaker

Before first use, fully charge the Rockin' Roller 360. Connect the power adapter to the speaker's input power port and plug it into a wall outlet. The charging indicator will show the charging status. A full charge can provide up to 100 hours of playtime.



Image: Rear view of the speaker, highlighting the power input and on/off switch for charging and initial power-up.

2. Powering On/Off

Locate the power switch on the back of the speaker. Flip the switch to the "ON" position to power on the device. To power off, flip the switch to the "OFF" position.

3. Bluetooth Pairing

1. Ensure the speaker is powered on.
2. The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon or LED.
3. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "Monster Rockin' Roller 360" from the list of devices.
5. Once paired, the speaker will emit a confirmation sound, and the Bluetooth indicator will become solid.

4. True Wireless System (TWS) Pairing

To achieve stereo sound, you can pair two Rockin' Roller 360 speakers together:

1. Ensure both Rockin' Roller 360 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker, press and hold the TWS button (refer to the control panel diagram for location).
3. The speaker will search for another Rockin' Roller 360.
4. Once connected, both speakers will emit a confirmation sound, and the TWS indicator will light up.
5. Now, connect your mobile device to one of the paired speakers via Bluetooth. Audio will play through both speakers in stereo.

OPERATING INSTRUCTIONS

1. Control Panel Overview

The main control panel is located on the top of the speaker, providing access to various functions.

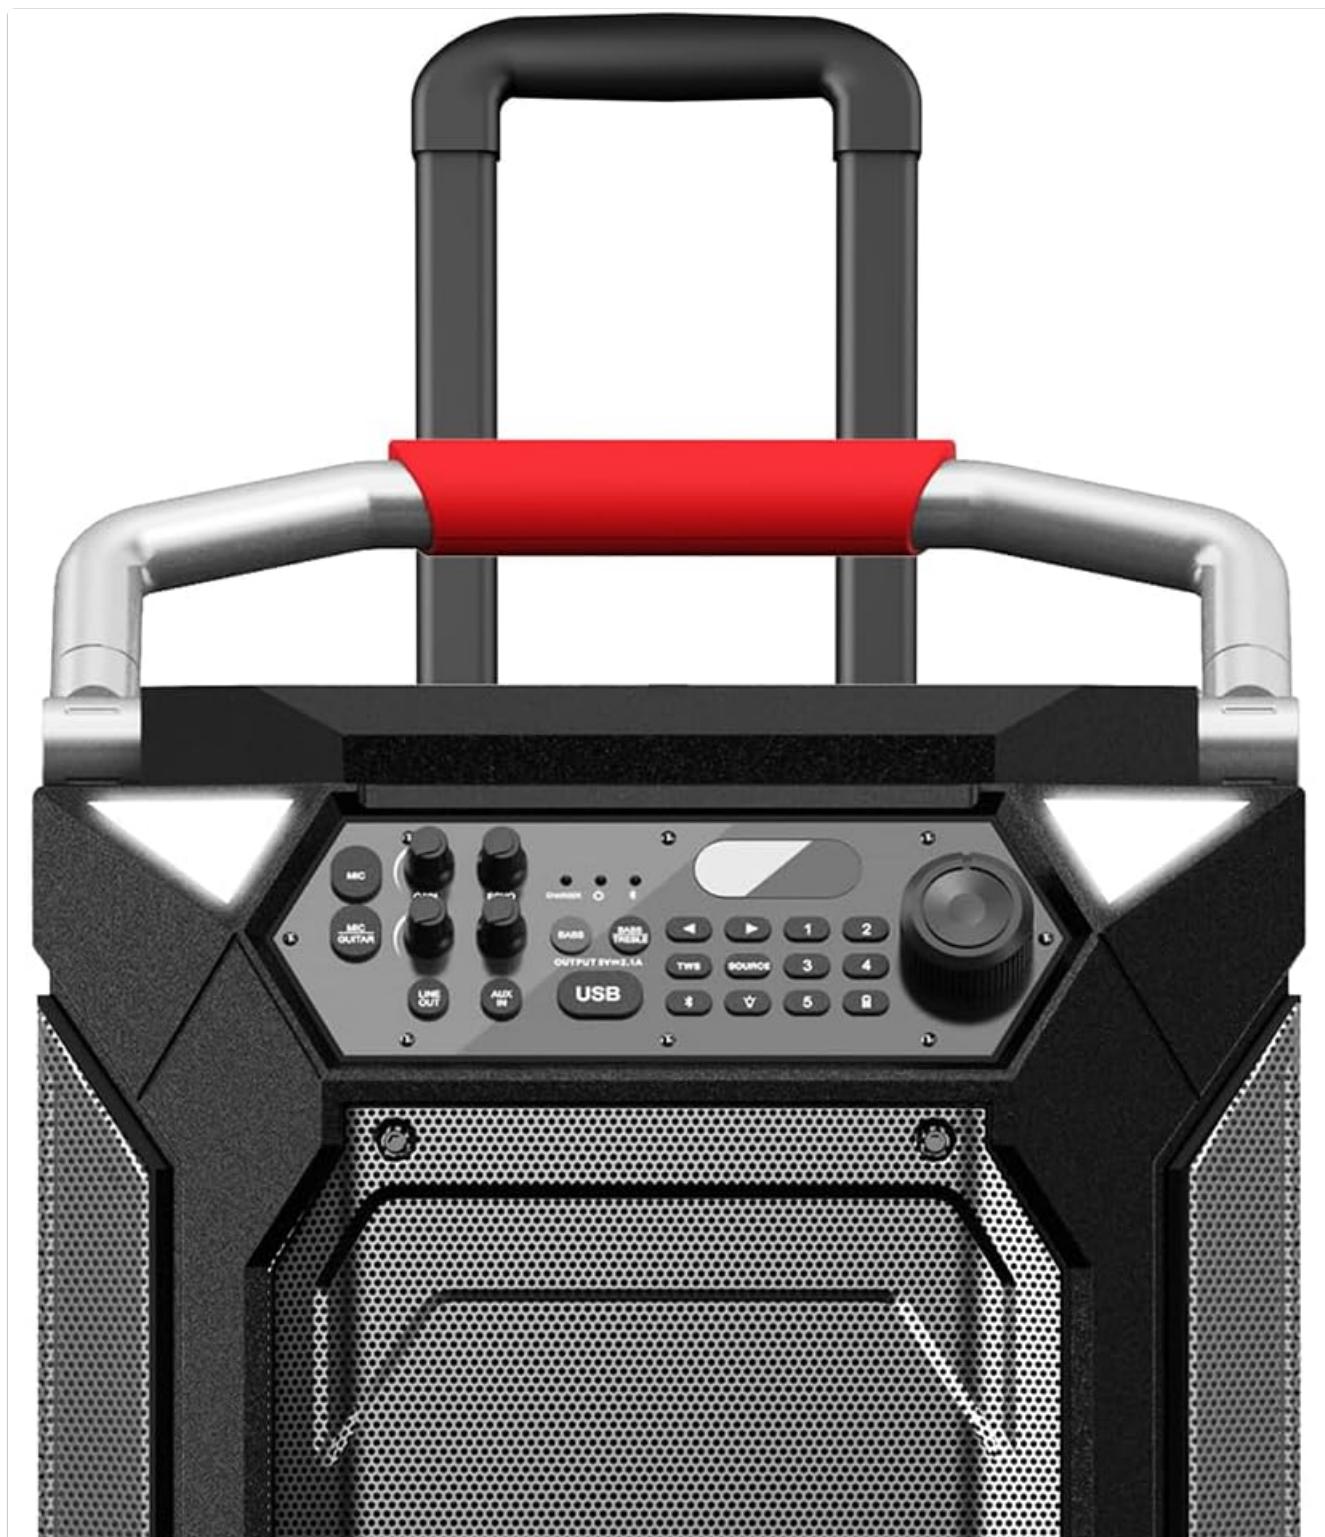




Image: Front view of the speaker, showing the control panel with buttons for power, volume, bass, and other functions.

- **Volume Knob:** Rotate to adjust the master volume.
- **Bass Button:** Press to activate or deactivate bass boost.
- **Bluetooth Button:** Press to enter Bluetooth pairing mode or disconnect.
- **TWS Button:** Press and hold to initiate True Wireless System pairing.
- **Microphone Input:** Connect the included microphone for karaoke or public address (PA) use.
- **USB Port:** For playing music from a USB drive or charging external devices.
- **QI Wireless Charging Pad:** Place compatible devices on this pad for wireless charging.
- **LED Lighting:** Built-in lights to illuminate controls in low-light conditions.

2. Using the Microphone

Plug the microphone into the designated microphone input jack on the control panel. Adjust the microphone volume using the dedicated knob or button (if available) on the control panel. The speaker can be used as a PA system or for karaoke.

3. USB Playback and Charging

Insert a USB flash drive containing audio files into the USB port. The speaker will automatically detect and begin playing compatible audio files. The USB port can also be used to charge small electronic devices.

4. QI Wireless Charging

Place your QI-compatible smartphone or device on the designated wireless charging pad on top of the speaker. Ensure the device is centered for optimal charging. The charging indicator will confirm when charging is active.

5. Portability Features

The Rockin' Roller 360 is designed for easy transport:

- **Telescoping Handle:** Extend the handle for rolling the speaker like luggage.
- **Rugged Wheels:** The oversized 5-inch wheels are designed to navigate various terrains.
- **Adjustable Top Handle:** This handle can be used to position a phone or tablet upright for viewing.



Image: Side view of the speaker, illustrating its large wheels and the extended telescoping handle for easy transport.



Image: The speaker positioned in the back of a truck, showcasing its suitability for outdoor and mobile use.

MAINTENANCE

1. Cleaning

Wipe the exterior of the speaker with a soft, damp cloth. Do not use abrasive cleaners, waxes, or solvents. Ensure the charging port cover is sealed when cleaning to maintain water resistance.

2. Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the speaker regularly, even if not in use, to prevent deep discharge.
- Store the speaker in a cool, dry place when not in use for extended periods.

3. Storage

When storing the speaker for a long time, ensure it is fully charged and stored in a dry environment, away from extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted. Power switch is off.	Charge the speaker fully. Ensure the power switch is in the "ON" position.
No sound from speaker.	Volume is too low. Device not paired. Incorrect input source.	Increase speaker and device volume. Re-pair Bluetooth device. Ensure correct input (Bluetooth, USB) is selected.
Bluetooth device cannot pair.	Speaker not in pairing mode. Device too far. Interference.	Ensure speaker is in Bluetooth pairing mode. Move device closer to speaker. Avoid obstacles and other wireless devices.
TWS pairing fails.	Speakers too far apart. One speaker already paired to a device.	Ensure both speakers are within close proximity. Disconnect any Bluetooth devices from both speakers before initiating TWS pairing.
Microphone not working.	Microphone not fully plugged in. Microphone volume too low.	Ensure the microphone is securely plugged into the input. Adjust the microphone volume control.
Wireless charging not working.	Device not Qi-compatible. Device not centered. Case interference.	Verify your device supports Qi wireless charging. Reposition the device on the charging pad. Remove thick phone cases.

SPECIFICATIONS

Feature	Detail
Model Name	Rockin' Roller 360
Brand	Monster
Speaker Type	Outdoor
Speaker Maximum Output Power	240 Watts
Audio Output Mode	Omnidirectional (360 Degree Sound)
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Battery Life	Up to 100 Hours
Water Resistance	IPX4 Weather Resistant

Feature	Detail
Included Components	QI Wireless charger, USB port, Microphone
Control Method	Touch
Product Dimensions	13.2 x 18.6 x 10.8 inches
Item Weight	31.3 pounds
Material	Plastic
Compatible Devices	Laptop, Smartphone, Tablet, Television

WARRANTY AND SUPPORT

The Monster Rockin' Roller 360 comes with a Limited Warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Monster website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please visit the official Monster support website or contact their customer service department. Contact information can typically be found on the manufacturer's website or in the product packaging.

Online Resources: www.monsterproducts.com

© 2025 Monster. All rights reserved. Specifications are subject to change without notice.

Documents - Monster – Rockin' Roller 360



[\[pdf\] User Manual](#)

drive google file d 1IQ3x6FqUd25ghxqbeE6CNJ TeJvaOpZd view usp sharing Rockin Roller 360 Trilingual |||

BOCINA INALMBRICA PORTTIL PARA INTERIOR/EXTERIOR MNRR360 MANUAL DEL USUARIO Gracias por elegir Monster Felicitaciones por tu bocina inalmbrica Rockin Roller 360 para interior/exterior. Tmate tu tiempo para explorar todas las funciones y utilidades que hemos incorporado en este pro...

lang:es score:33 filesize: 76.18 M page_count: 48 document date: 2024-10-22



[\[pdf\] Quick Start Guide](#)

Monster Rockin Roller 360 QSG LOW HM 10072022 Download Quick Start Guide v 1710282551 cdn shopify s files 1 0319 8789 2355 |||

...

lang:es score:28 filesize: 375.11 K page_count: 1 document date: 2022-10-14



[Monster Rockin' Roller 360 Portable Indoor/Outdoor Wireless Speaker User Manual](#)

User manual for the Monster Rockin' Roller 360 portable indoor/outdoor wireless speaker, covering features, controls, power, audio, troubleshooting, specifications, and warranty.

lang:es score:26 filesize: 2.42 M page_count: 16 document date: 2022-11-28



[Monster Rockin' Roller 360 Portable Wireless Speaker User Manual](#)

Comprehensive user manual for the Monster Rockin' Roller 360 portable indoor/outdoor wireless speaker. Learn about product controls, power and battery features, audio connectivity (Bluetooth, AUX, Guitar/Mic), FM radio, TWS pairing, bass/treble adjustment, and safety instructions.

lang:fr score:25 filesize: 4.08 M page_count: 18 document date: 2022-11-19