

- › [Simply Smart Home](#) /
- › [Simply Smart Home Gallery 10.1" HD WiFi Digital Picture Frame Instruction Manual](#)

Simply Smart Home FGL10CR

Simply Smart Home Gallery 10.1" HD WiFi Digital Picture Frame Instruction Manual

Model: FGL10CR

[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

The Simply Smart Home Gallery 10.1" HD WiFi Digital Picture Frame allows you to instantly share and display your cherished photos and videos with family and friends. Featuring a touch screen, easy setup, and the free PhotoShare app, this frame is designed for seamless memory sharing. Its brilliant HD display with auto brightness and rotation ensures optimal viewing in any orientation. This manual provides detailed instructions for setting up, operating, and maintaining your digital picture frame.

SETUP GUIDE

Follow these steps to quickly set up your Gallery Digital Picture Frame.

1. Unboxing and Initial Power-On

Carefully unbox your digital picture frame. Connect the provided power adapter to the frame and a power outlet. The frame will automatically power on. You can also use the power button located on the top of the frame.

Your browser does not support the video tag.

Video: Unboxing and Setup. This video demonstrates the process of unboxing the Gallery Digital Picture Frame and connecting it to power for the first time. It shows the initial boot-up sequence and the various components included in the box.

2. Physical Placement and Orientation

The frame can be displayed horizontally or vertically using its magnetic stand. The display automatically adjusts photo orientation. It can also be wall-mounted.



Image: Front View. A detailed front view of the Gallery 10.1" HD WiFi Digital Picture Frame, showcasing its chrome finish and the vibrant display of a wedding photo.



Image: Side View. This image provides a side perspective of the digital picture frame, highlighting its thin design and the magnetic stand that allows for versatile placement.



Image: Back View. A view of the back of the frame, detailing the various ports (SD, USB, DC Power) and the keyhole slots for wall mounting.

3. Initial On-Screen Setup

Upon first power-on, the touch screen will guide you through essential settings:

- **Language Selection:** Choose your preferred language.
- **Time Zone and Date/Time:** Set the correct time zone, date, and time.
- **Wi-Fi Connection:** Connect the frame to your home Wi-Fi network. This is crucial for sending and receiving photos/videos.
- **Frame Name:** Assign a name to your frame (e.g., "Living Room Frame").

4. PhotoShare App Download and Connection

Download the free PhotoShare app on your smartphone or tablet from the App Store (iOS) or Google Play Store (Android). Once installed, open the app and follow the on-screen instructions to connect it to your digital picture frame using a unique code displayed on the frame.

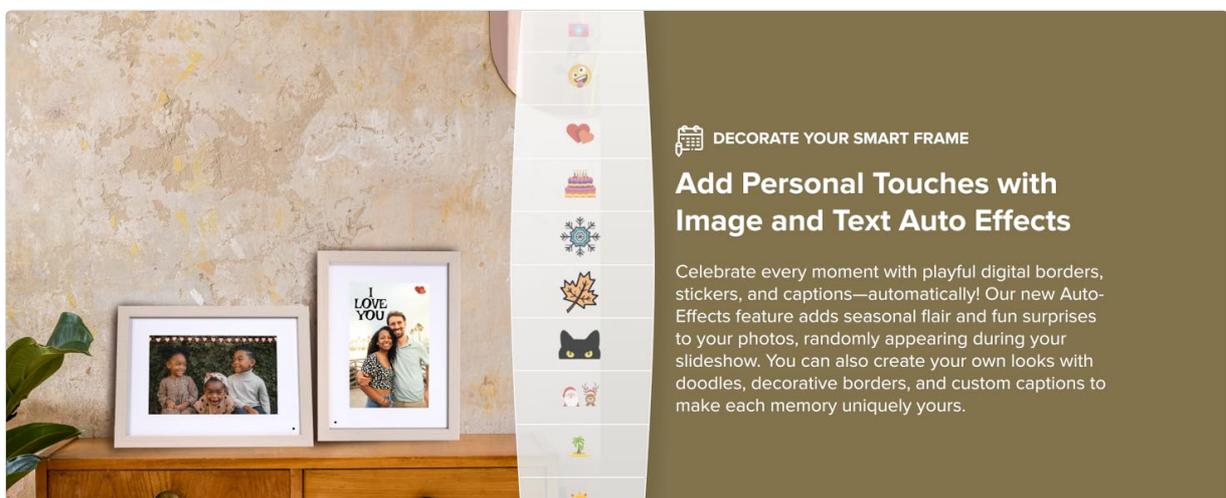


Image: PhotoShare App Interface. This image illustrates the PhotoShare app on a smartphone, detailing the steps to capture, edit, and instantly share photos and videos to the connected digital frame.

5. Inviting Friends and Family

Once your frame is connected, you can invite friends and family to share photos directly to your frame. Generate a unique code from your frame's settings and share it with them. They can then use this code in their PhotoShare app to connect to your frame.

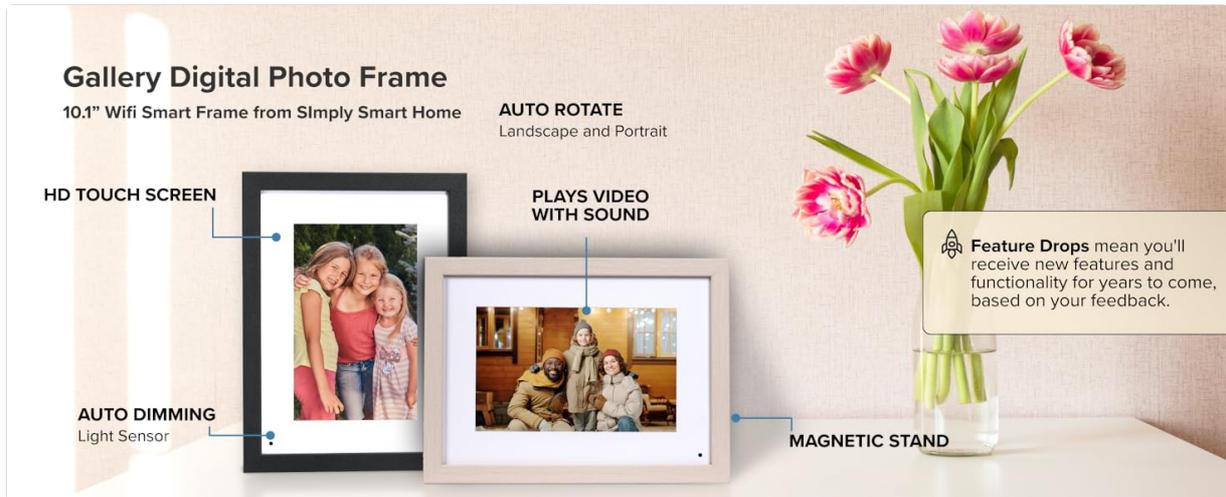


Image: Send to Multiple Frames. This graphic demonstrates the ease of sending photos from a single smartphone to multiple Gallery Digital Picture Frames owned by different family members or friends.

OPERATING YOUR DIGITAL PICTURE FRAME

1. Sending Photos and Videos

Use the PhotoShare app to select photos and videos from your device. You can add captions, stickers, and borders. Send them instantly to your connected frame(s). The frame will emit a chime when new content is received.

Your browser does not support the video tag.

Video: PhotoShare Friends and Family Smart Frame. This video highlights the seamless process of sharing photos and videos from your smartphone to the PhotoShare Smart Frame, emphasizing instant updates for family and friends.

2. Interacting with the Touch Screen

The 10.1" HD touch screen allows for intuitive control:

- **Swiping:** Swipe left or right to navigate through photos and videos.
- **Tapping:** Tap a photo to reveal options like adjusting placement, adding emojis, or removing captions.
- **Adjusting Photos:** If a photo doesn't fit the screen perfectly, you can adjust its placement directly on the frame.
- **Adding Reactions:** Send emojis to photos to let the sender know your thoughts.

3. Slideshow and Display Settings

Customize your viewing experience through the settings menu:

- **Slideshow Timer:** Adjust how long each photo is displayed.
- **Fill Frame:** Choose whether photos fill the entire screen or display with colored gradient bars.
- **Frame Background:** Select background options (blurred, black, colored gradient).
- **Show Captions/Weather:** Toggle display of captions, current time, and weather.
- **Video Playback:** Configure video autoplay settings.

Your browser does not support the video tag.

Video: Gallery Digital Smart Frames play video and photo slideshow. This video demonstrates the frame's ability to play both photos and videos in a dynamic slideshow, highlighting the vibrant display and seamless transitions.

4. Sleep Mode and Auto Dimming

Schedule specific times for the frame to enter and exit sleep mode. The built-in light sensor automatically adjusts screen brightness and can control on/off functions and quiet time.



Image: Auto-Rotate. Auto-Bright. This image highlights the frame's auto-rotate functionality with its magnetic stand and the auto-bright feature controlled by a built-in light sensor for optimal viewing.

5. Local Storage and External Media

The frame can store photos and videos locally. Additionally, you can upload content using an SD card or a USB port for added flexibility.



Image: Compact. Clever. Connected. This image shows the back of the frame, pointing out the SD Port, USB port, and DC Power Adapter, emphasizing its functional design.

MAINTENANCE

To ensure the longevity and optimal performance of your digital picture frame, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and frame. Avoid abrasive cleaners or sprays directly on the screen.
- **Power Cycle:** If the frame becomes unresponsive, unplug it from the power source, wait 10 seconds, and then plug it back in.
- **Software Updates:** Ensure your PhotoShare app and frame firmware are always updated to the latest version for optimal performance and new features.

TROUBLESHOOTING

If you encounter any issues with your digital picture frame, refer to the common problems and solutions below:

- **Frame Not Connecting to Wi-Fi:** Ensure your Wi-Fi password is correct and the frame is within range of your router. Try restarting both the frame and your router.
- **Photos Not Appearing:** Verify that the PhotoShare app is connected to the correct frame. Check your internet connection. Ensure photos are uploaded successfully in the app.
- **Screen Unresponsive:** Perform a power cycle (unplug and replug) the frame. If the issue persists, contact customer support.
- **Frame Freezing/Crashing:** Ensure the frame's firmware is up to date. If the problem continues, try a factory reset (refer to settings for this option) or contact support.

SPECIFICATIONS

Product Dimensions	9.75 x 13 x 0.99 inches
Item Weight	3.01 pounds
Item Model Number	FGL10CR

Brand	Simply Smart Home
Color	Chrome
Resolution	HD (800p)
Compatible Devices	Personal Computer, Smartphone, Tablet
Screen Size	10.1 Inches

WARRANTY & SUPPORT

Your Simply Smart Home Gallery Digital Picture Frame comes with a **1-year free warranty**. Please refer to the product packaging or contact Simply Smart Home customer support for detailed warranty information and service.

Customer Support

For any inquiries or technical assistance, please visit the [Simply Smart Home Store on Amazon](#) or consult the PhotoShare app's help section.