

Karbeen KM-85

Karbeen 7.0 Cu Ft Digital Keypad Safe Box Instruction Manual

Model: KM-85

1. INTRODUCTION

Thank you for choosing the Karbeen 7.0 Cu Ft Digital Keypad Safe Box. This manual provides essential information for the safe and proper use, installation, and maintenance of your new safe. Please read it thoroughly before operation and retain it for future reference.

This safe is designed to protect your valuables with advanced security features, including a digital keypad, dual alarm system, and robust construction. Its spacious interior and double-door design offer versatile storage solutions for various items.

2. PRODUCT FEATURES

- **Extra Large Capacity:** 7.0 cubic feet, external size 14.17"D x 15.75"W x 33.46"H, with a double-door design for separate access.
- **Digital Keypad:** 3D glowing buttons for fast and error-free unlocking.
- **Dual Alarm System:** Activates after three consecutive incorrect passwords or violent vibrations (70-decibel alarm).
- **Mute Function:** Allows silent operation for various scenarios.
- **Deposit Slot:** Convenient front slot for depositing money or coins without opening the main door.
- **Internal LED Lights:** Two LED lights for visibility in dark conditions.
- **Metal Storage Box:** Dedicated compartment for smaller items like ammunition or pistols.
- **Robust Construction:** Made of reinforced low carbon alloy steel with laser-cut micro-slit design, pry-resistant thickened door, and five solid live bolts.
- **Soft Lining:** Interior lined with flannel to protect valuables from scratches.
- **Emergency Power Jack:** Universal USB Type-C port for external power in case of battery depletion.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon unpacking:

- Karbeen 7.0 Cu Ft Digital Keypad Safe Box (x1)

- Emergency Keys (x4)
- Expansion Screws (x6)
- USB Type-C Cable (x1)
- Non-slip Pads (x4)
- User Manual (x1)



Image: Illustration of the Karbeen 7.0 Cu Ft Digital Keypad Safe Box and its included accessories.

4. SETUP

4.1 Unpacking and Initial Inspection

1. Carefully remove the safe from its packaging.
2. Inspect the safe for any signs of damage during transit. If damage is found, contact customer service immediately.
3. Remove all packing materials, including foam corners and protective films.

Your browser does not support the video tag.

Video: A demonstration of the safe box drop test, showcasing its durability during handling and unpacking.

4.2 Battery Installation

The digital keypad requires batteries to function. The battery compartment is located on the inside of the safe door.

1. Open the safe using the emergency key (refer to Section 5.1).
2. Locate the battery compartment on the inside of the door.
3. Insert the required number of AA batteries (not included), ensuring correct polarity.
4. Close the battery compartment cover.

4.3 Setting Your Personal Code

Follow these steps to set your personal digital code:

1. With the safe door open, locate the red reset button on the inside of the door (usually near the battery compartment).
2. Press the reset button. The indicator light on the keypad will illuminate.
3. Enter your desired 3-8 digit code on the keypad.
4. Press the '#' button to confirm. The indicator light will flash, confirming the new code is set.

5. Test the new code with the door open before closing it.

Your browser does not support the video tag.

Video: A guide on how to set up the double-door safe settings, including programming the digital keypad.

5. OPERATING INSTRUCTIONS

5.1 Opening the Safe

There are three ways to open your Karbeen safe:

1. **Using Digital Code:** Enter your 3-8 digit personal code, then press '#' or '**' (depending on model) and turn the knob clockwise within 5 seconds.
2. **Using Emergency Key:** Insert the emergency key into the hidden keyhole, turn it clockwise, and then turn the knob clockwise to open.
3. **Using USB Type-C Cable + Digital Code:** If batteries are dead, connect the USB Type-C cable to the emergency power jack, then enter your digital code and turn the knob.



Image: Visual representation of the three methods to open the safe: digital code, emergency key, and external power with digital code.

5.2 Closing and Locking the Safe

Close the safe door firmly and turn the knob counter-clockwise until the bolts are fully extended and the door is securely locked.

5.3 Using the Deposit Slot


The top compartment features a deposit slot for quick and easy insertion of money or documents without needing to open the entire safe.

2-IN-1 QUICK ACCESS DROP SLOT

You can drop stuff in without opening the safe.



Drop Slot

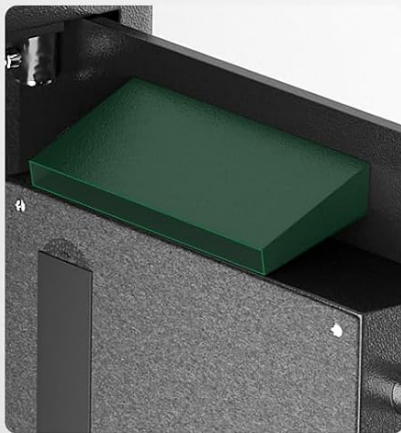

Drop Slot



Image: A demonstration of using the 2-in-1 quick access drop slot to deposit items into the safe.

5.4 Mute Function

To activate or deactivate the mute function, press the '**' button on the keypad. This allows for silent operation when needed.

5.5 Dual Alarm System

The dual alarm system is designed to deter unauthorized access. It will activate if:

- Three consecutive incorrect passwords are entered.
- The safe experiences violent vibrations or tampering.

The alarm sound reaches up to 70 decibels. To silence the alarm, enter the correct digital code or use the emergency

key.



Image: Details of the safe's smart alarm system, including dual alarm activation and mute function.

6. MOUNTING INSTRUCTIONS

The safe is equipped with pre-drilled holes on the back and bottom for secure mounting to a wall or floor. This enhances security and prevents unauthorized removal.

1. Choose a suitable location for mounting, ensuring it is a solid surface.
2. Mark the drilling points through the pre-drilled holes on the safe.
3. Drill pilot holes into the wall or floor using an appropriate drill bit.
4. Align the safe with the drilled holes.
5. Insert the expansion screws through the safe's holes and into the wall/floor.
6. Tighten the screws securely to fasten the safe in place.



Image: Illustration of the safe's multiple anti-theft protections, including pre-drilled holes for wall mounting.

7. MAINTENANCE

- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries promptly when the low battery indicator appears to ensure continuous functionality of the digital keypad.
- **Key Storage:** Store emergency keys in a secure location outside the safe, but easily accessible to you.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Keypad not responding	Dead batteries	Replace batteries or use the USB Type-C cable for emergency power.
Safe won't open with code	Incorrect code entered; batteries low	Ensure correct code is entered; replace batteries; use emergency key.
Alarm sounds unexpectedly	Tampering detected; violent vibration	Enter correct code to silence. Avoid placing safe in unstable locations.
Door not closing properly	Obstruction; misaligned bolts	Check for obstructions; ensure bolts retract fully before closing.

9. SPECIFICATIONS

- **Brand:** Karbeen
- **Model:** KM-85
- **Capacity:** 7.0 Cubic Feet
- **External Dimensions:** 33.46"D x 15.75"W x 14.17"H
- **Lock Type:** Electronic Combination Lock
- **Material:** Low carbon alloy steel
- **Special Features:** Double door safe, Deposit Slot, Dual Alarm, Mute Function, LED Light
- **Mounting Type:** Under Counter Mount (also wall/floor mountable)

• **Water Resistance Level:** Not Water Resistant

PRODUCT SIZE



Image: Detailed product dimensions and internal storage capacity.

ALL STEEL SAFETY DEPOSIT BOX



Anti-collision



Pry resistant



Anti-drilling



Anti-smashing

High-temperature ion

Anti-rust coating

Carbon process steel

Austenitic steel

Low carbon alloy steel

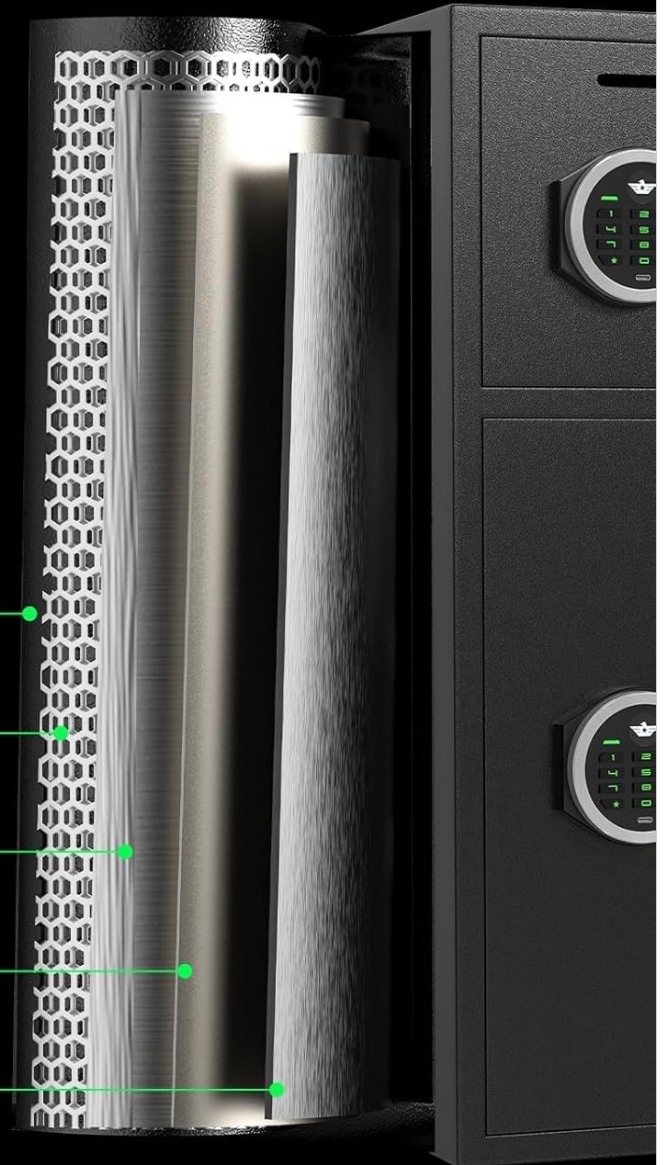


Image: Cross-section view detailing the all-steel safety deposit box construction with multiple layers.

10. WARRANTY & SUPPORT

Karbeen offers a lifetime warranty for this product. For any issues with your safe, please contact our customer service team. We provide 24-hour online customer service, 90-day unconditional returns, and lifetime key matching service.

Contact Information: Refer to the contact details provided in your purchase documentation or visit the official Karbeen website.



Image: Karbeen customer service representatives ready to assist.

© 2025 Karbeen. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

