

[manuals.plus](#) /› [mooas](#) /› **mooas Flatwood 12-inch Silent Wall Clock User Manual****mooas 102676**

# **mooas Flatwood 12-inch Silent Wall Clock User Manual**

Model: 102676

## **INTRODUCTION**

Thank you for choosing the mooas Flatwood 12-inch Silent Wall Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Designed for clarity and quiet operation, this clock features a non-ticking sweep movement and a slim profile, making it suitable for various indoor environments such as living rooms, bedrooms, kitchens, offices, and schools.

Key features include a silent, non-ticking sweep movement for undisturbed environments, a slim 0.16-inch thick design, and an easy-to-read dial with large numbers. The clock is glass-free for enhanced safety and features a handmade triple coating for durability and a soft curved design for aesthetic integration into any space.



Image: The mooas Flatwood 12-inch Silent Wall Clock in Simple White, showcasing its minimalist design and clear face.

## SETUP INSTRUCTIONS

### 1. Unpacking and Inspection

Carefully remove the clock from its packaging. Inspect the clock for any visible damage. Ensure all protective coverings are removed from the clock hands.



Image: Clock hands protected by a clear plastic cover during shipping. This cover must be removed before use to prevent misalignment.

## 2. Battery Installation

1. Locate the battery compartment on the back of the clock mechanism.
2. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings in the compartment. **Note: Battery is not included.**



Image: A hand inserting an AA battery into the battery compartment on the rear of the clock. This illustrates the correct orientation for battery placement.

### 3. Setting the Time

Use the small adjustment wheel located on the back of the clock mechanism to set the correct time. Rotate the wheel until the hour and minute hands display the desired time.

### 4. Mounting the Clock

The mooas Flatwood Wall Clock is lightweight and designed for easy wall mounting. Use a suitable hook or nail (not included) in your desired location. Ensure the mounting point is secure to prevent the clock from falling.

# Light Weight

Easy to install wherever you want



Image: A person's hand gently holding the clock against a wall, highlighting its lightweight design and ease of placement.

## OPERATING INSTRUCTIONS

Once the battery is installed and the time is set, the clock will begin to operate automatically. The silent, non-ticking sweep movement ensures accurate timekeeping without any audible ticking sounds, making it ideal for quiet environments.

# Silent Wall Clock

Sweep movement



Image: The mooas Flatwood Wall Clock mounted on a white wall, emphasizing its silent sweep movement and minimalist design.

## Reading the Time

The clock features a simple dial with large, clear numbers and distinct hour and minute hands for easy readability from a distance.

<b>Material</b>	MDF, Aluminum
<b>Weight</b>	0.7 lbs
<b>Size</b>	Ø12 x 1.4 inch (D x H)
<b>Power</b>	AA Battery x 1 pc (Not included)



Image: A close-up view of the clock face, highlighting the large, clear numbers and simple design for enhanced readability.

## MAINTENANCE

### Battery Replacement

Replace the AA battery annually or when the clock begins to lose time. Always use a fresh, high-quality AA battery for optimal performance.

### Cleaning

To clean the clock, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the finish. Since the clock is glass-free, direct cleaning of the dial and hands is possible.

# Glass-Free

Glass-free interior clock



Image: A side view of the clock, illustrating its glass-free design which simplifies cleaning and maintenance of the dial and hands.

## Clock Hand Adjustment

In rare cases, the clock hands may become slightly misaligned during transit or handling. If this occurs, gently adjust the hands by hand to their correct positions. Exercise care to avoid bending or damaging the hands.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock is not running or stops intermittently.	<ul style="list-style-type: none"><li>Battery is depleted or incorrectly installed.</li><li>Clock hands are obstructed or misaligned.</li></ul>	<ul style="list-style-type: none"><li>Replace with a fresh AA battery, ensuring correct polarity.</li><li>Gently check if the hands are touching each other or the clock face. Carefully adjust them if necessary.</li></ul>

Problem	Possible Cause	Solution
Clock is losing or gaining time.	<ul style="list-style-type: none"> <li>Battery is low.</li> <li>Movement mechanism issue.</li> </ul>	<ul style="list-style-type: none"> <li>Replace with a fresh AA battery.</li> <li>If the problem persists after battery replacement, contact customer support.</li> </ul>

## PRODUCT SPECIFICATIONS

Feature	Detail
Brand	mooas
Model Number	102676
Color	Simple White
Display Type	Analog
Special Feature	Silent Clock (Non-Ticking Sweep Movement)
Product Dimensions	11.7"W x 1.38"H (Diameter approx. 12 inches, Thickness 0.16 inches)
Power Source	Battery Powered (1 x AA battery, not included)
Room Type	Bedroom, Dining Room, Office, Kitchen, Kids' room, Living Room
Shape	Round
Indoor/Outdoor Usage	Indoor
Frame Material	Plastic
Item Weight	12.8 ounces
Mounting Type	Wall Mount

## WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your mooas Flatwood Wall Clock, please contact mooas customer service. You can find contact information and additional resources on the official mooas website or through your purchase platform.

Please retain your proof of purchase for any warranty claims. Specific warranty details may vary by region and retailer. For more information, visit the [mooas Store on Amazon](#).