

K&F CONCEPT BS11

K&F CONCEPT BS11 Camera Sling Bag Instruction Manual

Model: BS11

1. PRODUCT OVERVIEW

The K&F CONCEPT BS11 Camera Sling Bag is a versatile and compact 10-liter bag designed for photographers. It offers secure storage for DSLR/SLR cameras and accessories, featuring an anti-theft design and comfortable carrying options. Its thoughtful internal organization allows for both photography gear and daily essentials.

Key Features:

- **Capacity:** 10 liters, with internal dimensions for main compartment: 17 x 12 x 25 cm (L x W x H) and top compartment: 17 x 10 x 13 cm (L x W x H).
- **Dual Use:** Suitable for photography gear or daily personal items.
- **Quick Side Access:** 270° side opening with a security clasp for fast camera retrieval.
- **Lightweight Design:** Weighs approximately 490g (without packaging).
- **Comfortable Carry:** Padded air-mesh back panel and adjustable shoulder straps (50-100 cm) for breathability and comfort.
- **Water-Resistant Material:** Constructed from durable polyester.



Figure 1: Front view of the K&F CONCEPT BS11 Camera Sling Bag.

2. SETUP

2.1 Configuring Internal Dividers

The BS11 bag features removable padded dividers to customize the internal compartments according to your gear. This allows for flexible organization of cameras, lenses, and other accessories.

1. Open the main compartment zipper.
2. Adjust or remove the hook-and-loop fastened dividers to create compartments that fit your camera body, lenses, and other items securely.
3. Ensure all gear is snugly fitted to prevent movement during transport.

Removable padded dividers



Dividers used



Use **3** Divider

Host Warehouse Collocation Reference

Option 1



Ni*** Z63

+



Z2470

Option 2



FUJIF*** XH2

+



XF1680

+



XF56

Figure 2: Illustration of removable padded dividers and potential gear configurations.

2.2 Adjusting Shoulder Strap

The shoulder strap is adjustable to ensure a comfortable and secure fit for various body types and carrying preferences.

1. Locate the adjustment buckle on the shoulder strap.
2. Lengthen or shorten the strap to achieve a comfortable carrying position, whether across the chest or over one shoulder.
3. The strap length can be adjusted from 50 cm to 100 cm.

Correas de fijación triangulares



Figure 3: Details of the adjustable shoulder strap and stabilization features.

3. OPERATING INSTRUCTIONS

3.1 Carrying the Bag

The BS11 sling bag is designed for multiple carrying styles, offering flexibility and comfort for different activities.

- **Sling Style:** Wear the bag across your chest or back for secure and balanced carrying.
- **Shoulder Bag Style:** Carry over one shoulder for quick access and lighter loads.



Figure 4: Various carrying methods for the K&F CONCEPT BS11 Sling Bag.

3.2 Accessing Your Gear

The bag features a 270° side opening for rapid access to your camera, ensuring you don't miss a shot.

1. Rotate the bag from your back to your front while keeping the strap on your shoulder.
2. Unzip the side compartment. The security clasp prevents accidental opening.
3. Retrieve your camera or lens quickly.
4. Securely close the zipper and engage the security clasp after use.

270° Side **Large Opening** Design

Easy Access



Figure 5: Demonstrating the 270° side opening for quick camera access.

3.3 Utilizing Storage Compartments

The BS11 offers multiple compartments for organized storage:

- **Main Compartment:** Configurable with dividers for camera bodies and lenses.
- **Top Compartment:** Ideal for personal items like phones, chargers, data cables, or small accessories.
- **External Pockets:** For quick-access items such as water bottles or small notebooks.



División inteligente

-  **Almacenamiento de equipos**
Compartimentos superior e inferior
espacio de almacenamiento compacto
-  **Viaje diario**
Compartimentos integrados
más espacio de almacenamiento

Figure 6: Smart internal division for efficient storage of photography gear and personal items.

4. MAINTENANCE

4.1 Cleaning Instructions

To maintain the quality and longevity of your K&F CONCEPT BS11 Camera Sling Bag, follow these cleaning guidelines:

- **Hand Wash Only:** Do not machine wash, bleach, or tumble dry.
- Use a soft cloth dampened with mild soap and cool water to gently clean the exterior and interior surfaces.
- For stubborn stains, use a specialized fabric cleaner suitable for polyester, testing on an inconspicuous area first.
- Rinse thoroughly with a clean, damp cloth to remove any soap residue.
- Air dry the bag completely in a shaded, well-ventilated area. Avoid direct sunlight or heat sources, which can damage the material.

4.2 Water Resistance

The bag is made from water-resistant polyester material, offering protection against light rain and splashes. However, it is not fully waterproof. For heavy rain or prolonged exposure to water, additional rain covers are recommended to protect your sensitive electronic equipment.

5. TROUBLESHOOTING

5.1 Bag Feels Too Small for My Gear

- **Check Dimensions:** Verify your camera and lens dimensions against the bag's internal capacity (Main compartment: 17 x 12 x 25 cm; Top compartment: 17 x 10 x 13 cm).
- **Reconfigure Dividers:** Experiment with different divider arrangements to optimize space. Sometimes removing one or two dividers can create more usable space for larger items.
- **Consider Gear Selection:** The 10L capacity is designed for a mirrorless camera with 1-2 lenses or a compact DSLR. For larger professional setups, a larger bag might be necessary.

5.2 Shoulder Strap Discomfort

- **Adjust Length:** Ensure the shoulder strap is adjusted to an appropriate length for your body and carrying style. A strap that is too long or too short can cause discomfort.
- **Even Weight Distribution:** Try to distribute the weight of your gear evenly within the bag.
- **Use Sling Style:** Carrying the bag in a sling style (across the chest/back) often provides better weight distribution

and comfort than a single shoulder carry, especially for longer periods.

5.3 Zippers or Clasps Sticking

- **Clear Obstructions:** Check for any fabric, threads, or debris caught in the zipper teeth or clasp mechanism.
- **Lubrication:** For zippers, a small amount of zipper lubricant (e.g., beeswax, graphite pencil lead) can help smooth operation. Apply sparingly and wipe off excess.
- **Gentle Operation:** Always operate zippers and clasps smoothly and avoid forcing them.

6. SPECIFICATIONS

Feature	Detail
Brand	K&F CONCEPT
Model Name	BS11 (Mochilas Para Cámaras)
Model Number	KF13.141JP / KF13.157JP
Color	A-negro (Black)
Material	Polyester (Exterior, Lining)
Volume Capacity	10 Liters
External Dimensions (D x W x H)	12 x 17 x 38 cm
Weight	490 g
Main Compartment Dimensions	17 x 12 x 25 cm (L x W x H)
Top Compartment Dimensions	17 x 10 x 13 cm (L x W x H)
Shoulder Strap Length	Adjustable, 50-100 cm
Water Resistance Level	Water Resistant
Number of Pockets	5
Closure Type	Zipper
Care Instructions	Hand Wash

Size Information



Figure 7: Detailed size and weight information for the BS11 Sling Bag.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Specific warranty details for the K&F CONCEPT BS11 Camera Sling Bag are not provided in this manual. For information regarding product warranty, please refer to the product packaging, the official K&F CONCEPT website, or contact K&F CONCEPT customer support directly.

7.2 Customer Support

Should you have any questions, require assistance, or need to report an issue with your K&F CONCEPT BS11 Camera Sling Bag, please contact K&F CONCEPT customer support through their official channels. You can typically find contact information on the brand's official website or through the retailer where the product was purchased.

For more information about K&F CONCEPT products, visit their official store: [K&F CONCEPT Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question