



[Manuals.plus](#) /

> [TopMade](#) /

> TopMade MF60 MagSafe Wallet with Find My - Instruction Manual

TopMade MF60

TopMade MF60 MagSafe Wallet with Find My - Instruction Manual

Model: MF60

INTRODUCTION

This manual provides instructions for the TopMade MF60 MagSafe Wallet. This product is designed to securely attach to compatible iPhone models, store essential cards, function as an adjustable stand, and integrate with Apple's Find My network for location tracking. It also features RFID blocking technology for card security.



Image: TopMade MagSafe Wallet attached to an iPhone, displaying the Apple Find My interface with location and sound options.

SETUP

1. Initial Charging

The wallet contains a rechargeable lithium-ion battery. To charge, place the wallet on a compatible wireless charger. No special charging cable is required. A full charge can last up to 6 months.



Image: The wallet placed on a wireless charging pad, indicating wireless charging capability.

2. Pairing with Apple Find My

The TopMade MF60 wallet integrates with Apple's Find My network. Follow these steps to pair your wallet:

1. **Enable Two-Factor Authentication:** Ensure Two-Factor Authentication is enabled for your Apple ID on your iPhone. (Settings > [Your Name] > Password & Security > Two-Factor Authentication).
2. **Enable Find My and Bluetooth:** On your iPhone, navigate to Settings, then tap on your name, select 'Find My', and ensure 'Find My iPhone' is enabled. Also, ensure Bluetooth is turned on in your iPhone's Control Center or Settings.
3. **Activate Wallet:** Short press the power button on the wallet once to turn it on.
4. **Add Item in Find My App:** Open the 'Find My' app on your iPhone. Tap the '+' icon at the bottom of the screen, then select 'Add Other Item'. Follow the on-screen prompts to complete the pairing process.



Image: A visual guide illustrating the four steps to pair the wallet with the Apple Find My app.

OPERATING INSTRUCTIONS

1. Attaching to iPhone (MagSafe)

Align the wallet with the MagSafe area on the back of your compatible iPhone or MagSafe-compatible case. The strong built-in magnets will securely attach the wallet. The magnetic force is designed to be robust, providing a firm hold.

Note: A caseless iPhone or a MagSafe-compatible case is required for optimal magnetic attachment.



Image: A diagram illustrating the magnetic strength of the wallet compared to others, highlighting its secure attachment.

2. Card Storage and Access

The wallet features multiple card slots designed to hold 1-9 cards. Utilize the individual card slots and the thumb slot for quick access to frequently used cards.

- **Main Slots:** Can hold up to 6 cards.
- **Thumb Slot:** Provides easy access to a single card.
- **ID Window:** For displaying identification cards.
- **Additional Slots:** Two internal slots for extra cards.

Smart Card Storage

Easily to hold 9 cards without any bulk.



Max 6 Cards



Thumb Slot



2 Cards

ID Window

Image: Detailed view of the wallet's card storage features, including the thumb slot and ID window.



Image: A user accessing a card from the wallet using the dedicated thumb slot.

3. Using the Adjustable Stand

The wallet features an adjustable hinge that allows it to function as a phone stand. It supports both portrait and landscape orientations with a multi-angle adjustment range of 15-170 degrees. This allows for comfortable viewing during various activities.

Adjustable Phone Stand

Any angle adjustment & perfect viewing

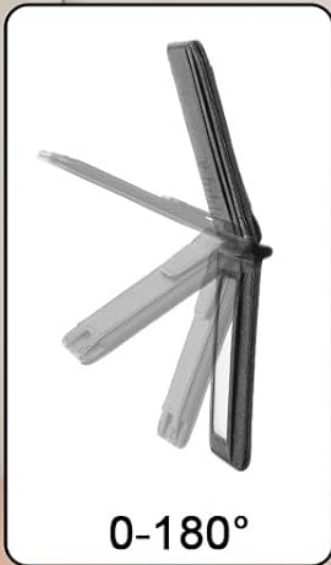


Image: The wallet used as an adjustable stand, supporting an iPhone in both portrait and landscape orientations.



Image: A user engaged in a video call, with their iPhone propped up by the wallet's stand feature.

4. Find My Features

Once paired, the wallet leverages the Apple Find My network for various tracking functionalities:

- **Real-time Location:** View the wallet's last known location on a map within the Find My app.
- **Play Sound:** If the wallet is nearby, you can play a loud sound (up to 100dB) from the Find My app to help locate it.
- **Left Behind Notifications:** Receive an alert on your iPhone if you leave your wallet behind at an unfamiliar location.
- **Lost Mode:** Mark your wallet as lost in the Find My app. This can display a message and contact information to anyone who finds it.

Left-Behind Remind



TIME SENSITIVE

3m ago

"TopMade Wallet" left behind
This item is no longer detected near you.
It was last seen near 168 Room

Play Sound to Find Your Wallet

Bluetooth rang: 160ft/50m



Image: Visual representation of the 'Left-Behind Remind' notification and the 'Play Sound' function within the Find My application.

Compatibility



Image: A user activating the 'Play Sound' feature in the Find My app to locate their wallet within a home environment.

5. RFID Blocking

The wallet incorporates special lining to protect your credit cards and other RFID-enabled cards from unauthorized scanning and demagnetization. This helps safeguard your personal information.



RFID Blocking

Special lining protects your magnetic-stripe cards



Image: An illustration demonstrating the RFID blocking functionality, preventing unauthorized data scanning from cards stored in the wallet.

MAINTENANCE

- **Cleaning:** Wipe the wallet with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.

- **Storage:** Store the wallet in a cool, dry place when not in use.
- **Battery Care:** Recharge the wallet periodically, even if not frequently used, to maintain battery health.

TROUBLESHOOTING

Issue: Wallet not pairing with Find My.

Solution:

- Ensure Two-Factor Authentication is enabled for your Apple ID.
- Verify that Find My and Bluetooth are enabled on your iPhone.
- Make sure the wallet is turned on (short press the power button).
- Try restarting your iPhone and the wallet, then attempt pairing again.
- Ensure your iPhone is running a compatible iOS version.

Issue: Weak magnetic attachment.

Solution:

- Ensure you are using a MagSafe-compatible iPhone model (iPhone 12 series or later) or a MagSafe-compatible case.
- Remove any non-MagSafe cases or accessories that might interfere with the magnetic connection.
- Clean the MagSafe area on your iPhone and the wallet to ensure no debris is obstructing the connection.

Issue: Find My sound alert is not audible.

Solution:

- Ensure the wallet's battery is charged.
- Check if the wallet is within the Bluetooth range (approximately 50m/160ft) of your iPhone.
- Verify that the volume on your iPhone is not muted or too low.

SPECIFICATIONS

Model Number	MF60
Dimensions	4.06 x 2.65 x 0.67 inches (10.3 x 6.5 x 1.7 cm)
Item Weight	4.2 ounces
Battery Type	Rechargeable Lithium-Ion
Battery Life	Up to 6 months on a single charge
Magnetic Force	Up to 4,000g
Bluetooth Range	Up to 50 meters (160 feet)
Alarm Sound Level	100dB

Card Capacity	1-9 cards
Compatibility	iPhone 12 series and later (including 17/16/15/14/13 series), official magnetic cases, and other MagSafe-compatible cases. Not compatible with Android phones.



Image: A visual guide detailing the compatibility of the wallet with various iPhone models and MagSafe cases.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact TopMade customer service directly. Contact details can typically be found on the manufacturer's official website or through your purchase platform.