

THINKYA Y11

THINKYA Y11 Portable CD Player Instruction Manual

Model: Y11 | Brand: THINKYA

1. PRODUCT OVERVIEW

The THINKYA Y11 Portable CD Player is a versatile audio device designed for home use, blending retro aesthetics with modern functionality. It supports multiple playback modes including CD, Bluetooth, USB, AUX, and Optical. Equipped with dual HiFi speakers and a remote control, it offers a rich audio experience. Its built-in 2600mAh rechargeable battery ensures portability, allowing for extended listening sessions. The player also features an RGB colorful light show for enhanced ambiance and a 3-point silicone shockproof design for stable playback.



Image 1.1: The THINKYA Y11 Portable CD Player in white, shown with its remote control. This image highlights the device's compact design and the included remote for convenient operation.

2. PACKAGE CONTENTS

Please check the package carefully to ensure all items are present:

- Portable CD Player x 1
- CD Player Remote Control x 1
- CD Player USB-C Cable x 1
- CD Player 3.5mm AUX Cable x 1
- CD Player Manual x 1

3. SETUP

3.1 Initial Charging

Before first use, it is recommended to fully charge the CD player. Connect the provided USB-C cable to the DC IN 5V port on the back of the player and the other end to a compatible USB power adapter (not included). The battery indicator on the display will show charging status.

3.2 Remote Control Battery Installation

The remote control requires two AAA batteries (not included). Open the battery compartment on the back of the remote and insert the batteries, ensuring correct polarity.

3.3 Removing CD Protection Card

Before playing a CD for the first time, locate and remove the protective card from the CD tray. This card prevents damage during transit.



Image 3.1: A person holding the remote control, demonstrating its use with the CD player in the background. The remote allows for convenient control

from a distance.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Locate the ON/OFF switch on the back of the unit. Slide it to the 'ON' position to power on the device. Slide it to 'OFF' to power off.

4.2 CD Playback

1. Open the top cover of the CD player.
2. Carefully place a CD onto the spindle, ensuring it is seated correctly.
3. Close the top cover.
4. Press the 'MODE' button on the player or remote until 'CD' mode is selected.
5. The CD player will automatically begin playing. Use the Play/Pause, Next/Previous, and Volume buttons on the player or remote to control playback.

HIFI Stereo Sound

**Built-in 2.0 stereo speakers,
1:1 high resolution restores sound details**

CD/CD-R/CD-RW



Image 4.1: The CD player showcasing its built-in 2.0 stereo speakers and the CD playback area. It emphasizes high-resolution sound restoration and playback options like Repeat All, Random, In Order, and Repeat 1.

4.3 Bluetooth Connection (Two-Way)

The THINKYA Y11 supports both Bluetooth input (as a receiver) and Bluetooth output (as a transmitter).

4.3.1 Bluetooth Receiver Mode (Connect your phone/tablet to the CD player)

1. Press the 'MODE' button on the player or remote until 'BT' mode is selected. The display will show 'b' and the Bluetooth indicator will flash, indicating it's in pairing mode.
2. On your mobile device (phone, tablet, computer), enable Bluetooth and search for available devices.
3. Select 'THINKYA Y11' from the list. Once connected, the Bluetooth indicator on the player will stop flashing.
4. You can now play audio from your device through the CD player's speakers.

4.3.2 Bluetooth Transmitter Mode (Connect the CD player to Bluetooth headphones/speakers)

1. Ensure your Bluetooth headphones or speaker are in pairing mode.
2. While in CD, USB, AUX, or Optical mode, press and hold the 'BT' button on the remote control (or the corresponding button

on the unit if available) to initiate Bluetooth transmission pairing. The Bluetooth indicator will flash rapidly.

3. The CD player will automatically search for and connect to nearby Bluetooth audio devices. Once connected, audio will be streamed to your external Bluetooth device.



Image 4.2: A visual representation of the two-way Bluetooth connection capability. On the left, the CD player acts as a transmitter to headphones/speakers. On the right, it acts as a receiver for a smartphone.

4.4 USB Playback

1. Insert a USB flash drive containing MP3/WMA/WAV/APE/FLAC audio files into the USB port on the back of the player.
2. Press the 'MODE' button until 'USB' mode is selected.
3. The player will automatically detect and begin playing audio files from the USB drive.



Image 4.3: A close-up view of the rear panel showing a USB flash drive inserted into the USB port, indicating its use for playing audio files.

4.5 AUX Mode

Connect an external audio device (e.g., smartphone, MP3 player) to the AUX port on the back of the CD player using the provided 3.5mm AUX cable. Press the 'MODE' button until 'AUX' mode is selected. Audio from your external device will now play through

the CD player's speakers.

4.6 Optical Mode

For high-quality digital audio output, connect the CD player to a compatible audio receiver, soundbar, or TV using an optical audio cable (not included) via the SPDIF port on the back. This mode is for outputting audio from the CD player to an external system.

4.7 Using the Remote Control

The remote control provides full functionality for the CD player:

- **Power Button:** Turn the unit ON/OFF.
- **Volume +/-:** Adjust the master volume.
- **Play/Pause:** Start or pause playback.
- **Next/Previous:** Skip to the next or previous track/chapter.
- **Stop:** Stop playback.
- **Mode:** Switch between CD, Bluetooth, USB, AUX, and Optical modes.
- **Repeat:** Cycle through repeat options (e.g., Repeat One, Repeat All).
- **EQ:** Change equalizer presets.
- **BASS +/-:** Adjust bass levels.
- **TREBLE +/-:** Adjust treble levels.
- **BT:** Directly switch to Bluetooth mode or initiate Bluetooth pairing (long press for transmitter mode).

5. KEY FEATURES

- **Multi-Functional Playback:** Supports CD Play, Bluetooth, USB, AUX, and Optical modes. Compatible with CD, CD-R, CD-DA, MP3, WMA, WAV, APE, FLAC formats.
- **Dual HiFi Stereo Speakers:** Built-in 2.0 stereo speakers provide high-resolution sound, filling the room with clear audio.
- **Two-Way Bluetooth:** Functions as both a Bluetooth transmitter (output to headphones/speakers) and a Bluetooth receiver (input from phone/tablet).
- **Rechargeable & Portable:** Features a built-in 2600mAh USB-C fast rechargeable battery, offering approximately 4-8 hours of playback time. Its compact size (8.27x6.69x3.03 inches) and light weight (2.2 lbs) make it easy to carry.



Image 5.1: The portable CD player shown outdoors with a group of friends, highlighting its portability and rechargeable battery for on-the-go use.

- **RGB Colorful Light Show:** Offers 10 different color-changing themes, including colorful lights, automatic change, white light, blue light, and yellow light, controllable via remote.
- **Optical Digital Audio Output:** Allows for high-fidelity digital audio output to external devices like TVs, power amplifiers, or speakers with optical input interfaces.
- **3-Point Silicone Shockproof Design:** Effectively reduces external vibrations, enhancing stability and preventing disc skipping during playback.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the CD lens, use a specialized CD lens cleaner. Do not use abrasive cleaners or solvents.
- **Storage:** Store the player in a cool, dry place away from direct sunlight, high temperatures, and humidity.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Disc Handling:** Always handle CDs by their edges to avoid fingerprints and scratches. Store discs in their cases when not in use.

use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Battery is low or depleted. Power switch is OFF.	Charge the player using the USB-C cable. Ensure the power switch on the back is set to 'ON'.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly. Protection card not removed.	Clean the CD with a soft cloth. Ensure the CD is placed correctly on the spindle. Remove the CD protection card if it's the first use.
No sound from speakers.	Volume is too low or muted. Incorrect mode selected. External device not connected properly (AUX/Optical).	Increase volume. Check if muted. Ensure correct mode (CD, BT, USB, AUX, Optical) is selected. Verify cable connections for AUX/Optical.
Bluetooth pairing fails.	Device is too far. Bluetooth not enabled on external device. Player not in pairing mode.	Ensure devices are within 10 meters. Enable Bluetooth on your external device. Put the CD player into Bluetooth pairing mode (BT mode for receiver, long press BT for transmitter).
Remote control not working.	Batteries are dead or inserted incorrectly. Obstruction between remote and player.	Replace AAA batteries, ensuring correct polarity. Remove any obstructions. Ensure direct line of sight.

8. SPECIFICATIONS

Feature	Detail
Model	Y11
Input Voltage	5V-2A
Battery Capacity	2600 mAh
Charging Time	Approx. 3 hours
Playback Time	Approx. 4-8 hours
Portable Size (L x W x H)	8.27 x 6.69 x 3.03 inches (21 x 17 x 7.7 cm)
Weight	2.2 lbs (1 kg)
Speaker	4Ω-2*2W (Independent Sound Cavity)
Supported CD Formats	CD-DA, CD-R, MP3
Supported USB Formats	MP3/WMA/WAV/APE/FLAC
Interfaces	3.5mm Audio (AUX), USB, Optical (SPDIF), Headphone, USB-C Charge

Feature	Detail
Player Modes	CD Play, Bluetooth, USB, AUX, Optical

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official THINKYA website. Keep your purchase receipt for warranty claims.

© 2024 THINKYA. All rights reserved.