

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [THINKYA](#) /

› [THINKYA Y11 Portable Retro CD Bluetooth Player User Manual](#)

THINKYA Y11

THINKYA Y11 Portable Retro CD Bluetooth Player

Model: Y11 | Brand: THINKYA

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your THINKYA Y11 Portable Retro CD Bluetooth Player. This versatile device supports multiple audio playback modes including CD, Bluetooth, USB, AUX, and Optical. It features dual HiFi speakers, a rechargeable battery, and an RGB light show, all controllable via a convenient remote.

PACKAGE CONTENTS

Please check the box for the following items:

- THINKYA Y11 Portable CD Player
- Remote Control (batteries not included)
- USB Charging Cable
- AUX Audio Cable
- User Manual

Package Include



Image: Contents of the THINKYA Y11 package, showing the player, remote control, USB cable, AUX cable, and user manual.

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your THINKYA Y11 CD Player.



Image: Labeled diagram of the THINKYA Y11 CD Player, indicating the Ambient Light, Previous/Next buttons, Play/Pause, Volume Adjustment, Power Switch, Power Supply Port, USB, Headphone, Audio, and Optical ports.

- **Ambient Light:** Multi-color LED indicator.
- **Pre/Next Buttons:** Navigate tracks or adjust settings.
- **Play/Pause Button:** Control playback.
- **Volume Adjustment Knob:** Adjust audio output level.
- **Power Switch:** Turn the device on or off.
- **Power Supply Port:** USB-C input for charging and power.
- **USB Port:** For USB drive playback.
- **Headphone Jack:** 3.5mm output for private listening.
- **AUX Port:** 3.5mm input for external audio sources.
- **Optical Port:** Digital audio output.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Charging the Battery:** Connect the provided USB charging cable to the Power Supply Port on the back of the player and to a USB power adapter (not included). The built-in 2600mAh battery provides 8-10 hours of playback on a full charge. Charging time is approximately 3.5 hours.
3. **Power On/Off:** Flip the Power Switch on the back of the unit to turn the player on or off.
4. **Remote Control Setup:** Insert 2 AAA batteries (not included) into the remote control.



Image: Visual representation of the THINKYA Y11's 2600mAh battery, 4-6 hours playback time, and 3.5 hours charging time.

OPERATING INSTRUCTIONS

1. CD Playback

1. Open the transparent lid of the CD player.
2. Carefully place a CD (CD, CD-R, CD-DA, MP3, WMA, WAV, APE, FLAC compatible) onto the spindle, ensuring it is seated correctly.
3. Close the lid. The player will automatically detect the CD and begin playback.
4. Use the Play/Pause button, Pre/Next buttons, and Volume Adjustment knob on the unit or remote control to manage playback.
5. **Repeat Modes:** Use the remote control to cycle through 'Repeat All', 'Random', 'In Order', and 'Repeat 1' track playback modes.

HIFI Stereo Sound

**Built-in 2.0 stereo speakers,
1:1 high resolution restores sound details**

CD/CD-R/CD-RW



Image: The THINKYA Y11 CD Player showcasing its HiFi stereo sound capabilities and various CD playback options.

2. Bluetooth Mode

The Y11 player functions as both a Bluetooth transmitter and receiver.

Bluetooth Transmitter (Connecting to external Bluetooth devices)

1. Ensure the player is in Bluetooth transmission mode (refer to the display or manual for mode indication).
2. Place your Bluetooth headphones or speaker in pairing mode.
3. The player will search for and connect to nearby Bluetooth devices. Once connected, audio from the CD player will stream to your external device.

Bluetooth Receiver (Connecting your phone/tablet to the player)

1. Switch the player to Bluetooth receiver mode.
2. On your mobile phone, tablet, or computer, enable Bluetooth and search for available devices.
3. Select "THINKYA Y11" from the list to pair. Once connected, audio from your device will play through the Y11's speakers.

Two-way Bluetooth Connection



AirPods



Smartphone



PC



Tablet



PSP



MP3/MP4

Bluetooth headphone



Bluetooth speaker

* Transmitter



* Receiver



Image: The THINKYA Y11 CD Player's two-way Bluetooth functionality, enabling it to transmit to Bluetooth headphones/speakers and receive from smartphones/tablets.

3. USB Playback

1. Insert a USB flash drive containing audio files (MP3, WMA, WAV, APE, FLAC compatible) into the USB Port on the back of the player.
2. The player will automatically switch to USB mode and begin playing audio from the drive.
3. Use the Play/Pause and Pre/Next buttons to control playback.



Image: A USB flash drive inserted into the USB port of the THINKYA Y11 CD Player, ready for audio playback.

4. AUX Mode

1. Connect one end of the 3.5mm AUX audio cable to the AUX Port on the back of the player.
2. Connect the other end to the headphone jack or audio output of an external device (e.g., smartphone, MP3 player).
3. Switch the player to AUX mode. Audio from the external device will play through the Y11's speakers.

5. Optical Mode

1. Connect an optical audio cable (not included) from the Optical Port on the back of the player to an optical audio input on a compatible device (e.g., TV, amplifier, soundbar).
2. Switch the player to Optical mode. This allows for high-quality digital audio output to your connected system.

6. Remote Control Usage

The included remote control allows convenient operation from a distance of up to 15 feet (10 meters).

- **Power Button:** Turn the unit on/off.
- **Volume +/-:** Adjust the volume level.
- **Play/Pause:** Start or pause playback.
- **Previous/Next:** Skip tracks or navigate menus.
- **Mode Button:** Cycle through CD, Bluetooth, USB, AUX, and Optical modes.
- **EQ/Bass/Treble:** Adjust sound equalization (if available).
- **Light Button:** Control the RGB night light modes.

Remote Control

Equipped with a remote control, you can control the CD player from a distance



Image: A person using the remote control to operate the THINKYA Y11 CD Player while relaxing on a sofa.

7. RGB Colorful Light Show

The player features an RGB light bar that offers 10 different color-changing themes. Use the 'Light' button on the remote control to cycle through these modes, including colorful lights, automatic change, white light, blue light, and yellow light.



Image: A close-up view of the vibrant RGB light bar integrated into the THINKYA Y11 CD Player.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the CD lens, use a specialized CD lens cleaner. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the player regularly, even if not in use for extended periods.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Shockproof Design:** The player features a 3-point silicone shockproof design to reduce vibrations and prevent skipping. However, avoid harsh impacts.



3-point silicone shockproof design

Effectively reducing external vibrations, enhancing stability and preventing frame skipping

Image: Diagram illustrating the 3-point silicone shockproof design of the THINCKYA Y11 CD Player, which helps maintain stability and prevent disc skipping.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted or power cable is not connected.	Charge the battery using the USB-C cable. Ensure the power switch is in the 'ON' position.
CD is not playing or skipping.	CD is dirty, scratched, or incorrectly placed. Player is unstable.	Clean the CD with a soft cloth. Ensure the CD is placed correctly on the spindle. Place the player on a stable, flat surface.
Bluetooth device cannot connect.	Player is not in correct Bluetooth mode or device is out of range.	Ensure the player is in the correct Bluetooth mode (transmitter or receiver). Place devices within 10 meters. Restart both devices.

Problem	Possible Cause	Solution
No sound output.	Volume is too low, incorrect mode selected, or cables are loose.	Increase volume. Verify the correct playback mode (CD, Bluetooth, USB, AUX, Optical) is selected. Check all cable connections.
Remote control not working.	Batteries are dead or remote is out of range.	Replace remote control batteries (2x AAA). Ensure you are within 15 feet (10 meters) of the player and pointing the remote towards it.

SPECIFICATIONS

- **Model Number:** Y11
- **Brand:** THINKYA
- **Connectivity Technology:** Auxiliary, USB, Bluetooth, Optical
- **Speaker Type:** Stereo
- **Power Source:** Battery Powered (2600mAh rechargeable)
- **Battery Life:** 8-10 hours playback
- **Charging Time:** Approximately 3.5 hours
- **Supported Disc Formats:** CD, CD-R, CD-DA
- **Supported Audio Formats:** MP3, WMA, WAV, APE, FLAC
- **Item Weight:** 2.88 pounds
- **Package Dimensions:** 14.17 x 10.87 x 5.28 inches
- **Color:** Brown

Portable size



Image: The THINKYA Y11 Portable CD Player with its dimensions clearly marked, highlighting its compact and portable size.

WARRANTY AND SUPPORT

THINKYA products are designed for reliability and performance. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms, please refer to the warranty card included in your package or contact THINKYA customer support.

For technical assistance, troubleshooting, or service inquiries, please contact THINKYA customer support through the contact information provided in your product documentation or on the official THINKYA website.

	<p>THINKYA A11 CD Player User Manual and Specifications</p> <p>Comprehensive user manual for the THINKYA A11 CD Player, detailing features, specifications, button controls, rear panel connections, remote functions, and playback modes including CD, USB, and Bluetooth.</p>
	<p>Y11 Smart Bracelet User Manual: Features, Operation, and Connectivity</p> <p>Comprehensive user manual for the Y11 Smart Bracelet, detailing its functions, health tracking features, Bluetooth connectivity with the Da Fit app, and troubleshooting tips for optimal use.</p>
	<p>Touch Screen Bluetooth Headset User Manual</p> <p>User manual for the Touch Screen Bluetooth Headset (Sound Earcuffs) by Shenzhen Hanyin Technology Development Co., Ltd. Includes features, specifications, pairing instructions, operation methods, and safety precautions.</p>
	<p>iCam365 Smart WiFi Camera User Manual and Setup Guide</p> <p>Comprehensive guide to setting up and using the iCam365 smart WiFi camera, including installation, app functions, troubleshooting, and FCC compliance information.</p>
 <p>Smartwatch Y11 Instruction Manual</p> <p>Please read the Instructions carefully before using it.</p>	<p>Smartwatch Y11 Instruction Manual</p> <p>Comprehensive instruction manual for the Smartwatch Y11, covering setup, app connection, features, operation, and troubleshooting for everyday use.</p>