

fortune store466920

# User Manual for Generic Replacement Remote Control

Model: fortune store466920

## 1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the use and maintenance of your Generic Replacement Remote Control, model fortune store466920. This remote is designed as a dedicated replacement for various Sumato Smart LED LCD TV models, including 32HTS01, 32HTS03, 24HTS03, and 24HT03, as well as compatible Audio/Video Players, Projectors, and AC units.

Please note that this is a replacement remote control and may not support all functions of your original device's remote. It operates via Infrared (IR) communication, offering stable performance and a sensitive response.

## 2. PRODUCT FEATURES

- **Dedicated Replacement:** Designed to replace original remotes for specified Sumato TV models and other compatible devices.
- **No Programming Required:** Ready to use after battery installation.
- **Durable Construction:** Made from high-quality ABS material for comfort and longevity.
- **Stable Performance:** Offers a farther transmitting distance and sensitive operation.
- **Compact Design:** Easy to operate and handle.



Figure 2.1: Top-down view of the Generic Replacement Remote Control, showcasing its button layout including number pad, navigation, and dedicated app buttons.

## 3. SETUP

### 3.1 Battery Installation

This remote control requires batteries for operation, which are not included in the package. Please follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert new batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

**Important: Do not mix old and new batteries, or different types of batteries, as this can impair performance or cause leakage.**

### 3.2 Initial Setup

No programming or complex setup is required for this remote control. Once the batteries are correctly installed, the remote is ready for immediate use with compatible devices.

## 4. OPERATING INSTRUCTIONS

To operate your device using this remote control, point the remote directly at the infrared receiver on your television, audio player, or projector. Ensure there are no obstructions between the remote and the device.



Figure 4.1: Angled view of the remote control, highlighting its ergonomic design and button placement.

## 4.1 Basic Functions

- **Power Button:** Turns the device on or off.
- **Number Pad:** For direct channel input or numerical selections.
- **Volume Control (VOL +/-):** Adjusts the audio volume.
- **Channel Control (CH +/-):** Changes channels.
- **Navigation Buttons (Up, Down, Left, Right, OK):** For menu navigation and selection.
- **Dedicated App Buttons (e.g., Netflix, YouTube):** Provides quick access to popular streaming services (functionality may vary based on device compatibility).

*Note: As a replacement remote, some advanced or specific functions of your original remote may not be supported. This is not indicative of a defective product.*

## 5. MAINTENANCE

### 5.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's finish or internal components.

### 5.2 Battery Care

- Replace batteries when the remote's performance diminishes or it stops responding.
- Remove batteries if the remote will not be used for an extended period to prevent potential leakage.
- Dispose of used batteries responsibly according to local regulations.

## 6. TROUBLESHOOTING

## Common Issues and Solutions

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote works intermittently.	Low battery power; obstruction between remote and device; remote not pointed correctly.	Replace batteries. Ensure clear line of sight to device's IR receiver. Point remote directly at device.
Some functions do not work.	This is a replacement remote; not all original functions are supported.	This is expected behavior for a replacement remote. It is not a defect.



Figure 6.1: Front view of the remote control, showing the IR emitter at the top.

## 7. SPECIFICATIONS

**Brand:** Generic

**Model Number:** fortune store466920

**Manufacturer:** fortune store

**Compatible Devices:** Television (Sumato 32HTS01, 32HTS03, 24HTS03, 24HT03 Smart LED LCD TV), Audio/Video Players, AC, Projector

**Wireless Communication:** Infrared (IR)

**Material:** ABS/Plastic

**Color:** Black Or White (color may vary)

**Number of Items:** 1 (Remote Control)

**Batteries Required:** Yes (Not Included)

**Special Feature:** Digital Display (referring to the device it controls, not the remote itself)

## 8. IMPORTANT NOTES AND SUPPORT

---

This remote control is a dedicated replacement. While it is tested for functionality before delivery, its compatibility with all specific features of your original remote or device cannot be guaranteed. If you encounter issues or have questions regarding compatibility, providing your original remote's part number or your unit's model number to the seller can assist in resolving concerns.

For further assistance, please refer to the contact information provided by your retailer or the manufacturer, "fortune store".