

[Manuals.plus](#) /

› [yoose](#) /

› yoose Mini Electric Shaver User Manual

## yoose yoose-mini

# yoose Mini Electric Shaver User Manual

Model: yoose-mini | Brand: yoose

## 1. INTRODUCTION

Thank you for choosing the yoose Mini Electric Shaver. This manual provides essential information for the safe and effective use of your new shaver. Please read it thoroughly before first use and keep it for future reference.

### Safety Information

- Keep the device out of reach of children.
- Do not disassemble, repair, or modify the device yourself. Contact authorized service personnel for any repairs.
- Ensure the charging port is dry before connecting the USB-C cable.
- Do not use the shaver if the blades are damaged, as this may cause skin irritation or injury.
- This appliance is suitable for cleaning under an open water tap.

## 2. PACKAGE CONTENTS

Please check that all items are present in your package:

- yoose Mini Electric Shaver
- Leather protective case
- Portable travel suitcase
- USB-C charging cable
- Cleaning brush



Image: The yoose Mini Electric Shaver shown with its compact travel case, highlighting its portability.

### 3. PRODUCT OVERVIEW

The yoose Mini Electric Shaver is designed for efficient and comfortable shaving, featuring a compact alloy body and advanced shaving technology.

#### Key Features:

- **Compact and Portable:** Small size and lightweight (approx. 155g) for easy travel.
- **Durable Alloy Body:** Constructed with a high-quality alloy body and a 17-step coating technology.
- **Powerful and Quiet Motor:** Features a silent 7200 RPM high-speed motor for efficient shaving.
- **Magnetic Shaving Heads:** Easy to attach, detach, and clean.
- **Automatic Grinding Technology:** Blades automatically sharpen during use for consistent performance.
- **IPX7 Waterproof:** Fully washable for convenient wet or dry shaving and easy cleaning.

- **Long Battery Life:** Up to 60 minutes of cordless shaving on a single charge.
- **USB-C Charging:** Fast and convenient charging.

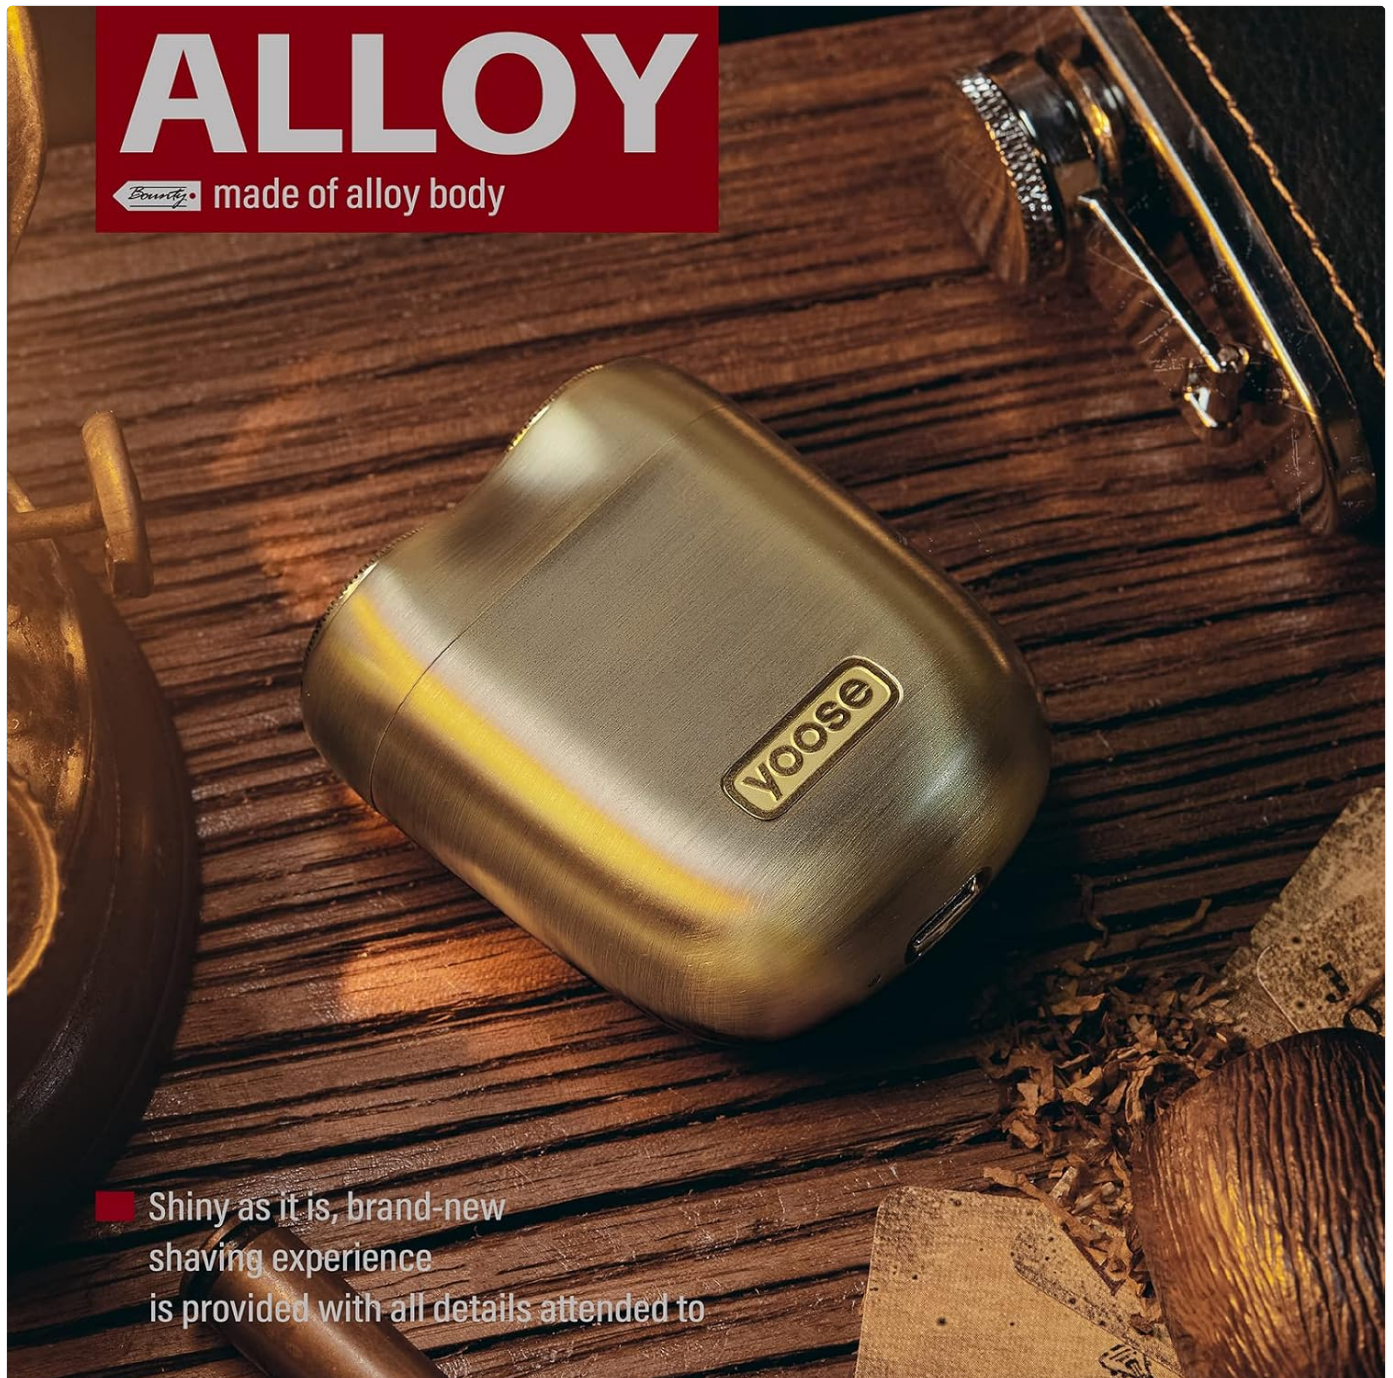


Image: Close-up of the yoose Mini Electric Shaver, showcasing its durable alloy body construction.

## 4. SETUP

### Charging the Shaver

1. Ensure the shaver is turned off.
2. Locate the USB-C charging port on the shaver.
3. Connect the provided USB-C cable to the shaver and plug the other end into a compatible USB power adapter (not included) or a computer USB port.
4. The charging indicator light will illuminate to show that the shaver is charging.
5. A full charge typically takes approximately one hour and provides up to 60 minutes of shaving time.

6. Once fully charged, disconnect the charging cable.

## Initial Use

Before using the shaver for the first time, it is recommended to fully charge it.

## 5. OPERATING INSTRUCTIONS

### Powering On/Off

- To turn on the shaver, press the power button.
- To turn off the shaver, press the power button again.

### Shaving Techniques

The yoose Mini Electric Shaver supports both dry and wet shaving.

#### Dry Shaving:

- Ensure your face is clean and dry.
- Gently press the shaver against your skin.
- Move the shaver in small, circular motions or straight lines against the direction of hair growth.

#### Wet Shaving:

- Apply shaving foam or gel to your face.
- Gently press the shaver against your skin.
- Move the shaver in small, circular motions or straight lines against the direction of hair growth.
- Rinse the shaving head under running water during shaving to prevent clogging.

# EFFICIENT

 Fast, clean, and gentle shave



Image: A person demonstrating the use of the yoose Mini Electric Shaver for an efficient and gentle shave.

## 6. MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your shaver.

### Cleaning the Shaver

1. Turn off the shaver and disconnect it from any charging cable.
2. The shaving head is magnetic and can be easily removed. Gently pull the shaving head upwards to detach it from the shaver body.
3. Rinse the shaving head and the underlying blade area thoroughly under running water. The shaver is IPX7 waterproof, allowing for full body washing.
4. Use the provided cleaning brush to remove any stubborn hair clippings from the blades and the shaver body.
5. Shake off excess water and allow the shaving head and shaver body to air dry completely before reattaching the head.

6. Align the magnetic shaving head with the shaver body and gently push it back into place until it clicks securely.

# MAGNETIC HEAD



Easy to disassemble, replace and clean



Image: The magnetic shaving head of the yoose Mini Electric Shaver being easily detached for cleaning.

# WATERPROOF

 Whole body washable

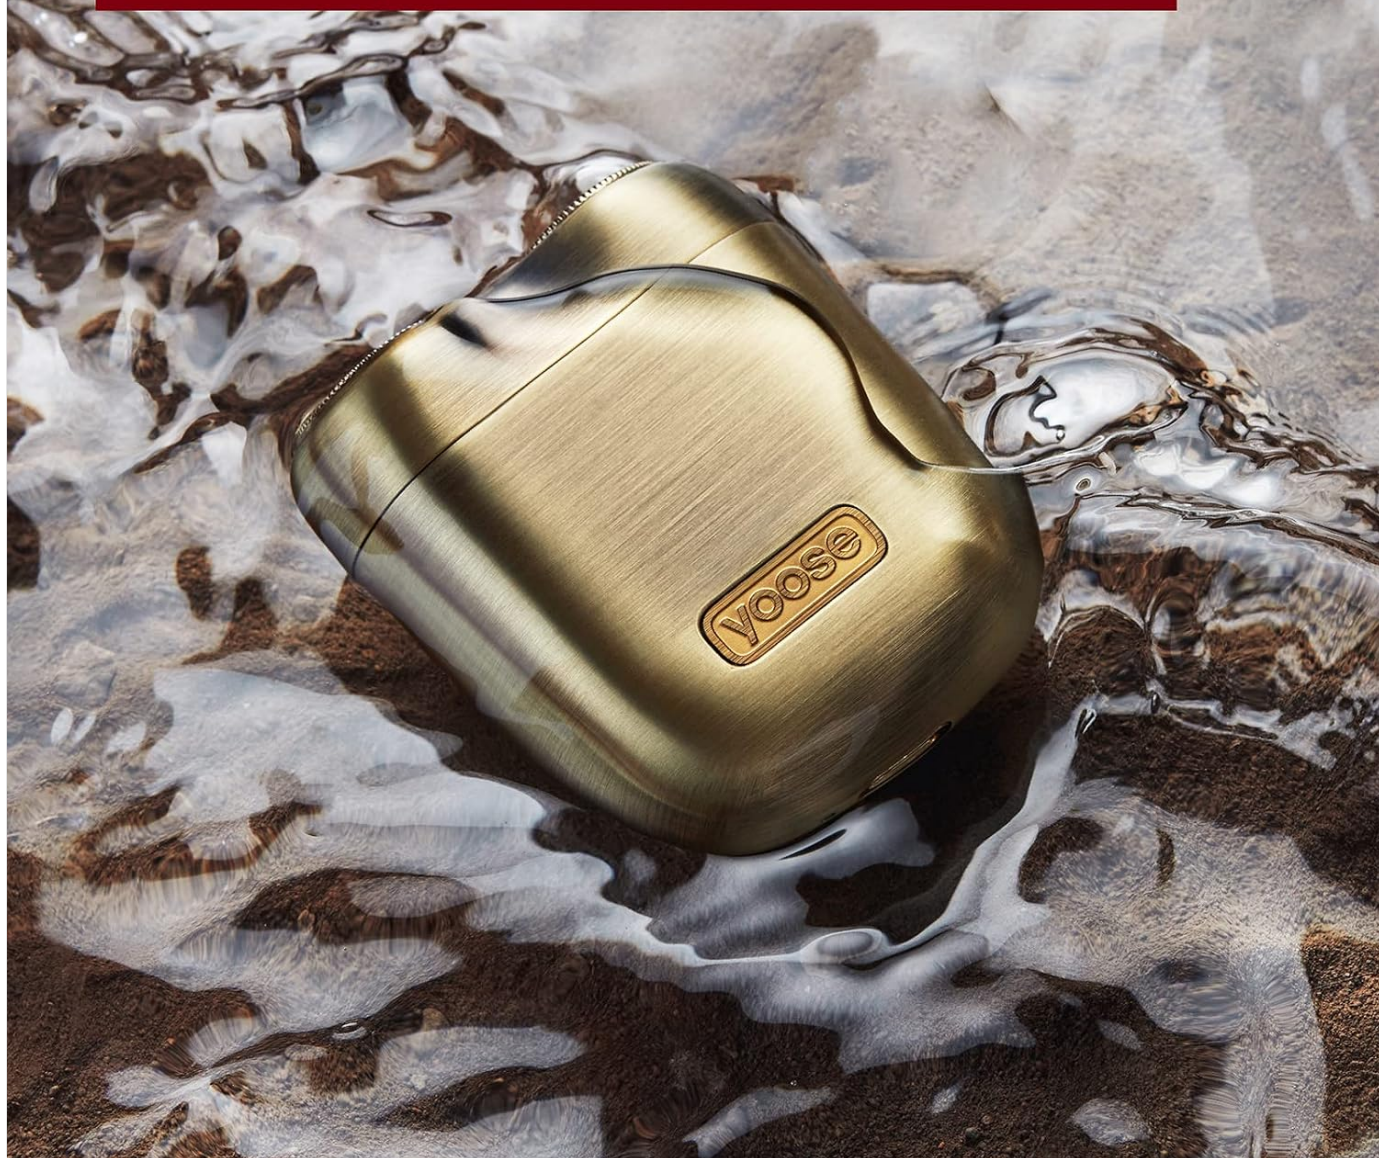


Image: The yoose Mini Electric Shaver shown submerged in water, illustrating its IPX7 whole-body washable feature.

## Storage

Store the shaver in a cool, dry place, preferably in its protective leather case or travel suitcase, when not in use.

## 7. TROUBLESHOOTING

If you encounter any issues with your yoose Mini Electric Shaver, please refer to the following common problems and solutions:

| Problem                  | Possible Cause       | Solution                 |
|--------------------------|----------------------|--------------------------|
| Shaver does not turn on. | Battery is depleted. | Charge the shaver fully. |

| Problem                        | Possible Cause                                 | Solution                                                                                                                                                      |
|--------------------------------|------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Poor shaving performance.      | Blades are dirty or clogged with hair.         | Clean the shaving head thoroughly as described in the Maintenance section.                                                                                    |
| Shaver stops during use.       | Battery is low.                                | Recharge the shaver.                                                                                                                                          |
| Skin irritation after shaving. | Incorrect shaving technique or sensitive skin. | Ensure proper shaving technique (circular motions, against hair growth). Consider wet shaving with foam/gel. If irritation persists, consult a dermatologist. |

If the problem persists after trying these solutions, please contact yoose customer support.

## 8. SPECIFICATIONS

| Feature           | Specification                                                                  |
|-------------------|--------------------------------------------------------------------------------|
| Brand             | yoose                                                                          |
| Model Name        | Mini                                                                           |
| Model Number      | yoose-mini                                                                     |
| Power Source      | Battery Powered (Rechargeable)                                                 |
| Battery Life      | Up to 60 minutes                                                               |
| Charging Time     | Approx. 1 hour                                                                 |
| Charging Port     | USB-C                                                                          |
| Item Weight       | 155 Grams                                                                      |
| Colour            | Gold                                                                           |
| Blade Material    | Stainless Steel                                                                |
| Head Type         | Rotary                                                                         |
| Waterproof Rating | IPX7 (Whole body washable)                                                     |
| Motor Speed       | 7200 RPM                                                                       |
| Special Features  | Portable, USB-C Battery, Magnetic Shaving Heads, Automatic Grinding Technology |
| Recommended Uses  | Face, Beard, Moustache, Travel                                                 |

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question