

## Timex TW2W75600

# Timex TW2W75600 Men's Watch User Manual

Model: TW2W75600 | Brand: Timex

## 1. INTRODUCTION

Thank you for choosing the Timex TW2W75600 Men's Watch. This manual provides essential information for setting up, operating, and maintaining your new timepiece. This watch features a sophisticated quartz movement with a moon phase sub-dial and luminous hands for enhanced visibility.

Key features include:

- Quartz movement with moon phase functionality.
- Luminous hands for low-light visibility.
- High-quality brown leather strap (21 cm length, 20 mm width) with a buckle clasp.
- Durable silver-tone case (40 mm diameter, 10 mm thickness) with a blue dial.
- Water resistance up to 5 bar (50 meters).

## 2. SETUP

### 2.1 Setting the Time

1. Pull the crown (located on the right side of the watch case) out to position 2.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Push the crown back in to position 1 to start the watch.

### 2.2 Setting the Moon Phase

The moon phase sub-dial tracks the lunar cycle. To set it:

1. Consult a current moon phase calendar to determine the current phase.
2. The moon phase is typically adjusted by rotating the crown or using a recessed pusher (refer to specific instructions if a pusher is present, otherwise, it adjusts with the time).
3. Align the moon phase indicator with the current lunar phase.

### 2.3 Wearing the Watch

Adjust the leather strap to fit comfortably around your wrist. The buckle clasp ensures a secure fit. Ensure the watch is not

too tight to allow for proper circulation.



Image: The Timex TW2W75600 watch comfortably worn on a wrist, showcasing its elegant design and fit.

### 3. OPERATING THE WATCH

---

#### 3.1 Timekeeping

Your Timex TW2W75600 watch is powered by a precise quartz movement, ensuring accurate timekeeping. Once set, the watch will continuously display the current time.



Image: Front view of the Timex TW2W75600 watch, highlighting the blue dial, luminous hands, and moon phase sub-dial.

### 3.2 Moon Phase Function

The moon phase indicator on the sub-dial will advance daily, showing the current phase of the moon (new moon, crescent, quarter, gibbous, full moon). This feature is purely aesthetic and informational.

### 3.3 Luminous Hands

The hour and minute hands are treated with a luminous material that glows in the dark after exposure to light, allowing for time reading in low-light conditions.

## 4. MAINTENANCE

---

### 4.1 Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the case and crystal with a soft, damp cloth.
- For the leather strap, avoid excessive moisture. Clean with a dry, soft cloth.
- Do not use harsh chemicals or abrasive materials.

### 4.2 Water Resistance

Your watch is water resistant up to 5 bar (50 meters). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers when the watch is wet.

### 4.3 Battery Replacement

The watch uses one lithium metal battery. When the watch stops running, the battery needs to be replaced. It is

recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

## 4.4 Strap Care

The leather strap is designed for comfort and durability. To prolong its life, avoid prolonged exposure to direct sunlight, extreme temperatures, and harsh chemicals. If the strap becomes wet, allow it to air dry naturally.



Image: Close-up view of the watch's brown leather strap and silver-tone buckle clasp.

## 5. TROUBLESHOOTING

---

### 5.1 Watch Not Running

- Check if the crown is fully pushed in to position 1.
- The battery may need replacement. Refer to section 4.3.

### 5.2 Incorrect Time Display

- Reset the time as described in section 2.1.
- Ensure the crown is securely pushed in after setting.

### 5.3 Moon Phase Not Advancing

- Verify that the watch is running correctly.

- Re-adjust the moon phase as described in section 2.2.

If problems persist, please contact Timex customer support or an authorized service center.

## 6. SPECIFICATIONS

Feature	Specification
Model Number	TW2W75600
Brand	Timex
Movement	Quartz
Case Diameter	40 mm
Case Thickness	10 mm
Case Color	Silver
Dial Color	Blue
Strap Material	Leather
Strap Length	21 cm
Strap Width	20 mm
Water Resistance	5 bar (50 meters)
Weight	48 grams
Battery Type	1 Lithium Metal battery (included)
Product Dimensions	4 x 10 x 6 cm



Image: Rear view of the Timex TW2W75600 watch, showing the stainless steel case back with engraved details.

## 7. WARRANTY AND SUPPORT

### 7.1 Warranty Information

Your Timex TW2W75600 watch comes with a 2-year manufacturer's warranty from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

### 7.2 Customer Support

For any questions, technical assistance, or warranty service, please contact Timex customer support. You can find contact information on the official Timex website or in the documentation provided with your watch.



Box Supplied may be different from picture

Image: The Timex watch is supplied in a gift box, suitable for presentation and storage.

© 2024 Timex. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.