

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Invicta](#) /

› [Invicta Racing Men's 43mm VD53 Quartz Watch Instruction Manual](#)

Invicta 47772

Invicta Racing Men's 43mm VD53 Quartz Watch Instruction Manual

Model: 47772

1. PRODUCT OVERVIEW

The Invicta Racing Men's 43mm VD53 Quartz Watch (Model 47772) is a precision timepiece featuring a VD53 quartz movement, chronograph functions, and a durable design. This manual provides essential information for its proper use and care.



Image: Invicta Racing Men's 43mm VD53 Quartz Watch with a black and red dial, worn on a wrist.

2. SETUP AND INITIAL ADJUSTMENT

2.1 Time and Date Setting

1. **Pull the crown out to position 2:** This is the first click position.
2. **Rotate the crown:** Turn the crown clockwise or counter-clockwise to set the date. Ensure the date changes at midnight, not noon.
3. **Pull the crown out to position 3:** This is the second click position.
4. **Rotate the crown:** Turn the crown to set the hour and minute hands.
5. **Push the crown back to position 1:** This will start the watch and engage the timekeeping.

2.2 Band Adjustment

The watch features a silicone band with a buckle clasp. To adjust the fit, locate the buckle and adjust the pin to the desired hole on the strap. For metal bands (if applicable to other variants), professional adjustment may be required to remove or add links.



Image: Close-up view of the watch's buckle clasp, showing the mechanism for securing the strap.

3. OPERATING THE WATCH

This watch is equipped with a VD53 Quartz movement, offering precise timekeeping and chronograph functions.

The Invicta Coalition Forces 47772



Image: Diagram illustrating the various functions of the Invicta Racing watch, including the start/pause button, adjust time/calendar crown, stopwatch function buttons, 24-hour hand, stopwatch minutes, stopwatch seconds, and date window.

3.1 Chronograph Functions

The chronograph allows for precise timing of events.

- **Start/Stop:** Press the top pusher (button A) to start the chronograph. Press it again to stop.
- **Reset:** With the chronograph stopped, press the bottom pusher (button B) to reset all chronograph hands to zero.


INVICTA

- **Split Time:** During chronograph operation, press the bottom pusher (button B) to measure split times without stopping the main timing. Press again to release and catch up to the running time.

3.2 24-Hour Hand

The 24-hour sub-dial indicates the time in a 24-hour format, useful for distinguishing AM/PM or tracking a second time zone if set accordingly.

3.3 Date Window

The date is displayed in a window on the dial. Adjust as described in the 'Setup and Initial Adjustment' section.

4. MAINTENANCE AND CARE

4.1 Water Resistance

This watch is water resistant to 50 meters (165 feet). This rating means the watch is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers when the watch is wet or submerged.

Gift Ready Watch Box

Watch box may come in a **different color & style**



INVICTA

Image: Icons indicating water resistance levels, showing suitability for splashes, rain, and short periods of swimming, but not for diving.

4.2 Cleaning

To maintain the appearance of your watch, wipe the case and band with a soft, dry cloth regularly. For silicone bands, a mild soap and water solution can be used, followed by thorough rinsing and drying. Avoid harsh chemicals or abrasive materials.

4.3 Battery Replacement

The VD53 quartz movement is powered by a battery. When the watch stops or the second hand begins to jump erratically (indicating low battery), it is time for a battery replacement. It is recommended to have this

service performed by a qualified watch technician to ensure proper sealing and water resistance.



Image: Close-up view of the watch's stainless steel case back, detailing the 'Invicta Racing' engraving and 'Japan Movement' inscription.

5. TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in to position 1. If the watch still does not run, the battery may need replacement.
- **Incorrect time/date:** Refer to section 2.1 for proper time and date setting procedures. Ensure the crown is fully pushed in after adjustment.
- **Chronograph hands not resetting to zero:** If the chronograph hands do not reset to the 12 o'clock position, they may need calibration. Consult a professional watch technician for this adjustment.

6. SPECIFICATIONS

Feature	Detail
Model Number	47772
Movement	VD53 Quartz (Japan Movement)
Case Size	43mm (1.69 inches)
Case Thickness	12.2mm (0.48 inches)
Band Width	22mm (0.87 inches)
Band Length	224mm (8.82 inches)
Water Resistance	50 meters (165 feet)

Clasp Type	Buckle
Metal Type	No-metal-type (referring to band material, case is stainless steel)



Image: Detailed diagram of the Invicta Racing watch showing key dimensions such as dial diameter, band width, strap length, and dial thickness.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This Invicta watch is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

7.2 Customer Support

For any questions, service, or repair needs not covered in this manual, please contact Invicta customer support or visit the official Invicta website for assistance. Authorized service centers are recommended for all repairs to ensure the integrity of your timepiece.

© 2026 Invicta Watch Group. All rights reserved.