

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KODAK](#) /
- › [Kodak x Barbie Printomatic Instant Print Digital Camera Instruction Manual](#)

## KODAK Printomatic (Model AMZRODBC1K2)

# Kodak x Barbie Printomatic Instant Print Digital Camera Instruction Manual

Model: Printomatic (AMZRODBC1K2)

Brand: KODAK

## INTRODUCTION

---

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your Kodak x Barbie Printomatic Instant Print Digital Camera. Please read this manual thoroughly before using your camera to ensure optimal performance and longevity.



Image: The Kodak x Barbie Printomatic Instant Print Digital Camera. This camera captures and instantly prints full-color photos.

## PRODUCT FEATURES

- **Instant Printing:** Prints 2x3 inch full-color ZINK Zero-Ink smudge-proof, water- and tear-resistant photos.
- **Digital Storage:** Option to save photos to a MicroSD card (not included).
- **High-Quality Sensor:** 5MP sensor for vivid and radiant photos.
- **Automatic Features:** Effortless auto-flash and focus.
- **Portable Design:** Lightweight and pocket-sized for on-the-go use.
- **Rechargeable Battery:** Built-in battery with USB charging cable.



*Image: Key features of the Kodak x Barbie Printomatic camera, including auto-flash, microSD storage, Zink prints, USB charging, and 5MP lens.*

## SETUP

---

### 1. Charging the Camera

1. Locate the Micro-USB port on the side of the camera.
2. Connect the provided Micro-USB cable to the camera and a compatible USB power source.
3. The charging indicator light will illuminate. Charge until the light indicates a full charge.

*Video: This video demonstrates how to charge the Kodak Printomatic camera using the Micro-USB cable.*

### 2. Loading ZINK Photo Paper

1. Open the paper compartment door on the camera.
2. Insert the blue calibration sheet (barcode side down) that comes with each pack of ZINK paper. This sheet helps calibrate the printer for optimal color.
3. Load a pack of 2x3 inch ZINK photo paper into the compartment with the glossy side facing up. Do not load more than one 10-pack of paper at a time.
4. Close the paper compartment door securely. The blue calibration sheet will print first.

*Video: This video illustrates the process of loading ZINK photo paper into the Kodak Step Slim printer, which uses a similar loading mechanism to the Printomatic.*

# Stick down for instant Cali vibes!



56 Barbie™ themed stickers



Image: Kodak ZINK Photo Paper, essential for instant printing with your camera.

## OPERATING INSTRUCTIONS

### 1. Turning On/Off

- To turn on the camera, press and hold the power button until the indicator light illuminates.
- To turn off the camera, press and hold the power button again until the indicator light turns off.

### 2. Taking a Photo

1. Aim the camera at your subject using the viewfinder.
2. Press the shutter button firmly to capture the image.
3. The camera will automatically print the photo. Avoid obstructing the printing slot during this process.

Video: A short preview demonstrating the point-and-shoot functionality and instant printing of the Kodak Printomatic camera.

### 3. Saving Photos to MicroSD

- Insert a MicroSD card (up to 32GB, not included) into the MicroSD card slot on the side of the camera.
- Photos taken will automatically be saved to the MicroSD card in addition to being printed.

#### 4. Automatic Flash

- The camera features an automatic flash that activates in low-light conditions to ensure proper exposure.

## MAINTENANCE

---

### Cleaning the Printer

To maintain print quality, it is recommended to clean the printer rollers periodically. Use the blue calibration sheet provided with your ZINK paper for this purpose.

1. Mark a 1-inch line on the back (non-glossy side) of a piece of ZINK paper.
2. Peel and cut off the top portion of the paper along the marked line.
3. Load this modified paper into the camera with the glossy side up.
4. The camera will slowly pull the paper out, cleaning the rollers in the process.

*Video: This video demonstrates how to clean the printer rollers using a piece of ZINK paper.*

## TROUBLESHOOTING

---

### Camera Not Responding / Freezing

- If the camera becomes unresponsive, locate the reset button. This is a small pinhole on the side of the camera.
- Using a thin pin or paperclip, gently press and hold the reset button for a few seconds.
- The camera should restart.

### Poor Print Quality

- Ensure you are using genuine ZINK Zero Ink Photo Paper.
- Perform a printer cleaning cycle as described in the Maintenance section.
- Check if the blue calibration sheet was inserted correctly with the latest pack of paper.
- Ensure the camera battery is sufficiently charged.

### Photo Not Printing

- Verify that there is ZINK photo paper loaded correctly in the compartment.
- Check the battery level; a low battery may prevent printing.
- Ensure the printing slot is not obstructed.

## SPECIFICATIONS

---

<b>Product Dimensions</b>	4.6 x 3.5 x 0.65 inches
<b>Item Weight</b>	1 pounds
<b>Item Model Number</b>	AMZRODBC1K2
<b>Batteries</b>	1 Lithium Metal batteries required (included)
<b>Special Feature</b>	Automatic Flash, Lightweight

<b>Film Format Type</b>	Instant
<b>Included Components</b>	Camera Body & Accessories
<b>Film Color</b>	Color
<b>Compatible Devices</b>	Camera
<b>Viewfinder Magnification</b>	0.5x

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the documentation included with your product or visit the official KODAK website. Keep your purchase receipt as proof of purchase for any warranty claims.

