

Teko HI2180BE

Teko Reachr Vacuum User Manual

Model: HI2180BE

INTRODUCTION

Welcome to the Teko Reachr Vacuum user manual. This guide provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your new Teko Reachr Vacuum. Designed for easy and efficient use, this powerful and lightweight cleaning tool is ideal for various surfaces and hard-to-reach areas.

SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Keep this manual for future reference.

- Do not immerse the vacuum in water or other liquids.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Unplug from outlet when not in use and before servicing.
- This appliance is for household use only.

PACKAGE CONTENTS

Verify that all items are included in your package:

- Teko Reachr Vacuum Unit
- Corner Attachment
- Floor Attachment
- Brush Attachment
- Air Filter (pre-installed or spare)
- Charging Cable/Adapter



Image: The Teko Reachr Vacuum unit displayed with its various attachments: a corner attachment, a floor attachment, a brush attachment, and an air filter. This image shows the complete set of components included with the vacuum.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your Teko Reachr Vacuum.

- **Main Unit:** Contains the powerful brushless motor and dustbin.
- **Extension Pole:** Allows the vacuum to extend over 36 inches for reaching high or low areas.
- **On/Off Button:** Controls power to the unit.
- **Level Indicator:** Shows current power or battery level.
- **Dustbin:** Collects debris, easily detachable for emptying.
- **Filter:** Foam filter for effective dust capture.
- **Attachments:**
 - *Corner Attachment:* Ideal for tight spaces and corners.

- *Floor Attachment:* For general floor cleaning on various surfaces.
- *Brush Attachment:* Useful for upholstery, car interiors, and delicate surfaces.

TÉKO

Handheld Vacuum Cleaner

EASY CONTROLS

On/OFF Button

Level Indicator

Vacuum Level

Smooth Operation

The Reachr Vacuum is designed for easy and efficient use as a powerful and lightweight cleaning tool.

Image: A close-up view of the Teko Reachr Vacuum's handle, highlighting the On/Off button, level indicator, and vacuum level controls. This illustrates the simple and intuitive control panel.



No More **Unreachable Spots**

Image: The Teko Reachr Vacuum shown with its various attachments laid out, including the corner, floor, and brush attachments, along with the air filter. This image provides a clear visual of all the accessories.

SETUP

Assembly

1. Unpack all components from the packaging.
2. Attach the desired cleaning attachment (e.g., floor attachment) to the end of the extension pole.
3. Connect the extension pole to the main vacuum unit. Ensure it clicks securely into place.
4. For handheld use, attachments can be connected directly to the main unit without the extension pole.

Charging

Before first use, fully charge the vacuum. Connect the charging cable to the charging port on the vacuum and plug the adapter into a wall outlet. The level indicator lights will show charging status.

OPERATING INSTRUCTIONS

Basic Operation

1. Ensure the dustbin is properly installed and the filter is clean.
2. Press the On/Off button to start the vacuum.
3. Select the desired vacuum level if multiple settings are available (refer to level indicator).
4. Guide the vacuum over the surface to be cleaned.
5. To turn off, press the On/Off button again.

Using Attachments

- **Floor Attachment:** Best for hard floors, rugs, and carpets.
- **Corner Attachment:** Use for narrow gaps, edges, and corners.
- **Brush Attachment:** Ideal for dusting, cleaning car interiors, and delicate surfaces like keyboards or vents.

TEKO

Extendable Design

FOR HARD TO REACH PLACES



Its convenient extension feature allows you to reach high areas, such as fans and cobwebs, and under furniture.



Ceiling Fans



High Corners



Under Furniture



Cabinets

Image: The Teko Reachr Vacuum shown in its extended configuration, demonstrating its ability to reach high areas like ceiling fans or cobwebs. This highlights the extendable design feature.

TEKO

Brush Attachment

FOR TIGHT SPACES



Great for Car Cleaning

Cleaning your car will become a breeze with the brush attachment. It allows you to reach every tight spot in the interior!

Image: A close-up of the Teko Reachr Vacuum's brush attachment being used to clean the interior of a car, specifically around the seatbelt buckle area. This demonstrates its utility for tight spaces and car cleaning.

MAINTENANCE

Emptying the Dustbin

1. Ensure the vacuum is turned off.
2. Locate the dustbin release button/latch and detach the dustbin from the main unit.
3. Open the dustbin and empty its contents into a trash receptacle.
4. Close the dustbin and reattach it to the vacuum until it clicks into place.

Cleaning the Filter

The foam filter should be cleaned regularly to maintain optimal suction power.

1. Remove the dustbin as described above.
2. Carefully remove the foam filter from the dustbin.

3. Tap the filter gently to remove loose dust.
4. If heavily soiled, rinse the filter under cool running water. Do not use detergent.
5. Allow the filter to air dry completely for at least 24 hours before reinserting it into the dustbin. Do not use the vacuum with a wet filter.

General Cleaning

Wipe the exterior of the vacuum with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum fully.
Low suction power.	Dustbin is full.	Empty the dustbin.
Low suction power.	Filter is clogged or wet.	Clean and dry the filter thoroughly. Replace if damaged.
Low suction power.	Nozzle or hose is blocked.	Check for and remove any obstructions in the nozzle or extension pole.
Vacuum makes unusual noise.	Obstruction in the motor area or attachments.	Turn off and inspect for debris. If noise persists, contact customer support.

SPECIFICATIONS

Brand: Teko

Model Name: Reachr

Model Number: HI2180BE

Color: Pink

Special Feature: Lightweight, Cordless, Compact, Rechargeable

Filter Type: Foam

Capacity: 50 Grams

Form Factor: Handheld

Product Dimensions: 36" L x 5" W x 5" H (extended)

Item Weight: 3 pounds

Manufacturer: TEKO

Country of Origin: USA

WARRANTY AND SUPPORT

Teko products are designed for durability and performance. For warranty information, please refer to the warranty card included with your product or visit the official Teko website. If you encounter any issues or have questions not covered in this manual, please contact Teko customer support.

Customer Support: Please visit [Teko's Amazon Storefront](#) or the official Teko website for contact information and further assistance.

© 2024 Teko. All rights reserved.