

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [YESHOMY](#) /

› [YESHOMY 6-Drawer Dresser and TV Stand \(Model SH-0158TV-BN\) Instruction Manual](#)

YESHOMY SH-0158TV-BN

YESHOMY 6-Drawer Dresser and TV Stand Instruction Manual

Model: SH-0158TV-BN


INTRODUCTION

Thank you for purchasing the YESHOMY 6-Drawer Dresser and TV Stand. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and efficient use of your new furniture. Please read this manual thoroughly before beginning assembly or use, and retain it for future reference.

PRODUCT OVERVIEW

The YESHOMY 6-Drawer Dresser and TV Stand is a versatile furniture piece designed for storage and media display. It features six spacious drawers for organizing household items and a sturdy top surface capable of supporting a television up to 65 inches.

PRODUCT PARAMETERS

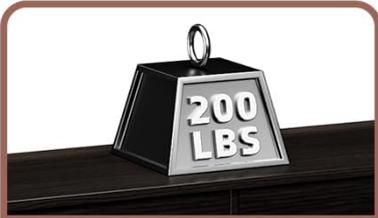

LOAD BEARING: 200LBS



LARGE CAPACITY

Figure 1: Front view of the assembled YESHOMY 6-Drawer Dresser.

SUITABLE FOR TV SIZE
UP TO 55"



Figure 2: Side view of the assembled YESHOMY 6-Drawer Dresser, showing its depth.



Figure 3: Back view of the assembled YESHOMY 6-Drawer Dresser.

SAFETY INFORMATION

- **Read all instructions carefully:** Ensure you understand each step before proceeding with assembly.
- **Two-person assembly recommended:** Due to the weight and size of components, assembly is easier and safer with two adults.
- **Use appropriate tools:** While a basic screwdriver may be included, using your own tools can improve efficiency and reduce strain.
- **Secure to wall (anti-tip kit):** To prevent tipping and potential injury, especially in homes with children, always use the provided anti-tip kit to secure the dresser to a wall.
- **Weight limits:** Do not exceed the maximum weight capacity of 200 lbs for the top surface and 30 lbs per drawer. Overloading can cause damage or instability.
- **Keep small parts away from children:** Small hardware components can be a choking hazard.
- **Handle with care:** The product weighs approximately 89 lbs. Exercise caution when moving the packaged or assembled unit.

SETUP AND ASSEMBLY INSTRUCTIONS

This dresser is designed for straightforward assembly. All necessary hardware and illustrated instructions are included. Please follow the steps below carefully.

1. Unpacking and Preparation

- Choose a clear, spacious area for assembly, preferably on a soft surface like a carpet to prevent scratches.
- Carefully open the packaging and remove all components. Check the parts list against the included manual to ensure all pieces are present.
- Separate and identify all hardware. The instructions include pictures of numbered hardware for easy identification.

2. Assembly Steps

Refer to the detailed illustrations and step-by-step guide provided in the separate assembly manual included with your product. General steps typically involve:

1. Assembling the main frame of the dresser.
2. Attaching the back panel.
3. Assembling each of the six drawers.
4. Installing the drawer slides and inserting the drawers into the frame.
5. Attaching the drawer pulls.
6. Installing the anti-tip kit to secure the dresser to a wall.



Figure 4: Product dimensions and load bearing information.



Figure 5: Key features including drawer capacity and construction details.

OPERATING INSTRUCTIONS (USAGE)

1. Drawer Usage

- Open and close drawers gently using the provided handles. The smooth metal slides ensure easy operation.
- Distribute weight evenly within each drawer, not exceeding 30 lbs per drawer.
- Avoid pulling multiple drawers out simultaneously, as this can affect stability.

2. TV Stand Functionality

- The top surface can accommodate TVs up to 65 inches and weighing up to 200 lbs.
- Place the TV centrally on the dresser top to ensure stability.
- Consider using cable management solutions to keep wires tidy and prevent tripping hazards.



Figure 6: Visual guide for suitable TV sizes on the dresser top. Note: Product text states up to 65 inches.



Figure 7: Example of the dresser functioning as a TV stand in a living room.

MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Spills:** Clean spills immediately to prevent staining or damage to the wood material.
- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary to maintain structural integrity.
- **Avoid direct sunlight and heat:** Prolonged exposure can cause fading or warping of the material.
- **Moving the unit:** When moving the dresser, always lift it rather than dragging it to prevent damage to the legs and base. If moving a significant distance, consider emptying drawers first.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dresser feels wobbly or unstable.	Loose fasteners; uneven floor; anti-tip kit not installed.	Ensure all screws are tightened. Place shims under legs if the floor is uneven. Install the anti-tip kit as per instructions.
Drawers do not slide smoothly or get stuck.	Drawer slides misaligned; obstruction in the slide mechanism; overloaded drawer.	Check that drawer slides are correctly installed and aligned. Remove any debris from the slides. Reduce the weight in the drawer.
Missing parts or damaged components upon arrival.	Manufacturing error or shipping damage.	Do not proceed with assembly. Contact YESHOMY customer support immediately with your purchase details and a list of missing/damaged parts.
Difficulty assembling.	Instructions unclear; incorrect tool usage.	Review the assembly manual carefully, paying close attention to illustrations. Ensure you are using the correct hardware for each step. Consider having a second person assist.

SPECIFICATIONS

- **Brand:** YESHOMY
- **Model:** SH-0158TV-BN
- **Product Dimensions (Overall):** 58.27" W x 15.16" D x 26.57" H (148 cm W x 38.5 cm D x 67.5 cm H)
- **Material:** E1 MDF (Engineered Wood)
- **Color:** Brown (as per current product)
- **Number of Drawers:** 6
- **Item Weight:** Approximately 89 lbs (40.3 kg)
- **Weight Capacity (Top Surface):** 200 lbs (90.7 kg)
- **Weight Capacity (Each Drawer):** 30 lbs (13.6 kg)
- **Recommended TV Size:** Up to 65 inches
- **Assembly Required:** Yes

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact YESHOMY customer service directly. If you encounter any issues not covered in the troubleshooting section, or require replacement parts, please reach out to YESHOMY customer support with your model number (SH-0158TV-BN) and purchase details.

Contact Information: Please visit the official YESHOMY website or refer to your purchase receipt for the most current customer service contact details.