

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Drchop](#) /

> [Drchop P40 8000mAh Portable Misting Fan Instruction Manual](#)

## Drchop P40

# Drchop P40 8000mAh Portable Misting Fan Instruction Manual

Model: P40 | Brand: Drchop

## 1. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the fan in water or other liquids.
- Ensure the power source matches the voltage specified on the fan.
- Keep out of reach of children.
- Unplug the fan when not in use or before cleaning.
- Use only pure or mineral water for the misting function to prevent clogging.
- Cover the spray cap if the misting function is unused for extended periods.
- Do not block the spray outlet.
- Always keep the fan upright when water is in the tank to prevent leakage.

## 2. PACKAGE CONTENTS

- Drchop P40 Misting Fan
- USB Charging Cord
- User Manual

## 3. PRODUCT OVERVIEW

The Drchop P40 is an 8-inch portable misting fan designed for personal cooling. It features a large water tank, multiple fan speeds, and adjustable misting levels.



Figure 1: Front view of the Drchop P40 Misting Fan, illustrating its misting capability and compact design.



Figure 2: The 600mL large capacity water tank being filled, highlighting options for water or ice for enhanced cooling.

# Large Battery Capacity

⇒ 4 MAX hrs

⇒ 15 MIN hrs

# 8000mAh

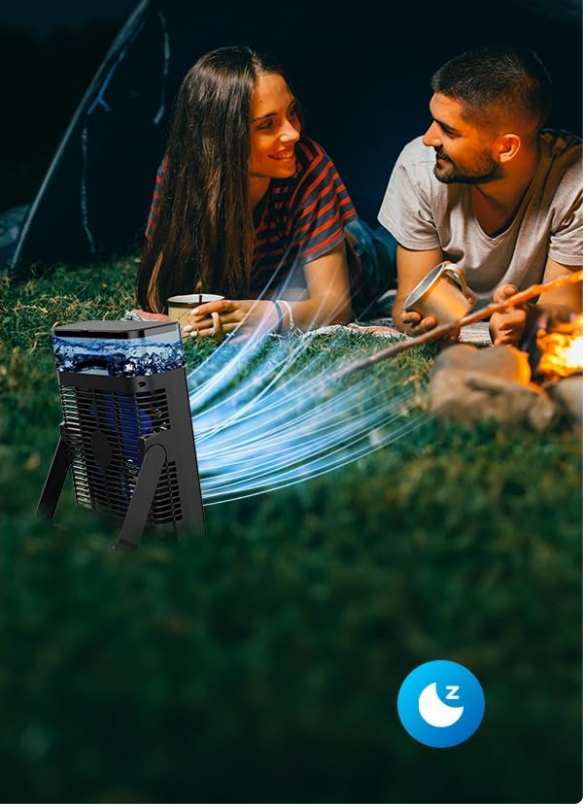
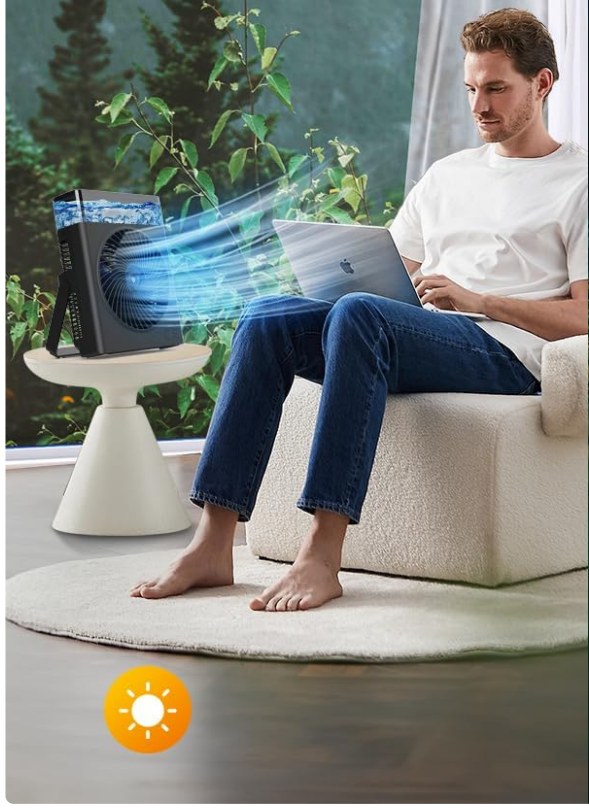


Figure 3: Illustration of the 8000mAh battery capacity, providing 4-15 hours of operation depending on usage.



Figure 4: The fan connected via USB, demonstrating its ability to operate while charging.

## 4. SETUP

### 4.1 Charging the Fan

1. Connect the provided USB charging cord to the fan's USB-C port.
2. Plug the other end of the USB cord into a compatible USB power adapter (not included) or a computer USB port.
3. The charging indicator light will illuminate. A full charge takes approximately 2.5 hours.
4. The fan can be used while charging.

## 4.2 Filling the Water Tank

1. Locate the water tank on the top of the fan.
2. Open the water tank cover.
3. Carefully pour pure or mineral water into the 600mL tank. Do not exceed the MAX fill line.
4. For enhanced cooling, add ice water to the tank.
5. Securely close the water tank cover.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off and Fan Speed Control

1. Press the power button once to turn the fan on at low speed.
2. Press the power button a second time for medium speed.
3. Press the power button a third time for high speed.
4. Press the power button a fourth time to turn the fan off.

### 5.2 Misting Function Control

1. With the fan running, press the mist button once for the first misting level (approx. 250ml/h, up to 6 hours).
2. Press the mist button a second time for the second misting level (approx. 200ml/h, up to 7.5 hours).
3. Press the mist button a third time to turn the misting function off.
4. The misting function automatically stops after 3 hours to conserve water.

### 5.3 Adjustable Angle

- The fan features a 60° adjustable angle on the back stand. Adjust the stand to direct airflow as desired.

### 5.4 Mood Light Function

- Some models may include a mood light function. Refer to the specific product details for operation.

## 6. MAINTENANCE

### 6.1 Cleaning

- Before cleaning, ensure the fan is turned off and unplugged.
- Wipe the exterior of the fan with a soft, damp cloth.

- To clean the water tank, remove the cover and gently wipe the interior. Ensure no water enters the fan's electrical components.
- Regularly clean the mist outlet to prevent mineral buildup and clogging.

## 6.2 Storage

- When storing the fan, ensure the water tank is completely empty and dry.
- Store in a cool, dry place away from direct sunlight.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Misting function stops working.	Water tank empty; mist outlet clogged; internal malfunction.	Refill water tank; clean mist outlet; contact customer support.
Fan is leaking water.	Water tank overfilled; fan not kept upright; damaged tank seal.	Do not overfill; ensure fan is upright; check tank for damage.
Fan does not turn on.	Battery depleted; power button not pressed correctly; charging cable issue.	Charge the fan; ensure power button is pressed firmly; check charging cable.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Drchop
Model Name	P40
Battery Capacity	8000mAh
Water Tank Capacity	600mL
Fan Speeds	3
Misting Levels	2
Misting Rate (Level 1)	250ml ± 75ml/h (up to 6 hours)
Misting Rate (Level 2)	200ml ± 60ml/h (up to 7.5 hours)
Charging Input	USB-C, 5V (DC)

Feature	Detail
Wattage	10 watts
Item Weight	0.73 Kilograms (1.61 pounds)
Product Dimensions	0.2"D x 0.2"W x 0.2"H
Material	ABS

## 9. WARRANTY AND SUPPORT

Drchop offers a 30-day hassle-free return/free exchange policy for this product. For any inquiries or support, please contact Drchop customer service. Messages will be replied to within 24 hours.

## 10. PRODUCT VIDEOS

Video 1: Official product video demonstrating the Drchop Portable Misting Fan in use, highlighting its features and portability.

Video 2: A seller-provided video showcasing the Misting Fan as a summer essential for heat and patios.

Video 3: A short preview video demonstrating the gentle mist feature of the fan.

Video 4: A short preview video demonstrating the fan's operation and misting function.