

Tiny Land B0DP65XN85

Tiny Land Kids Play Tent Instruction Manual

Brand: Tiny Land | Model: B0DP65XN85

1. INTRODUCTION AND OVERVIEW

The Tiny Land Kids Play Tent with Mat is designed to provide a safe, comfortable, and imaginative play space for children aged 3 years and up. This playhouse features a dreamy pink design, high-quality materials, and a spacious interior, making it an ideal addition to any indoor play area. Its easy assembly and portability allow for versatile use.



2. PRODUCT FEATURES

- **Dreamy Pink Design:** Features an appealing pink and off-white color scheme with adorable details, perfect for creating a charming play environment.
- **High-Quality & Safe Materials:** Constructed from eco-friendly, non-toxic materials to ensure safety, comfort, and durability for prolonged use.
- **Spacious & Ventilated Design:** Offers a roomy interior capable of accommodating multiple children, with windows and curtains for excellent air circulation.
- **Easy Assembly & Portability:** Designed for simple setup and includes a storage bag for convenient transport and storage, suitable for both indoor and outdoor activities.
- **Comfortable Mat Included:** Comes with a soft, padded mat for added comfort during play.



Image: A collage showing key features of the play tent, including an interactive large window, spacious interior, and an arched side

door.

Ample Space for Multiple Kids

Spacious capacity for multiple kids to enjoy endless fun activities.



Image: A child and an adult inside the play tent, demonstrating the ample space available for multiple users.

3. SETUP INSTRUCTIONS

The Tiny Land Kids Play Tent is designed for straightforward assembly. Follow these steps to set up your play tent:

1. **Unpack Components:** Carefully remove all parts from the packaging, including the fabric tent cover, PVC pipes, connectors, and the padded mat.
2. **Assemble Frame:** Connect the PVC pipes using the provided connectors to form the tent's frame. Ensure all connections are secure. The frame typically consists of a base, vertical supports, and a roof structure.
3. **Drape Fabric Cover:** Carefully slide the fabric tent cover over the assembled PVC frame. Ensure the cover is properly aligned with the frame's structure, with windows and doors in their correct positions.
4. **Secure Fabric:** Fasten the fabric cover to the frame using any integrated ties or Velcro straps to ensure it is

taut and stable.

5. **Place Mat:** Lay the padded mat inside the tent. The mat may have Velcro or other fasteners to secure it to the tent's base.
6. **Install Lights (Optional):** If included, string the decorative lights along the top interior of the tent. Power the lights using the provided battery pack (batteries not included).

Your browser does not support the video tag.

Video: Official Tiny Land video demonstrating the assembly process and features of the play tent.

Easy Setup & Mat Included

Easy to set up, user-friendly, with a comfortable mat included for cozy play.



Image: The play tent set up, highlighting its easy assembly and the comfortable mat included.

4. OPERATING INSTRUCTIONS

- **Opening/Closing Curtains:** The tent features curtains on its windows and main entrance. These can be tied back using the attached fabric ties to keep them open, or released to close for privacy.

- **Using String Lights:** If your tent includes string lights, locate the battery pack. Insert the required batteries (typically AA or AAA, check packaging for specifics). Use the switch on the battery pack to turn the lights on or off. Some models may offer different lighting modes (e.g., steady, flashing).



Image: A child interacting with the arched side door, demonstrating how the tent's openings can be used.

5. MAINTENANCE AND CARE

- **Cleaning:** For minor spills or dirt, spot clean the fabric with a damp cloth and mild soap. Avoid harsh detergents or abrasive cleaners. Allow to air dry completely.
- **Storage:** When not in use, disassemble the tent and store it in the included storage bag. Store in a cool, dry place away from direct sunlight to preserve fabric quality and color.
- **Frame Care:** Periodically check the PVC pipes and connectors for any damage or wear. Replace any broken parts to ensure structural integrity.

6. TROUBLESHOOTING

If you encounter any issues with your Tiny Land Kids Play Tent, please consider the following:

- **Tent Instability:** Ensure all PVC pipes are fully inserted into their connectors and the fabric cover is taut and properly secured.
- **Lights Not Working:** Check the battery pack for proper battery insertion and ensure batteries are not depleted. Replace batteries if necessary.
- **Wrinkles in Fabric:** Minor wrinkles are normal upon unpacking. These typically smooth out with use or can be gently steamed.

For further assistance, please contact Tiny Land customer support.

7. SPECIFICATIONS

Attribute	Detail
Product Dimensions	35 x 52 x 53 inches
Item Weight	6.16 pounds
Country of Origin	China
Manufacturer Recommended Age	3 years and up
Manufacturer	TINY LAND INC
Model Number (ASIN)	B0DP65XN85



Image: Visual representation of the play tent's dimensions (52in length, 35in width, 53in height).

8. SAFETY INFORMATION

This product has no specific safety warnings applicable beyond general play safety guidelines. Always supervise children during play. Ensure the tent is assembled correctly and placed on a stable, flat surface. Keep away from open flames and heat sources.

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Tiny Land Kids Play Tent, please contact Tiny Land customer service. Refer to your purchase documentation for specific warranty details.

You can visit the official Tiny Land store for more information: [Tiny Land Store](#)