

[Manuals.plus](#) /

› [YESHOMY](#) /

› YESHOMY Dresser for Bedroom with 6 Drawers - Instruction Manual

YESHOMY SH-0158TV-WT

YESHOMY Dresser for Bedroom with 6 Drawers - Instruction Manual

Model: SH-0158TV-WT

1. INTRODUCTION

Thank you for purchasing the YESHOMY Dresser for Bedroom with 6 Drawers. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and efficient use of your new furniture. Please read this manual thoroughly before beginning assembly and retain it for future reference.



Image: The YESHOMY 6-drawer dresser in a bedroom setting, showcasing its white finish and six spacious drawers with silver handles. The top surface is adorned with decorative items, highlighting its versatility.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Always assemble the dresser on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not allow children to climb on or play with the dresser. Furniture tip-over can cause serious injury.
- Distribute weight evenly in drawers. Do not overload drawers.
- If using as a TV stand, ensure the TV size and weight are within the recommended limits (up to 65 inches, 200 lbs).
- Use the included anti-tip kit to secure the dresser to a wall, especially if children are present.

3. PARTS LIST

Before assembly, verify that all parts are present and undamaged. Refer to the assembly diagram for identification.

Part	Description	Quantity
Top Panel	Main top surface of the dresser.	1
Side Panels	Left and right side supports.	2
Bottom Panel	Base of the dresser.	1
Back Panel	Rear support panel.	1
Drawer Fronts	Visible front of each drawer.	6
Drawer Sides/Backs	Components for drawer boxes.	12/6
Drawer Bottoms	Base of each drawer.	6
Drawer Slides	Metal rails for drawer movement.	12 pairs
Handles	Knobs for drawers.	6
Hardware Kit	Screws, dowels, cam locks, anti-tip kit.	1 set

Note: The package includes two tool kits and one manual of installation and usage. This list is a general overview of components.

4. SETUP & ASSEMBLY INSTRUCTIONS

Assembly typically requires two people. Follow the numbered steps provided in the included installation manual. Below are general guidelines and visual aids.

4.1 Unpacking and Preparation

- Clear a spacious area for assembly.
- Lay out all components on a soft, clean surface (e.g., carpet or blanket) to prevent damage.
- Identify all parts and hardware using the provided list and diagrams.

4.2 Assembling the Main Frame

Connect the side panels to the bottom panel and internal support beams using the designated screws and dowels. Ensure all connections are snug.



Image: Rear view of the dresser, illustrating the back panel and internal structure, which is important for understanding assembly points.

4.3 Installing Drawer Slides


Attach the drawer slides to the interior of the dresser frame and to the sides of each drawer box. Ensure they are level and aligned for smooth operation.

4.4 Assembling Drawers

Assemble each of the six drawers by connecting the front, back, and side panels, then sliding the bottom panel into place. Attach the handles to the drawer fronts.



Desktop material display

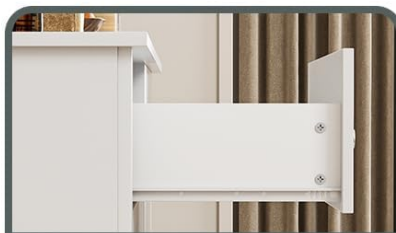

Drawer display



Large capacity drawers

Image: A detailed view of the dresser with several drawers pulled open, demonstrating their depth and storage capacity. This image also highlights the smooth operation of the drawer slides.

4.5 Attaching the Top Panel

Carefully place the top panel onto the assembled frame and secure it with the appropriate fasteners. This step may require assistance.

4.6 Finalizing and Securing

Insert the assembled drawers into their respective slots. Finally, attach the anti-tip kit to the back of the dresser and to a wall stud to prevent accidental tipping. This is a critical safety step.

5. OPERATING INSTRUCTIONS

The YESHOMY dresser is designed for straightforward use.

- **Opening Drawers:** Gently pull the handle of the desired drawer outwards.
- **Closing Drawers:** Push the drawer inwards until it is fully closed and flush with the dresser frame. The smooth

metal slides ensure easy operation.

- **Weight Distribution:** For optimal stability and longevity, distribute items evenly within the drawers. Avoid placing excessively heavy items in a single drawer.
- **TV Placement:** If using as a TV stand, place the television centrally on the top surface. Ensure the TV's base is stable and does not overhang the edges. The dresser can support TVs up to 65 inches and 200 pounds.



Image: The dresser serving as a TV stand, demonstrating its capacity to hold a television up to 65 inches. This image highlights the functional aspect of the dresser beyond just storage.

6. MAINTENANCE

Proper care will extend the life and appearance of your dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as they can damage the finish.
- **Spills:** Clean spills immediately with a dry cloth to prevent staining or warping.

- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as needed to maintain structural integrity.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the finish.
- **Humidity:** Maintain a stable room temperature and humidity level to prevent wood expansion or contraction.

7. TROUBLESHOOTING

If you encounter issues with your dresser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Misaligned drawer slides or loose screws.	Check that drawer slides are properly aligned and all screws are tightened. Ensure no obstructions are in the slide path.
Dresser feels wobbly or unstable.	Loose assembly screws or uneven floor.	Re-tighten all assembly screws. Use furniture levelers or shims under the feet if the floor is uneven. Ensure the anti-tip kit is installed.
Drawer does not close flush.	Overloaded drawer or obstruction.	Reduce contents of the drawer. Check for items obstructing the drawer's path or if the drawer bottom is bulging.
Missing parts during assembly.	Packaging error.	Contact customer support with your purchase details and the specific missing parts.

8. SPECIFICATIONS

Key product specifications for the YESHOMY Dresser:

- **Model Name:** Dresser for Bedroom
- **Model Number:** SH-0158TV-WT
- **Color:** White
- **Material:** E1 MDF (Wood)
- **Product Dimensions (D x W x H):** 15.16" x 58.27" x 26.57"
- **Item Weight:** Approximately 89 lbs
- **Top Load Bearing Capacity:** 200 lbs
- **Drawer Load Bearing Capacity:** 30 lbs per drawer
- **Suitable TV Size:** Up to 65 inches
- **Assembly Required:** Yes
- **Special Feature:** Adjustable Feet

PRODUCT PARAMETERS

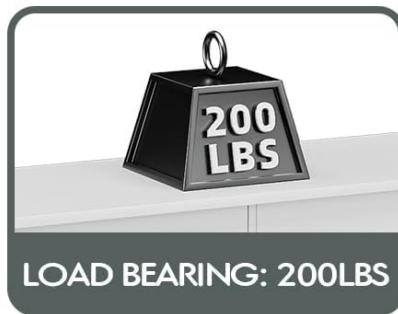


Image: A diagram illustrating the key dimensions (width, depth, height) of the dresser, along with icons indicating the 200 lbs load bearing capacity of the top and the large capacity of the drawers.

9. WARRANTY & SUPPORT

YESHOMY stands behind the quality of its products. For specific warranty details, please refer to the documentation included with your purchase or contact our customer support.

If you have any questions, require replacement parts, or need assistance with assembly or troubleshooting, please contact YESHOMY customer service. Have your model number (SH-0158TV-WT) and purchase date ready when contacting support.

For more information, visit the official YESHOMY Store: [YESHOMY Store on Amazon](#)

