

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Qlearsoul](#) /

> [Qlearsoul SoulBox S1 Vinyl Record Player with Stereo Speakers Instruction Manual](#)

Qlearsoul SoulBox S1

Qlearsoul SoulBox S1 Vinyl Record Player with Stereo Speakers Instruction Manual

Model: SoulBox S1 (HP-H007)

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Qlearsoul SoulBox S1 Vinyl Record Player with Stereo Speakers. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. Keep this manual for future reference.

2. WHAT'S IN THE BOX

Carefully unpack all components and verify that you have received all items listed below. If any items are missing or damaged, please contact customer support.

- Turntable Unit & Stereo Bookshelf Speakers
- Dust Cover, Power Adapter & 45 RPM Adapter
- Drive Belt, Platter, Slip Mat & Counterweight
- Quick Start Guide, User Manual & Warranty Card

HIGH PRECISION MOTOR

The playback speeds are electronically controlled with precision, which ensures the most accurate and stable music reproduction.



Image: All components included in the SoulBox S1 package, including the turntable unit, two bookshelf speakers, dust cover, power

3. SETUP INSTRUCTIONS

3.1 Turntable Assembly

1. **Place the Platter:** Carefully place the die-cast iron platter onto the turntable spindle.
2. **Install the Drive Belt:** Gently stretch the drive belt around the inner rim of the platter and hook it onto the motor pulley. Ensure the belt is not twisted.
3. **Place the Slip Mat:** Position the felt slip mat on top of the platter.
4. **Install the Counterweight:** Slide the counterweight onto the rear of the tonearm. Rotate it to adjust the tracking force according to the cartridge manufacturer's specifications (typically 2.5-3.5 grams for the AT-3600L cartridge).
5. **Adjust Anti-Skating:** Set the anti-skating dial to match the tracking force. This helps prevent the stylus from skipping across the record.
6. **Attach the Dust Cover:** Carefully place the dust cover onto the hinges at the back of the turntable unit.

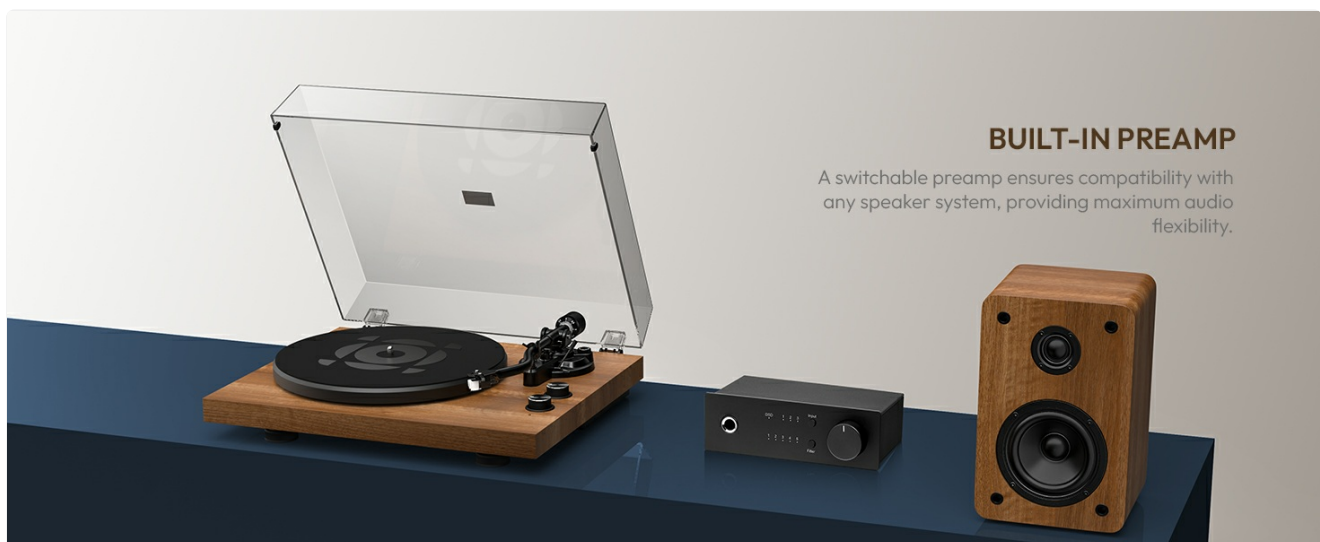


Image: A close-up view illustrating the turntable platter and the drive belt mechanism, highlighting the motor pulley and belt placement.



Image: A detailed view of the S-shaped tonearm, showing the adjustable counterweight and the anti-skating knob for precise stylus tracking.

3.2 Speaker Connection

Connect the included stereo bookshelf speakers to the speaker output terminals on the rear of the turntable unit using the provided audio cables. Ensure correct polarity (positive to positive, negative to negative) for optimal sound.

3.3 Power Connection

Connect the power adapter to the DC input on the rear of the turntable, then plug the adapter into a suitable wall outlet.



Image: The back panel of the SoulBox S1 turntable, illustrating the RCA (R&L) jacks, the Phono-Line Out switch, and the speaker output terminals for connecting external audio components and speakers.

4. OPERATING INSTRUCTIONS

4.1 Playing a Record

1. **Select Speed:** Choose the appropriate speed (33 or 45 RPM) using the speed selector knob on the turntable. For 45 RPM records, use the included 45 RPM adapter if necessary.
2. **Place Record:** Carefully place your vinyl record on the platter.
3. **Lift Tonearm:** Use the cueing lever to gently lift the tonearm.
4. **Position Stylus:** Move the tonearm over the desired starting groove of the record.
5. **Lower Tonearm:** Slowly lower the cueing lever to gently place the stylus onto the record. The platter will begin to rotate automatically.
6. **Adjust Volume:** Use the volume knob to set your desired listening level.
7. **Stop Playback:** At the end of the record, the tonearm will automatically return to its rest position. Alternatively, use the cueing lever to lift the tonearm and return it manually.



Image: A visual guide indicating support for 7-inch, 10-inch, and 12-inch vinyl records, along with the 33/45 RPM speed settings.

4.2 Bluetooth Operation

The SoulBox S1 features Bluetooth input, allowing you to stream audio wirelessly from your smartphone, tablet, or other compatible devices to the system's speakers.

1. **Activate Bluetooth:** Switch the input mode on the turntable to Bluetooth. The Bluetooth indicator light will begin to flash.
2. **Pair Device:** On your smart device, enable Bluetooth and search for available devices. Select "SoulBox S1" from the list to pair.
3. **Stream Audio:** Once paired, you can play audio from your device, and it will be output through the SoulBox S1 speakers.

Note: The SoulBox S1's Bluetooth functionality is for input only. It cannot transmit audio from records to external Bluetooth speakers.



Image: A diagram depicting wireless Bluetooth streaming, showing a device transmitting audio to the SoulBox S1 system, indicating its input capability.

4.3 Phono/Line Out Switch

The SoulBox S1 includes a built-in switchable phono preamp. The Phono/Line Out switch on the rear panel allows you to select the appropriate output mode:

- **LINE Out:** Use this setting when connecting the turntable to an amplifier or receiver that has its own dedicated phono input.
- **PHONO Out:** Use this setting when connecting the turntable to an amplifier or receiver that does **not** have a dedicated phono input, or when using the built-in speakers. The internal preamp will boost the signal to line level.

5. MAINTENANCE

5.1 Cleaning

- **Dust Cover and Cabinet:** Wipe with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Stylus:** Use a soft brush designed for stylus cleaning, brushing gently from back to front.
- **Records:** Keep your records clean using a record brush and cleaning solution to prevent dust buildup and improve sound quality.

5.2 Stylus Replacement

The stylus (needle) is a delicate component and will wear out over time. A worn stylus can damage your records and degrade sound quality. Replace the stylus after approximately 300-500 hours of playback, or if you notice a significant drop in sound quality or increased distortion. Refer to the cartridge manufacturer's instructions for specific replacement procedures for the AT-3600L cartridge.

6. TROUBLESHOOTING

If you encounter issues with your SoulBox S1, please consult the following common troubleshooting steps:

- **No Power:** Ensure the power adapter is securely connected to both the turntable and a working wall outlet.
- **No Sound:**
 - Check that the speakers are correctly connected to the turntable.
 - Verify the volume knob is turned up.

- If using external speakers, ensure the Phono/Line Out switch is set correctly for your amplifier/receiver.

- **Distorted Sound:**

- Check that the stylus is clean and free of debris.
- Ensure the counterweight and anti-skating settings are correctly adjusted.
- Inspect the stylus for wear or damage; replace if necessary.

- **Skipping Records:**

- Ensure the turntable is placed on a stable, level surface.
- Verify the counterweight and anti-skating settings are correct.
- Clean the record and stylus.

- **Bluetooth Pairing Issues:**

- Ensure the turntable is in Bluetooth input mode.
- Turn off and on Bluetooth on your smart device.
- Move your device closer to the turntable.

If these steps do not resolve the issue, please contact Qlearsoul customer support.

7. SPECIFICATIONS

Feature	Specification
Model Name	SoulBox S1
Item Model Number	HP-H007
Product Dimensions	16.14 x 13.39 x 5.51 inches
Item Weight	17.81 pounds
Material	Metal, Plastic, Wood
Motor Type	DC Motor
Maximum Rotational Speed	33 1/3, 45 RPM
Power Consumption	70 Watts
Bookshelf Speaker Output	40.18W
Signal to Noise Ratio	75dB
Power Supply	AC 100-240V to DC 15V 2400mA
PHONO Output	2.5mV (1KHz-10Db, 33RPM)
LINE Output	180mV (1KHz-10Db, 33RPM)
Special Features	Adjustable Anti-Skate Control, Adjustable Counterweight, Built-In Preamp, Detachable Speakers, S-Shaped Tonearm

Compatible Devices

Smartphone, Tablet

Image: A visual representation of the SoulBox S1's technical specifications, including power consumption, speaker output, signal-to-noise ratio, power supply details, and physical dimensions.

8. WARRANTY AND SUPPORT

Qlearsoul is committed to providing quality products and customer satisfaction.

- **Warranty:** Your SoulBox S1 comes with a 24-month warranty from the date of purchase. Please refer to the included Warranty Card for full terms and conditions.
- **Return Policy:** We offer a 60-day return policy.
- **Customer Support:** For any questions, technical assistance, or warranty claims, please contact our 24/7 customer support team. Contact information can be found on the Warranty Card or our official website.



Image: Icons visually representing the 24-month warranty, 60-day return policy, and 24/7 customer support services offered for the product.