

## Donner S300

# Donner OURA S300 Digital Piano User Manual

Model: S300

## 1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Donner OURA S300 Digital Piano. Please read this manual thoroughly before using the instrument to ensure optimal performance and longevity.



Figure 1: Donner OURA S300 Digital Piano. This image displays the complete digital piano setup, including the 88-key keyboard, stand, and triple pedal unit.

## 2. PACKAGE CONTENTS

---

Before assembly, verify that all components are present in the package:

- Donner OURA S300 Digital Piano Unit
- Triple Sustain Pedal Unit
- Power Adapter
- USB Cable
- User Manual (this document)

## 3. SETUP AND ASSEMBLY

---

The Donner OURA S300 Digital Piano requires assembly. It is recommended that two people perform the assembly due to the weight of the main unit.

### 3.1 Assembly Steps

1. Unpack all components and place them on a soft, flat surface to prevent scratches.
2. Assemble the piano stand according to the included assembly guide. Ensure all screws are securely fastened.
3. Carefully place the main piano unit onto the assembled stand. Align the mounting points and secure the unit with the provided screws.
4. Connect the triple pedal unit cable to the designated port under the keyboard.
5. Connect the power adapter to the DC IN port on the rear panel and then to a power outlet.
6. If desired, connect the USB cable for MIDI connectivity to a computer or other device.

### 3.2 Connectivity Overview

# Rich Functionality And Connectivity



Figure 2: Rear Panel Connectivity. This image highlights the various input/output ports on the rear of the piano, including USB, Sustain, AUX IN/OUT, DC IN, and headphone jacks.

The rear panel provides various connection options:

- **USB MIDI:** Connects to a computer or smart device for MIDI data transfer.
- **Sustain Pedal Socket:** For connecting the included triple pedal unit.
- **AUX IN/OUT:** For connecting external audio sources or routing audio to external speakers/recording devices.
- **DC IN:** Power input for the included AC adapter.
- **6.35mm Headphone Jack (x2):** For private practice. Located on the bottom left side of the keyboard.



## 4. OPERATING INSTRUCTIONS

### 4.1 Power On/Off

Press the Power button located on the left side of the keyboard to turn the piano on or off.

### 4.2 Keyboard Touch and Sound

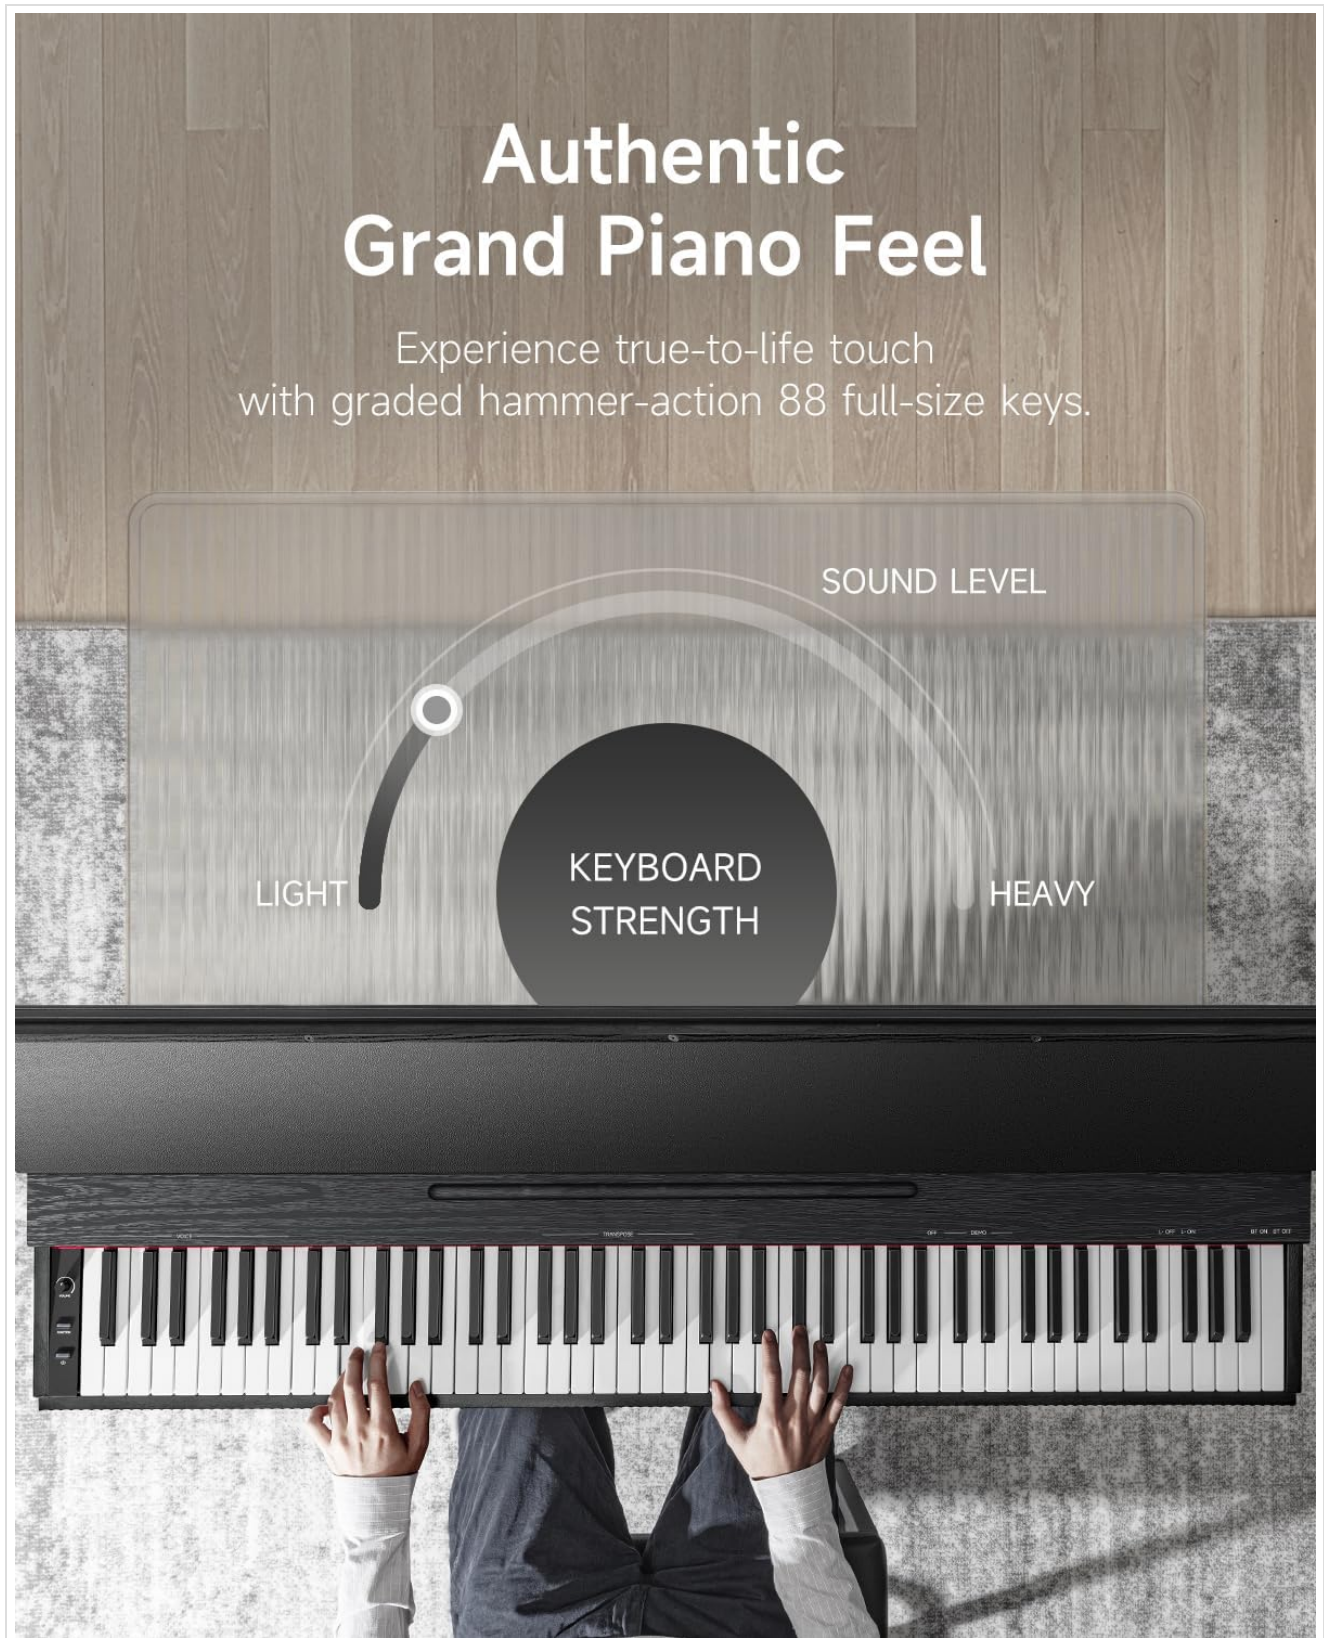


Figure 3: Authentic Grand Piano Feel. This graphic illustrates the graded hammer-action keys, showing how the keyboard strength varies from light to heavy across the 88 full-size keys, mimicking an acoustic grand piano.

The OURA S300 features 88 graded hammer-action keys, designed to replicate the feel and response of a traditional acoustic piano. The touch sensitivity can be adjusted to suit individual playing styles.

The instrument includes top-tier acoustic piano samples and a variety of other high-quality sounds, such as guitar, bass, and organ. The integrated 2\*15W speaker system delivers a rich and deep sound experience.

### 4.3 Functions and Features

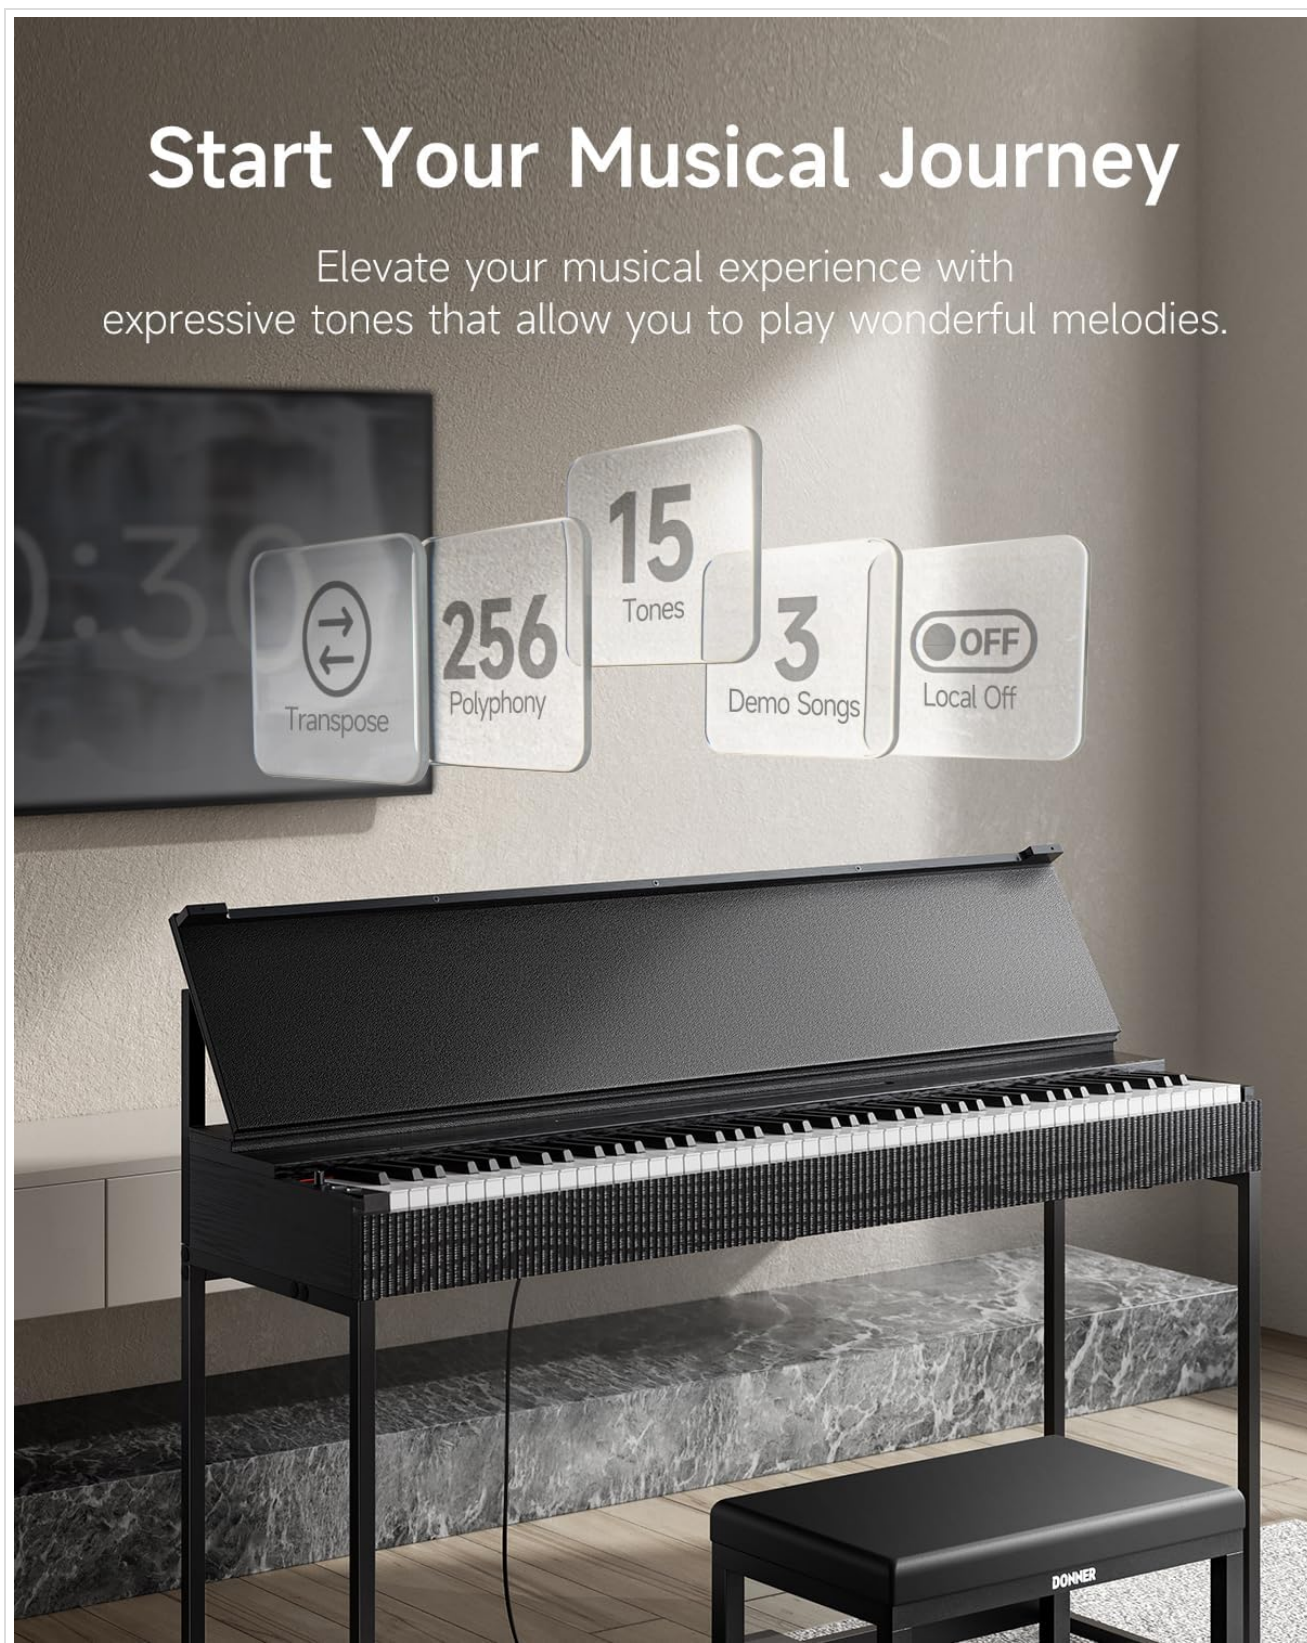


Figure 4: Key Features. This image highlights the main functional capabilities of the S300, including Transpose, 256 Polyphony, 15 Tones, 3 Demo Songs, and Local Off.

- **Polyphony:** 256-note polyphony allows for complex musical passages without note drop-out.
- **Tones:** Access 15 different instrument tones, including various piano sounds, organs, and strings.
- **Demo Songs:** Features 3 built-in original MIDI demo songs for listening or practice.
- **Transpose:** Adjust the pitch of the entire keyboard up or down in semitone steps.
- **Local Off:** Disables the internal sound generation while allowing MIDI output, useful when using the piano as a MIDI controller for external sound modules or software.
- **Volume Control:** Adjust the overall output volume using the dedicated knob.

#### 4.4 Pedal Functionality

The OURA S300 includes a triple pedal unit with half-pedal functionality for all three pedals. This allows for nuanced control over sustain, sostenuto, and soft pedal effects, enhancing expressive playing.

#### 4.5 Bluetooth Connectivity



# Explore More Possibilities

Multiple ways to enable fast connections, recordings and immersive practice.



Bluetooth



USB MIDI



Headphone



Figure 5: Expanded Possibilities with Connectivity. This image shows the piano connected via Bluetooth to a tablet running a music lesson app, and also highlights USB and headphone connections.

The piano supports Dual-Mode Bluetooth (MIDI+AUDIO). This enables:

- **Bluetooth MIDI:** Connect wirelessly to smartphones, tablets, or computers for use with music creation software, learning apps, or as a MIDI controller.
- **Bluetooth Audio:** Stream audio from your smart device through the piano's speakers, allowing you to play along with your favorite songs or backing tracks.

## 5. MAINTENANCE

---

To ensure the longevity and optimal performance of your Donner OURA S300 Digital Piano, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the piano's surface. For stubborn dirt, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid abrasive cleaners or solvents.
- **Dust Protection:** When not in use, cover the keyboard with a dust cover to prevent dust accumulation.
- **Environment:** Keep the piano away from direct sunlight, extreme temperatures, and high humidity. Avoid placing it near heat sources or in areas with significant temperature fluctuations.
- **Handling:** Avoid placing heavy objects on the keyboard or applying excessive force to the keys or pedals.

## 6. TROUBLESHOOTING

---

If you encounter issues with your Donner OURA S300, refer to the following common troubleshooting steps:

- **No Sound:**
  - Ensure the power adapter is securely connected and the piano is turned on.
  - Check the volume knob and ensure it is not set to minimum.
  - If headphones are connected, disconnect them to check speaker output.
  - Verify that 'Local Off' mode is not activated if you expect sound from the internal speakers.
- **Keys Not Responding / Uneven Volume:**
  - Ensure no foreign objects are lodged between the keys.
  - If specific keys consistently have low volume, contact customer support for assistance.
- **Pedals Not Working:**
  - Check that the pedal unit cable is securely connected to the correct port.
  - Ensure the pedal unit is placed on a stable surface.
- **Bluetooth Connection Issues:**
  - Ensure Bluetooth is enabled on both the piano and your smart device.
  - Try restarting both devices.
  - Ensure no other devices are actively connected to the piano via Bluetooth.

If the problem persists after attempting these steps, please contact Donner customer support.

## 7. SPECIFICATIONS

---

Feature	Specification
Model Name	S300
Number of Keys	88
Key Action	Graded Hammer Standard, Hammer Action
Polyphony	256



Feature	Specification
Speakers	2 x 15 W
Dimensions (L x W x H)	50.75" x 15" x 36.6" (128.9 cm x 37.9 cm x 92.8 cm)
Item Weight	34.4 kg (75.7 lbs)
Connectivity	Bluetooth (MIDI+AUDIO), USB MIDI, AUX IN/OUT, 2x 6.35mm Headphone Jacks
Special Features	Half-pedal support, LOCAL OFF, Transpose
Power Source	AC Power Adapter

# Not Just A Digital Piano, But A Piece of Home Art








Figure 6: Product Dimensions. This image provides a visual representation of the piano's dimensions in both centimeters and inches.

## 8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or visit the official Donner website. If you require technical assistance or have questions not covered in this manual, please contact Donner customer support.

**Donner Customer Support:** [Visit the Donner Store on Amazon](#)

## Related Documents - S300

 The image shows the cover of the Donner OURA Piano S300 User Manual. It features the Donner logo at the top, followed by 'USER MANUAL' in large, bold letters. Below that, it says 'DONNER OURA PIANO S300' and 'Thank You for Choosing DONNER'.	<p><a href="#">Donner OURA Piano S300 User Manual: Setup, Operation, and Maintenance</a></p> <p>Explore the Donner OURA Piano S300 digital piano with this comprehensive user manual. Learn about its 88-key graded hammer keyboard, Bluetooth/MIDI features, setup, safe operation, and maintenance. Ideal for musicians seeking detailed guidance on their Donner digital piano.</p>
 The image shows the cover of the Donner OURA PIANO R300 User Manual. It features the Donner logo at the top, followed by 'USER MANUAL' in large, bold letters. Below that, it says 'OURA PIANO R300' and 'Thank You for Choosing DONNER'.	<p><a href="#">Donner OURA PIANO R300 User Manual</a></p> <p>Comprehensive user manual for the Donner OURA PIANO R300 digital piano, covering safety instructions, product details, assembly, ports, functions, and specifications.</p>
 The image shows the cover of the Donner DDP-400 Digital Piano User Manual. It features the Donner logo at the top, followed by 'USER MANUAL' in large, bold letters. Below that, it says 'DDP-400 DIGITAL PIANO'.	<p><a href="#">Donner DDP-400 Digital Piano User Manual</a></p> <p>This user manual provides comprehensive instructions for the Donner DDP-400 Digital Piano. It covers setup, assembly, features, operation, troubleshooting, and technical specifications for this 88-key weighted keyboard instrument.</p>
 The image shows the cover of the Donner DDP-100S Digital Piano User Manual. It features the Donner logo at the top, followed by 'USER MANUAL' in large, bold letters. Below that, it says 'DDP-100S DIGITAL PIANO'.	<p><a href="#">Donner DDP-100S Digital Piano User Manual</a></p> <p>Comprehensive user manual for the Donner DDP-100S Digital Piano, detailing setup, product parameters, features, assembly, voice and rhythm lists, demo songs, and important safety information.</p>
 The image shows the cover of the Donner DDP-200 88 Keys Digital Piano User Manual. It features the Donner logo at the top, followed by 'USER MANUAL' in large, bold letters. Below that, it says 'DDP-200 88 KEYS DIGITAL PIANO'.	<p><a href="#">Donner DDP-200 88 Keys Digital Piano User Manual</a></p> <p>Comprehensive user manual for the Donner DDP-200 88 Keys Digital Piano, covering assembly, panel instructions, connections, functions, maintenance, security, and troubleshooting.</p>





**РУКОВОДСТВО  
ПОЛЬЗОВАТЕЛЯ**

Donner OURA Piano **S100**  
Аналоговый цифровой синтезатор с 88 клавишами

[Donner OURA Piano S100 User Manual](#)

Comprehensive user manual for the Donner OURA Piano S100 digital piano, detailing safety precautions, setup instructions, technical specifications, connection guides, operational features, maintenance advice, and warranty information.