

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Donner](#) /

› [Donner OURAS100 Digital Piano User Manual](#)

Donner OURAS100

Donner OURAS100 Digital Piano User Manual

Model: OURAS100

1. INTRODUCTION

Thank you for choosing the Donner OURAS100 Digital Piano. This manual provides essential information for setting up, operating, and maintaining your instrument. Please read it thoroughly to ensure proper use and to maximize your musical experience.

Your browser does not support the video tag.

Video: More Than Music | Donner OURAS100 piano are coming! This video provides an overview of the Donner OURAS100 piano series, highlighting its design and integration into home environments.

2. SAFETY INSTRUCTIONS

- **Power Supply:** Use only the provided power adapter. Ensure the voltage matches your local power supply. Unplug the instrument during lightning storms or when unused for long periods.
- **Ventilation:** Do not block any ventilation openings. Ensure adequate airflow around the instrument to prevent overheating.
- **Water & Moisture:** Do not expose the instrument to rain, moisture, or excessive humidity. Keep liquids away from the piano.
- **Heat Sources:** Keep away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- **Cleaning:** Clean only with a dry cloth. Avoid using liquid cleaners or aerosols.
- **Handling:** Handle with care. Avoid dropping or subjecting the instrument to strong impacts.

3. PACKAGE CONTENTS

Verify that all items are present in the package before assembly:

- Donner OURAS100 Digital Piano Unit

- Piano Legs (2 pieces)
- Triple Pedal Unit
- Power Adapter
- Sheet Music Stand
- Assembly Screws

4. SETUP

Follow these steps to assemble your Donner OURA S100 Digital Piano:

1. Carefully unbox all components and place them on a soft, flat surface to prevent scratches.
2. Attach the two piano legs to the underside of the main piano unit using the provided screws. Ensure they are securely fastened.
3. Connect the triple pedal unit cable to the designated port on the underside of the piano.
4. Insert the power adapter into the DC input port on the back of the piano and plug it into a power outlet.
5. Attach the sheet music stand by screwing it into the designated holes on the top surface of the piano.



Image: The Donner OURA S100 Digital Piano with its minimalist design, showing the 88-key weighted keyboard, three-pedal unit, and sleek legs. This image displays the piano in its complete assembled form, ready for use.

Your browser does not support the video tag.

Video: How to assemble OURA piano S100? This official video from DonnerDirect provides a step-by-step guide on assembling the OURA S100 digital piano, including attaching the legs and setting up the accessories.

5. OPERATING INSTRUCTIONS

Power On/Off

Press the power button located on the left side of the keyboard to turn the piano on or off. The power indicator light will illuminate when the piano is on. The piano features an auto-off function to conserve power if left idle for an extended period.

Volume Control

Adjust the master volume using the rotary knob on the left side of the keyboard. Turn clockwise to increase volume and counter-clockwise to decrease.

Key Features & Touch Sensitivity

The OURA S100 features an 88-key graded hammer weighted keyboard, simulating the feel of an acoustic grand piano. The touch sensitivity allows for dynamic expression; playing keys with more pressure produces louder sounds, while lighter touches result in softer tones.

Simulated Grand Piano Touch

Each touch and resistance are optimized for beginners.



Image: A close-up view of hands playing the Donner OURAS100, emphasizing the realistic feel of the graded hammer standard keyboard, optimized for beginners.

Voice/Tone Selection

The piano boasts 15 high-quality tones, including top-notch acoustic piano samples, guitar, bass, and organ. Refer to the user manual for specific key combinations to select different voices.

Exclusive Donner Demo Tracks

Explore the 3 built-in original MIDI demo songs, showcasing various musical styles. These demos are designed to highlight the instrument's sound capabilities.

Your browser does not support the video tag.

Video: DEMO2: OURA S100 Digital Piano Sound Sample. This video provides a sound demonstration of the Donner OURA S100 digital piano, showcasing its various tones and sound quality.

Your browser does not support the video tag.

Video: DEMO1: OURA S100 Digital Piano Sound Sample. This video offers another sound sample of the Donner OURA S100 digital piano, highlighting its acoustic piano samples.

6. FEATURES

- **Simulated Grand Piano Touch:** The graded hammer standard keyboard accurately simulates the touch and response of an acoustic piano, optimized for beginners.
- **Pure Sound and High-Quality Tones:** Features top-tier acoustic piano samples and exceptional quality sounds, including 256 polyphony and 15 tones.
- **Exclusive Donner Demo Tracks:** Includes 3 built-in original MIDI demo songs in various styles.
- **Dual-Mode Bluetooth (MIDI+AUDIO):** Easily connect wirelessly to smartphones and tablets for seamless music creation and playback.
- **LOCAL OFF Function:** Allows connection to third-party devices (e.g., DAW) and routing audio through AUX IN for tone expansion.
- **Scandinavian Minimalist Design:** Compact, space-saving design that complements modern decor.

Pure Sound and High-Quality Tones

Features top-tier acoustic piano samples.

256 Polyphony

15 Tones



Image: An overhead shot emphasizing the pure sound and high-quality tones of the Donner OURAS100, featuring 256 polyphony and 15 tones.

Exclusive DONNER Demo Tracks

Built-in Original Demo in various styles



Classical



Pop



Jazz

Image: A woman playing the Donner OURAS100, showcasing the exclusive Donner Demo Tracks with options for Classical, Pop, and Jazz styles.



Scandinavian Style with a Compact & Portable Design

Image: The Donner OURAS100 digital piano with its dimensions, illustrating its Scandinavian minimalist style and compact, portable design.

Your browser does not support the video tag.

Video: Donner OURAS100 | Merge Sound Aesthetics with Scandinavian Minimalist Design. This video highlights the aesthetic and design philosophy behind the Donner OURAS100, emphasizing its blend of sound quality and minimalist style.

Your browser does not support the video tag.

Video: Donner OURAS100 | Where Melodies Align with Your Home's Style. This video showcases how the Donner OURAS100 integrates seamlessly into various home decor styles, emphasizing its aesthetic appeal.

7. CONNECTIVITY

The Donner OURA S100 offers versatile connectivity options:

- **MIDI USB:** Connect to computers or other MIDI devices for recording, music production, or educational software.
- **AUX IN/OUT:** Use AUX IN to connect external audio sources (e.g., MP3 player) and play along. Use AUX OUT to connect to external speakers or audio interfaces.
- **Sustain Pedal Socket:** For connecting the included triple pedal unit or an optional single sustain pedal.
- **Headphone Jacks (6.35mm):** Two headphone jacks are provided for private practice or duet sessions without disturbing others.

Rich Connectivity



Image: A detailed view of the Donner OURAS100's rich connectivity panel, including MIDI USB, AUX IN, AUX OUT, Sustain Pedal Socket, and Power Interface.

8. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your digital piano:

- Cleaning:** Use a soft, dry cloth to wipe down the keys and surfaces. For stubborn dirt, slightly dampen the cloth with water and mild soap, then wipe dry immediately. Avoid abrasive cleaners.
- Storage:** Store the piano in a cool, dry place away from direct sunlight, extreme temperatures, and high

humidity.

- **Protection:** When not in use, consider covering the piano with a dust cover to protect it from dust and debris.

9. TROUBLESHOOTING

If you encounter any issues, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
No Sound / Distorted Sound	Volume too low; cables not connected properly; LOCAL OFF function enabled.	Increase volume; check all cable connections (power, pedals, AUX); disable LOCAL OFF function if using internal speakers.
Bluetooth Connection Issues	Bluetooth not enabled; device out of range; interference.	Ensure Bluetooth is enabled on piano and device; move device closer; minimize interference from other electronic devices.
Keys feel unresponsive	Dust or debris under keys; internal issue.	Gently clean around keys; if problem persists, contact customer support.

10. SPECIFICATIONS

Feature	Description
Model Name	S100
Number of Keys	88
Key Type	Graded Hammer Weighted Keyboard
Dimensions (D x W x H)	50.8"D x 15"W x 35.7"H
Item Weight	46.4 pounds (21.1 Kilograms)
Connectivity Technology	Bluetooth, Auxiliary, USB (MIDI USB)
Power Source	Corded Electric
Headphones Jack	6.35mm Jack (x2)
Skill Level	Beginner
Special Features	Weighted Keys, LOCAL OFF, Headphone Jack, Transpose

11. WARRANTY AND SUPPORT

Your Donner OURA S100 Digital Piano comes with a 30-day easy returns policy. For any product-related inquiries, technical support, or warranty claims, please visit the official Donner Store or contact Donner customer service directly.

Donner Store: Visit the Donner Store on Amazon


Additional protection plans (3-Year and 4-Year) may be available for purchase separately.

Related Documents - OURA S100

 The image shows the front cover of the 'Donner OURA Piano S300 User Manual'. It features the 'DONNER' logo at the top, followed by the text 'USER MANUAL' in large, bold, serif letters. Below that, it says 'DONNER OURA PIANO S300' and 'Thank You For Choosing DONNER'. At the bottom, there is some smaller text and a barcode.	<p>Donner OURA Piano S300 User Manual: Setup, Operation, and Maintenance</p> <p>Explore the Donner OURA Piano S300 digital piano with this comprehensive user manual. Learn about its 88-key graded hammer keyboard, Bluetooth/MIDI features, setup, safe operation, and maintenance. Ideal for musicians seeking detailed guidance on their Donner digital piano.</p>
 The image shows the front cover of the 'Donner OURA PIANO R300 User Manual'. It features the 'DONNER' logo at the top, followed by the text 'USER MANUAL' in large, bold, serif letters. Below that, it says 'OURA PIANO R300' and 'User Manual Manual d'utilisation Bedienungsanleitung Manual del Usuario'. At the bottom, there is some smaller text and a barcode.	<p>Donner OURA PIANO R300 User Manual</p> <p>Comprehensive user manual for the Donner OURA PIANO R300 digital piano, covering safety instructions, product details, assembly, ports, functions, and specifications.</p>
 The image shows the front cover of the 'Donner OURA Piano S100 User Manual'. It features the 'DONNER' logo at the top, followed by the text 'РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ' (User Manual) in large, bold, serif letters. Below that, it says 'Donner OURA Piano S100' and 'User Manual Manual d'utilisation Bedienungsanleitung Manual del Usuario'. At the bottom, there is some smaller text and a barcode.	<p>Donner OURA Piano S100 User Manual</p> <p>Comprehensive user manual for the Donner OURA Piano S100 digital piano, detailing safety precautions, setup instructions, technical specifications, connection guides, operational features, maintenance advice, and warranty information.</p>
 The image shows the front cover of the 'Donner DDP-400 Digital Piano User Manual'. It features the 'DONNER' logo at the top, followed by the text 'USER MANUAL' in large, bold, serif letters. Below that, it says 'DDP-400 DIGITAL PIANO'. At the bottom, there is some smaller text and a barcode.	<p>Donner DDP-400 Digital Piano User Manual</p> <p>This user manual provides comprehensive instructions for the Donner DDP-400 Digital Piano. It covers setup, assembly, features, operation, troubleshooting, and technical specifications for this 88-key weighted keyboard instrument.</p>

 DONNER™ USER MANUAL DDP-200 88 KEYS DIGITAL PIANO	<p><u>Donner DDP-200 88 Keys Digital Piano User Manual</u></p> <p>Comprehensive user manual for the Donner DDP-200 88 Keys Digital Piano, covering assembly, panel instructions, connections, functions, maintenance, security, and troubleshooting.</p>
 DONNER™ USER MANUAL DDP-100S DIGITAL PIANO	<p><u>Donner DDP-100S Digital Piano User Manual</u></p> <p>Comprehensive user manual for the Donner DDP-100S Digital Piano, detailing setup, product parameters, features, assembly, voice and rhythm lists, demo songs, and important safety information.</p>

Documents - Donner – OURAS100

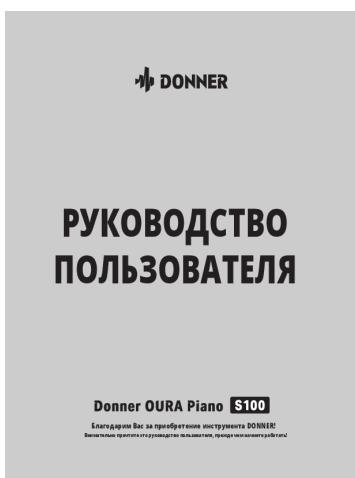

[pdf]

РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ Питание Адаптер питания Используйте только входящий в комплект адаптер Donner Не используйте его для других устройств Donner Oura S100 Руководство пользователя ?%mir.ru upload iblock 316 ользователя на Русскомзыке srsltid AfmBOopyC4L13Jy4n9vAwLj4SZ4STgBbPcYL7 qTTF9yrJSLnNytqsC ||| DONNER : / - Donner - , - , . . - Donner . : - , . . - , . . - lang:i-klingon score:18 filesize: 2.32 M page count: 8 document date: 2025-04-24



[Donner OURA Piano S100 User Manual](#)

Comprehensive user manual for the Donner OURA Piano S100 digital piano, detailing safety precautions, setup instructions, technical specifications, connection guides, operational features, maintenance advice, and warranty information.

lang:i-klingon score:18 filesize: 2.32 M page_count: 8 document date: 2025-04-24