

## AUTUCU T1SNA

# AUTUCU T1SNA 3-Quart Electric Hot Pot & Wok Instruction Manual

Model: T1SNA

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your AUTUCU T1SNA Electric Hot Pot & Wok. Retain this manual for future reference.

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the main unit (pot with handle) in water or other liquids.
- Keep the power cord away from hot surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Dry Boil Protection:** The T1SNA is equipped with a dry boil protection feature. It automatically stops heating when the pot's temperature reaches approximately 395°F (±10°F) and resumes once the temperature decreases. Avoid operating the appliance without any food or liquid inside.
- To maintain the non-stick coating's durability, avoid using metal utensils. Use only silicone, wooden, or plastic utensils.

## 2. PRODUCT COMPONENTS

Your AUTUCU T1SNA Electric Hot Pot & Wok includes the following components:

- Electric Hot Pot & Wok (Main Unit)
- Glass Lid with Handle
- Stainless Steel Steamer Basket
- Silicone Spatula

- Detachable Power Cord

# HIGH-POWER ELECTRIC COOKER

✓ Steam ✓ Sear&saute ✓ Deep-fry ✓ Hot Pot ✓ Pan-fry



Ramen



Hot Pot



Steak



Soup

## 3 QUART



Image: The AUTUCU T1SNA Electric Hot Pot and Wok, showcasing its main unit, glass lid, steamer basket, and included silicone spatula.

## 3. SETUP AND FIRST USE

### 3.1 Connecting the Power Cord

The AUTUCU T1SNA features a detachable power cord for convenience and safety.

1. Locate the power input port at the end of the handle on the main unit.
2. Align the detachable power cord connector with the input port and push firmly until it clicks securely into place.
3. Plug the other end of the power cord into a grounded electrical outlet.

# 10 INCHES WIDE-MOUTH PAN ENABLES EFFORTLESS COOKING



Image: A hand connecting the detachable power cord to the handle of the electric hot pot, highlighting the secure connection mechanism.

## 3.2 Initial Cleaning

Before first use, wash the pot, glass lid, steamer basket, and silicone spatula with warm, soapy water. Rinse thoroughly and dry completely.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power Adjustment and Smart Indicator Light

The AUTUCU T1SNA offers three power settings for versatile cooking:

- **400W:** Low heat for gentle simmering or keeping food warm.
- **800W:** Medium heat for general cooking, such as sautéing or boiling.
- **1200W:** High heat for rapid boiling, frying, or searing.

Use the slide switch on the handle to select your desired power level. The handle features a built-in indicator light that changes from blue to red when the oil temperature reaches approximately 180°C (356°F), indicating the ideal cooking temperature for enhanced flavor and reduced smoke.

# T1SNA NONSTICK SURFACE

Clean in seconds with a damp sponge



Image: The smart indicator light on the handle, illustrating its color change from blue to red to signal optimal cooking temperature.

## 4.2 Versatile Cooking Functions


The AUTUCU T1SNA supports various cooking methods:

- **Frying & Sautéing:** Use medium to high heat for stir-fries, eggs, or searing meats.
- **Boiling:** Ideal for noodles, soups, or hot pot dishes.
- **Steaming:** Utilize the included steamer basket for vegetables, dumplings, or seafood.
- **Stewing:** Prepare hearty stews and braised dishes on a lower heat setting.

# COMPACT YET COMPLETE FOR DAILY COOKING



≈

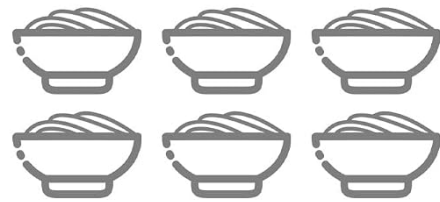

6 bowls of ramen

Image: The multi-function pot demonstrating its capability to prepare a variety of meals, including pasta, soup, hot pot, and dumplings.

## 4.3 Official Product Video

Your browser does not support the video tag.

Video: An official demonstration of the AUTUCU T1SNA Electric Hot Pot, showcasing its various cooking functions and ease of use.

## 5. USING THE STEAMER BASKET

To use the stainless steel steamer basket:

1. Add an appropriate amount of water to the main pot, ensuring it does not touch the bottom of the steamer basket.
2. Place the steamer basket into the pot.
3. Arrange your food (e.g., vegetables, dumplings, seafood) in the steamer basket.
4. Cover with the glass lid and select the desired power setting to bring the water to a boil and steam your food.

# SMART INDICATOR LIGHT DESIGN



Image: The electric hot pot with the stainless steel steamer basket in place, ready for steaming various ingredients.

## 6. CARE AND MAINTENANCE

### 6.1 Cleaning the Non-Stick Surface

The non-stick coating ensures easy food release and cleaning. To clean:

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wipe the interior with a soft sponge or cloth and warm, soapy water.
- Rinse thoroughly and dry completely.
- Do not use abrasive cleaners, scouring pads, or metal utensils, as these can damage the non-stick coating.
- The main unit is not dishwasher safe. The glass lid, steamer basket, and silicone spatula may be hand-washed.

# MULTI-FUNCTION POT

Cook and Steam in One

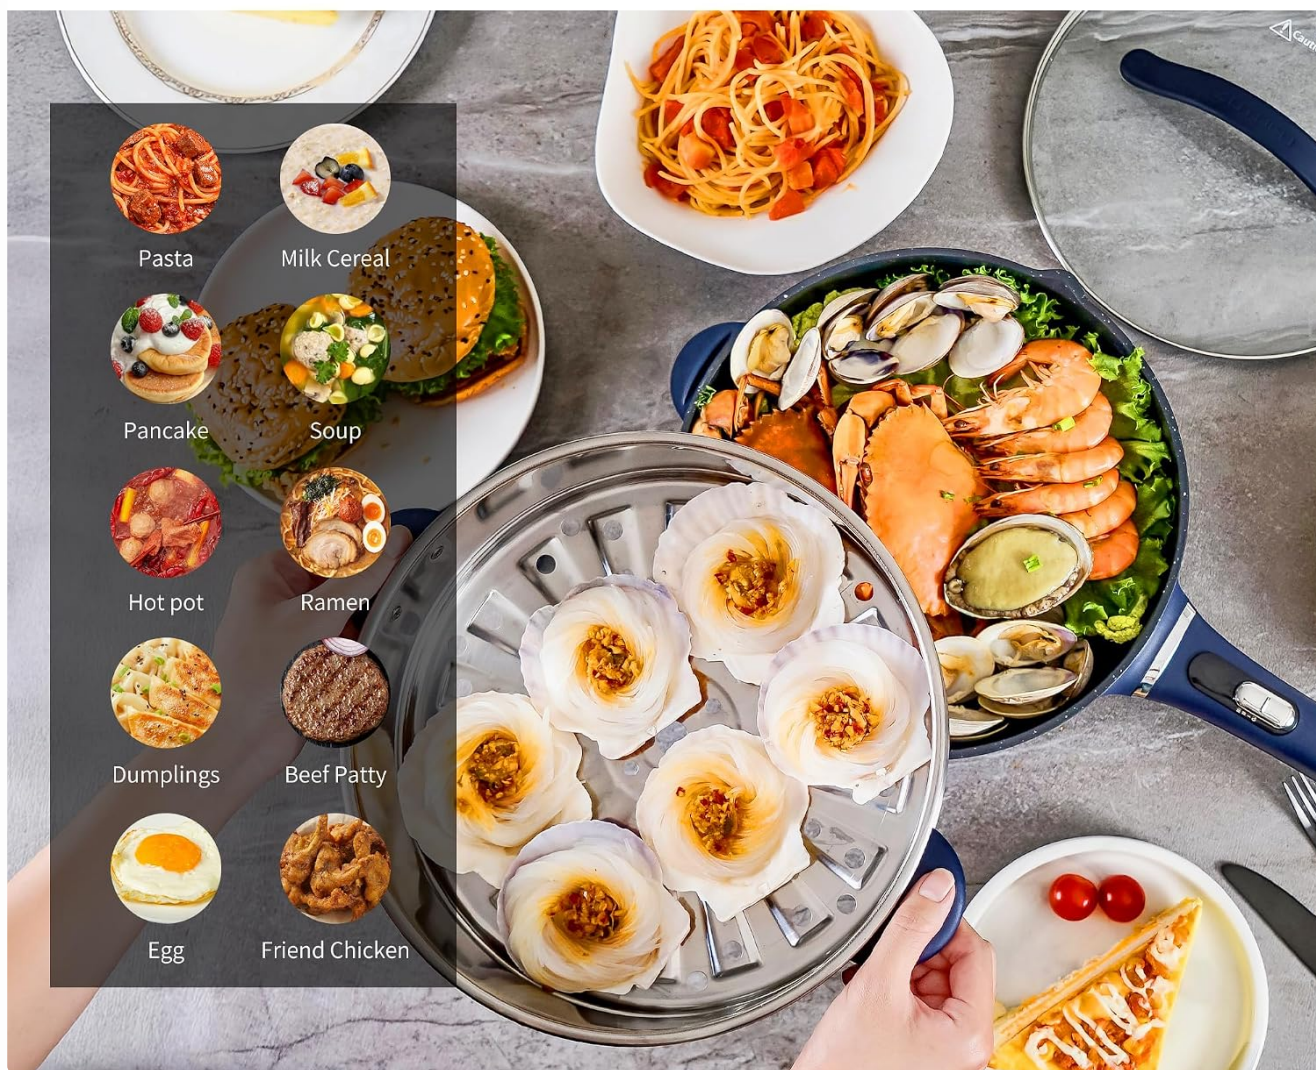


Image: A hand gently cleaning the non-stick interior of the electric hot pot with a soft sponge, demonstrating easy maintenance.

## 7. PRODUCT SPECIFICATIONS

| Feature         | Specification                         |
|-----------------|---------------------------------------|
| Brand           | AUTUCU                                |
| Model Name      | T1SNA                                 |
| Capacity        | 3 Liters                              |
| Material        | Non-Stick (Coating)                   |
| Power Settings  | 400W, 800W, 1200W                     |
| Special Feature | Power Adjustment, Dry Boil Protection |

|                     |                |
|---------------------|----------------|
| Maximum Temperature | 180°C (356°F)  |
| Dishwasher Safe     | No (Main Unit) |

## 8. TROUBLESHOOTING

### 8.1 Appliance Stops Heating

If the appliance suddenly stops heating, it may be due to the dry boil protection activating. This safety feature automatically cuts power if the pot's temperature exceeds 395°F (±10°F) without sufficient liquid or food.

- **Solution:** Unplug the appliance and allow it to cool down. Check if there is enough liquid or food in the pot. Once cooled and refilled, the appliance should resume normal operation.

## 9. WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or service inquiries, please refer to the documentation included with your purchase or contact AUTUCU customer service directly. Contact details are typically available on the product packaging or the official AUTUCU website.

© 2026 AUTUCU. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**