

FJAZAAGFA

Convector Heater User Manual

Model: FJAZAAGFA

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Convector Heater. Designed for optimal warmth and comfort, this heater features 3600 circulation heating, adjustable heat settings, and silent operation, making it suitable for various indoor environments such as homes, offices, and bedrooms. Please read this manual thoroughly before use and retain it for future reference.



Figure 1: Front view of the Convector Heater.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Always use the handle when moving this heater.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater, and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- This heater is equipped with an automatic shut-off feature for tip-over protection and overheat protection. If the heater tips over or overheats, it will automatically shut down. Unplug the heater and allow it to cool before restarting.
- The heater is constructed from fire-retardant ABS material for enhanced safety.

WITH OVERHEATING & TIP-OVER PROTECTION

The convector heaters will automatically shut down after dumps or overheat, ensuring safe use



Figure 2: Illustration of the heater's overheating and tip-over protection features.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Convector Heater.

PRODUCT INTRODUCTION



Figure 3: Labeled components of the Convector Heater.

- **Adjustable Knob:** Controls the thermostat and heat settings.
- **Hot Air Outlet:** Where heated air is expelled.
- **Convenient Handle:** For easy portability.
- **Wall Mount Hole:** For optional wall-mounted installation.
- **Cold Wind Import:** Air intake vents for convection heating.
- **Anti-slip Base:** Provides stability for free-standing use.

SETUP AND INSTALLATION

Free-Standing Installation

For free-standing use, attach the anti-slip bases (feet) to the bottom of the heater. Ensure they are securely fastened to provide stability. Place the heater on a flat, stable, and non-combustible surface.



Figure 4: Packaging contents, showing the heater, manual, and detachable feet for free-standing setup.

Wall-Mounted Installation

The heater can also be wall-mounted. Use the designated wall mount holes on the back of the unit. Ensure the wall is suitable for supporting the heater's weight and that proper mounting hardware (not included) is used. Consult a qualified professional if unsure about wall mounting.

Placement Guidelines

- Ensure adequate clearance around the heater for proper air circulation.
- Do not place the heater directly under a power outlet.
- Avoid placing the heater in areas with high humidity or near water sources.

OPERATING INSTRUCTIONS

Powering On/Off

1. Plug the heater into a suitable electrical outlet (120V AC).
2. To turn the heater ON, rotate the lower knob (heat settings) from the "0" position to your desired heat level.
3. To turn the heater OFF, rotate the lower knob back to the "0" position and unplug the unit from the power outlet.

Adjusting Heat Settings

The heater offers three heat settings:

- **I (750W)**: Low heat setting for gentle warmth or smaller spaces.
- **II (1050W)**: Medium heat setting for moderate warmth.
- **III (1800W)**: High heat setting for rapid heating or larger spaces.

Rotate the lower knob to select the desired heat setting.

Setting the Thermostat

The upper knob controls the adjustable thermostat. This allows you to set your desired room temperature.

1. Turn the lower knob to the desired heat setting (I, II, or III).
2. Rotate the upper thermostat knob clockwise to increase the desired temperature, or counter-clockwise to decrease it.
3. The heater will operate until the set temperature is reached, then automatically cycle on and off to maintain that temperature.



Figure 5: Close-up of the control knobs for thermostat and heat settings.

3600 Circulation Heating

This heater utilizes convection technology to distribute heat rapidly and evenly throughout the room. Cold air enters the bottom of the heater, is warmed, and then rises and disperses from the top, creating a continuous circulation for efficient and uniform heating.

360° CIRCULATION HEATING BRING WARM TO YOUR FAMILY

Based on the principle that thermal air is from bottom to top, this product is designed with convection heating.

Cold air enters the bottom of the heater and becomes thermal airflow, dispersing from the top of the machine and circulating in the room, to achieve the overall heating effect with efficient temperature increase and uniformity.



Figure 6: Visual representation of the 3600 circulation heating principle.

Silent Operation

The Convector Heater is designed for silent operation, producing no noise, radiation, or dry air. This makes it ideal for environments where quiet is preferred, such as bedrooms or nurseries.



Figure 7: The heater's silent and non-radiative operation, suitable for sensitive users.

MAINTENANCE

Cleaning

- Always unplug the heater and allow it to cool completely before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the heater.
- Do not use abrasive cleaners or solvents as they may damage the surface.
- Do not immerse the heater in water or allow water to drip into the interior.
- Periodically clean the air intake and outlet vents with a vacuum cleaner or soft brush to remove dust and debris.

Storage

When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	<ul style="list-style-type: none">Not plugged in securely.Power outlet is not functioning.Overheat protection activated.Tip-over protection activated.	<ul style="list-style-type: none">Ensure the power cord is firmly plugged into a working outlet.Check the circuit breaker or try another outlet.Unplug the heater, allow it to cool for 10-15 minutes, then plug it back in.Ensure the heater is on a flat, stable surface. If it tipped, reset it and plug it back in after cooling.
Heater produces insufficient heat.	<ul style="list-style-type: none">Heat setting is too low.Thermostat setting is too low.Room size is too large for the selected setting.	<ul style="list-style-type: none">Increase the heat setting (I, II, or III).Increase the thermostat setting.Ensure the heater is appropriately sized for the room.
Heater cycles on and off frequently.	<ul style="list-style-type: none">Thermostat set too high for current room temperature.Obstruction of air vents.	<ul style="list-style-type: none">Lower the thermostat setting slightly.Ensure air vents are clear of dust and obstructions.

SPECIFICATIONS

Feature	Detail
Brand	Generic
Model Number	FJAZAAGFA
Material	ABS Fire-retardant
Heat Settings	750W (Low), 1050W (Medium), 1800W (High)
Heating Method	Convection Heating (3600 Circulation)
Voltage	120V AC
Installation Options	Free-standing or Wall-mounted
Safety Features	Auto Shut-off, Tip-over Protection, Overheat Protection
Special Features	Adjustable Temperature, Manual Thermostat, Fast Heating, Noiseless
Product Dimensions	3"D x 2"W x 1"H (Note: This seems to be a placeholder or incorrect dimension, actual visual suggests larger)
Item Weight	1.76 ounces (Note: This seems to be a placeholder or incorrect weight, actual visual suggests heavier)

Note: Product dimensions and weight provided in the source data (3"D x 2"W x 1"H and 1.76 ounces) appear to be placeholder values and may not reflect the actual physical size and weight of the heater as depicted in images. Please refer to the product packaging for accurate specifications.

PRODUCT SIZE

(WITH UK/EU Plug)



Figure 8: Product dimensions (520mm x 330mm x 160mm).

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

Protection plans are available for extended coverage. Please refer to the retailer's website for details on available protection plans.

