

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ROBUD](#) /
- › [ROBUD 7 in 1 Pikler Triangle Set User Manual](#)

ROBUD RB-WF002

ROBUD 7 in 1 Pikler Triangle Set User Manual

Model: RB-WF002 | Brand: ROBUD

1. INTRODUCTION

Thank you for choosing the ROBUD 7 in 1 Pikler Triangle Set. This versatile wooden climbing toy is designed to support your child's physical development, independence, and creativity through active play. Inspired by Montessori principles, this set offers multiple configurations to engage toddlers in climbing, sliding, and exploring in a safe indoor environment.



Image: The complete ROBUD 7 in 1 Pikler Triangle Set, showcasing the triangle, ramp, rope net, and arch climber components assembled together.

This manual provides essential information for the safe assembly, operation, and maintenance of your Pikler Triangle Set. Please read it thoroughly before use and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

WARNING: Adult supervision is required at all times during use of this product. Failure to supervise children can result in serious injury.

- Ensure all components are securely fastened before each use.
- Do not exceed the maximum weight capacity of **132 pounds (60 kg)**.
- Place the climbing set on a flat, stable, and non-slip surface.
- Keep the play area clear of obstacles and other hazards.
- Regularly inspect the product for any signs of wear, damage, or loose parts. Discontinue use if any damage is found.
- This product is intended for indoor use only.

- Keep small children away from the assembly area to prevent choking hazards from small parts.



Image: Detailed views highlighting the product's construction from naturally sturdy wood, secure connection points, and smooth, rounded edges for enhanced safety.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Foldable Pikler Triangle Frame
- Climbing Ramp / Slide Board
- Rope Net Attachment
- Arch Climber / Rocker
- Assembly Hardware (screws, nuts, tools)
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

The ROBUD 7 in 1 Pikler Triangle Set is designed for straightforward assembly. Please follow the detailed, step-by-step instructions provided in the separate assembly guide included in your package.

- Unpack all components and lay them out on a clean, soft surface to prevent scratches.
- Identify each part using the provided parts list in the assembly guide.
- Follow the numerical sequence of steps in the assembly guide carefully.
- Ensure all screws and fasteners are tightened securely, but do not overtighten.
- Once assembled, perform a stability check to ensure the structure is firm and all connections are secure.

5. OPERATING INSTRUCTIONS & PLAY CONFIGURATIONS

The 7-in-1 design allows for various play configurations to stimulate different aspects of your child's development, including balance, athleticism, exercise, and problem-solving. Always ensure the chosen configuration is stable and safe before allowing children to play.



Image: An illustrative diagram showcasing the seven distinct play modes: Secret Base, Climbing Wall, Slide, Rope Net, Arch Bridge, Climbing Ladder, and Swing Seat.

Common Configurations:

- **Pikler Triangle with Ramp:** Attach the ramp to the triangle for climbing up or sliding down. The ramp can be adjusted to different heights.
- **Arch Climber / Rocker:** Use the arch independently as a rocker or connect it to the triangle to form a tunnel or bridge.
- **Rope Net:** The rope net provides a challenging climbing surface, enhancing grip strength and coordination.
- **Combined Structures:** Connect the triangle, ramp, and arch in various ways to create more complex climbing structures, tunnels, and bridges.

THE ALL-IN-ONE SPORTS CENTER FOR CHILDREN'S GROWTH



Balance



Athleticism



Exercise



Adventure



Socialization



Image: A young child enjoying the slide configuration of the Pikler Triangle Set, demonstrating one of its active play options.

DISCOVER THE SECRET HIDEOUT

Dream, create, and explore in their own private sanctuary.



Image: A child crawling through the arch climber, which can be used as a tunnel or a base for imaginative play.

6. MAINTENANCE AND STORAGE

Cleaning:

- Wipe down all wooden surfaces with a soft, damp cloth.
- Avoid using abrasive cleaners or harsh chemicals, as these can damage the wood finish.
- Ensure the product is completely dry before storing or allowing children to play on it.

Storage:

The ROBUD Pikler Triangle Set features a foldable design for convenient storage, making it ideal for indoor spaces.

- To fold, carefully follow the instructions in your assembly guide to collapse the main triangle frame.

- Store the set in a dry place, away from direct sunlight and extreme temperatures, to preserve the wood quality.
- Ensure the set is fully folded and secured to prevent accidental unfolding.

EASY TO STORE ~

Can be folded and placed against the wall when not in use or cleaning.



Image: The ROBUD Pikler Triangle Set shown in its folded state, demonstrating its space-saving design for easy storage against a wall.

7. TROUBLESHOOTING

If you encounter any issues with your ROBUD Pikler Triangle Set, please refer to the following common solutions:

Problem	Possible Cause	Solution
Set feels unstable or wobbly.	Loose connections or uneven surface.	Check all screws and fasteners and tighten them. Ensure the set is on a flat, level surface.

Problem	Possible Cause	Solution
Difficulty folding/unfolding.	Mechanism obstruction or incorrect technique.	Refer to the assembly guide for folding instructions. Ensure no parts are obstructing the folding mechanism.
Squeaking noises during use.	Friction between wooden parts or loose joints.	Tighten all connections. A small amount of food-grade lubricant can be applied to pivot points if necessary, ensuring it is safe for children.

8. SPECIFICATIONS

Feature	Detail
Model Number	RB-WF002
Product Dimensions (Assembled)	78.4 x 21 x 29.5 inches (approx. 199 x 53 x 75 cm)
Item Weight	31.3 pounds (14.2 kg)
Material	Premium Wood
Maximum Weight Capacity	132 pounds (60 kg)
Recommended Age	Toddlers (with adult supervision)



Weight : 14.2KG 31.3LB

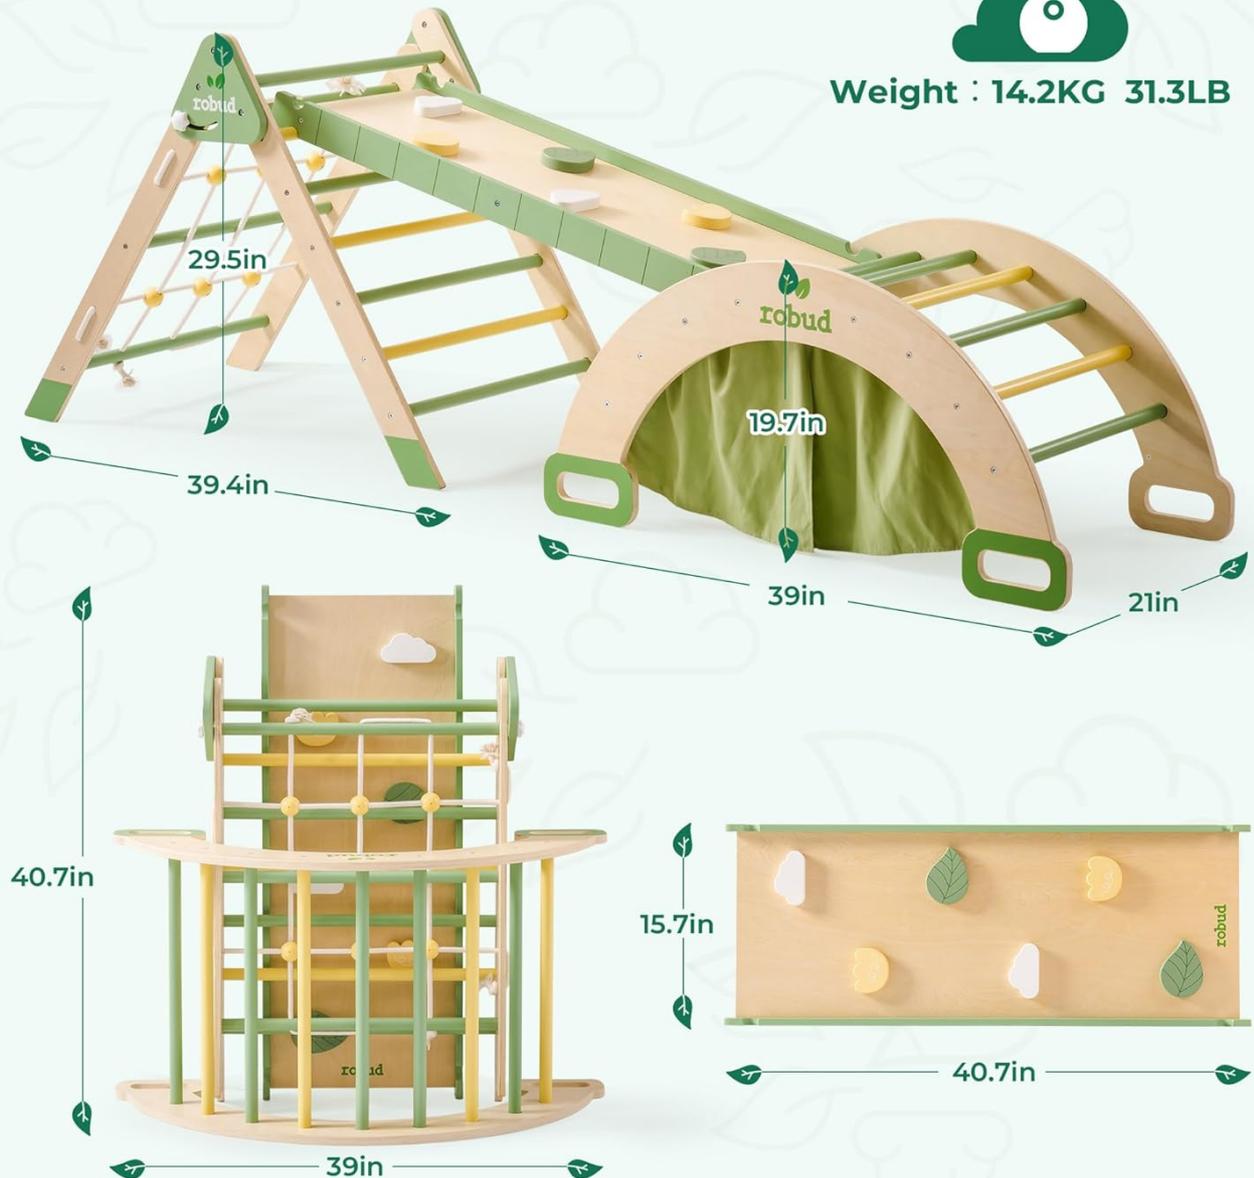


Image: A visual representation of the product's dimensions, including height, width, and length for both assembled and folded configurations.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official ROBUD website. If you have any questions, concerns, or require assistance with your product, please contact ROBUD customer support:

- **Website:** Visit the [ROBUD Store on Amazon](#)
- **Email:** Refer to your product packaging or the ROBUD website for direct contact information.

Please have your model number (RB-WF002) and purchase date ready when contacting support.

