

X8 Ultra Max Y&H

Hry Fine X8 Ultra Max Smart Watch User Manual

Model: X8 Ultra Max Y&H | Brand: Generic

INTRODUCTION

Welcome to the user manual for your Hry Fine X8 Ultra Max Smart Watch. This device combines a stunning gold appearance with advanced features to enhance your daily life. It comes equipped with three versatile straps in black, gold, and orange, allowing you to customize its look for any occasion. The X8 Ultra Max offers a long-lasting battery, smart notification technology, and comprehensive physical activity tracking, including step and heart rate monitoring, and sleep tracking.

This manual will guide you through the setup, operation, and maintenance of your new smartwatch, ensuring you get the most out of its capabilities.



Image: The Hry Fine X8 Ultra Max Smart Watch in its elegant gold finish, accompanied by its interchangeable black and orange straps, showcasing its versatile design.

1. SETUP GUIDE

1.1 Package Contents

Before you begin, please ensure all items are present in your package:

- Hry Fine X8 Ultra Max Smart Watch (Gold Edition)
- Gold Metal Strap (pre-attached or separate)
- Black Silicone Strap
- Orange Silicone Strap
- Wireless Charging Cable
- User Manual (this document)



Image: A clear view of the Hry Fine X8 Ultra Max Smart Watch packaging, displaying the gold watch, the black and orange interchangeable straps, and the wireless charging cable neatly arranged.

1.2 Charging the Smart Watch

For optimal performance, fully charge your smartwatch before first use.

1. Connect the wireless charging cable to a USB power adapter (not included).
2. Place the back of the smartwatch onto the charging pad. The watch will magnetically align.
3. The charging indicator will appear on the watch screen. Allow approximately 2-3 hours for a full charge.

1.3 Installing the Hry Fine Application

To unlock all features of your smartwatch, download and install the Hry Fine application on your smartphone.

- Scan the QR code provided in the watch's quick start guide or on the watch screen (if available) to download the app.
- Alternatively, search for "Hry Fine" in your smartphone's app store (Google Play Store for Android, Apple App Store for iOS).
- Install the application and grant necessary permissions when prompted.

1.4 Pairing with Your Smartphone

Follow these steps to pair your smartwatch with the Hry Fine app:

1. Ensure Bluetooth is enabled on your smartphone.
2. Open the Hry Fine application.
3. Navigate to the "Device" or "My Watch" section within the app.
4. Tap "Add Device" or "Scan for Device".
5. Select "X8 Ultra Max" from the list of found devices.
6. Confirm the pairing request on both your smartphone and the smartwatch.
7. Once paired, the app will synchronize data with your watch.

2. OPERATING INSTRUCTIONS

2.1 Basic Navigation

The X8 Ultra Max features a 2-inch HD touchscreen display and a side crown for navigation.

- **Swipe Up/Down:** Scroll through menus and notifications.
- **Swipe Left/Right:** Access quick functions or different watch faces.
- **Tap:** Select an item or open an application.
- **Press Side Button/Crown:** Return to the home screen, or long-press for power options.

2.2 Making and Receiving Calls

With Bluetooth connectivity, you can effortlessly manage calls directly from your wrist.

- **To Make a Call:** Access the dialer or contacts list on your watch and select the desired contact.
- **To Receive a Call:** When a call comes in, you can answer or reject it directly from the watch screen.



Image: The Hry Fine X8 Ultra Max Smart Watch showing an incoming call notification on its screen, demonstrating its call management feature.

2.3 Smart Notifications

Receive notifications for calls, messages, and app alerts directly on your watch.

- Ensure notification permissions are enabled for the Hry Fine app on your smartphone.
- Customize which app notifications you receive through the Hry Fine app settings.

2.4 Activity Tracking

The X8 Ultra Max tracks various fitness metrics to help you stay active and healthy.

- **Step Counter:** Monitors your daily steps.
- **Heart Rate Monitor:** Provides real-time heart rate data.
- **Sleep Tracking:** Analyzes your sleep patterns.
- **Sports Modes:** Dedicated modes for activities like running, cycling, and more, providing specific data for each.

View detailed activity reports within the Hry Fine application on your smartphone.

3. MAINTENANCE

3.1 Cleaning and Care

To keep your smartwatch in excellent condition, follow these cleaning and care tips:

- Wipe the watch screen and body with a soft, lint-free cloth.
- For stubborn smudges, slightly dampen the cloth with water. Avoid harsh chemicals.
- Clean the straps regularly, especially silicone ones, with mild soap and water, then dry thoroughly.
- Avoid exposing the watch to extreme temperatures or direct sunlight for prolonged periods.

3.2 Battery Tips

Maximize your battery life with these recommendations:

- Charge the watch fully before it completely drains.

- Avoid overcharging for extended periods.
- Reduce screen brightness and turn off unnecessary notifications to conserve power.

3.3 Changing Straps

The X8 Ultra Max allows for easy strap interchangeability to match your style.

1. Locate the quick-release pins on the underside of the strap where it connects to the watch body.
2. Gently pull the pin inwards to release the strap.
3. Align the new strap with the watch lugs and insert one end of the pin into the corresponding hole.
4. Pull the quick-release pin inwards, align the other end with the second hole, and release the pin to secure the strap.
5. Ensure the strap is securely attached before wearing.



Image: A hand holding the Hry Fine X8 Ultra Max Smart Watch, illustrating the process of changing or attaching a watch strap, highlighting the ease of customization.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch does not turn on.	Low battery.	Charge the watch for at least 30 minutes.
Cannot pair with smartphone.	Bluetooth is off; app not running; watch not discoverable.	Ensure Bluetooth is on. Restart the Hry Fine app. Restart both watch and phone. Try pairing again.
Notifications not received.	App permissions not granted; notifications disabled in app.	Check app notification permissions in phone settings. Enable notifications for specific apps within the Hry Fine app.
Inaccurate activity tracking.	Watch not worn correctly; software glitch.	Ensure the watch is snug on your wrist. Restart the watch. Update the app and watch firmware if available.
Short battery life.	High screen brightness; frequent use of power-intensive features.	Reduce screen brightness. Limit continuous heart rate monitoring. Turn off always-on display if not needed.

5. TECHNICAL SPECIFICATIONS

Feature	Detail
Model Name	X8 Ultra Max
Item Model Number	X8 Ultra Max Y&H
Brand Name	Generic
Color	Gold
Screen Size	2 inches (HD Display)
Connectivity Technology	Bluetooth
Wireless Communication Standard	Bluetooth
Battery Cell Composition	Lithium Polymer
GPS	Without GPS
Special Features	Alarm, Always-on display, Notifications, Phone calls, Wireless charging
Package Dimensions	21.8 x 13.6 x 2.7 cm
Item Weight	10 grams
Batteries	1 P76 battery required (Included)
First Available Date	November 28, 2024

6. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer where you purchased the Hry Fine X8 Ultra Max Smart Watch.

Typically, warranty details are included on a separate card or within the product packaging. Keep your proof of purchase for any warranty claims.

For technical assistance or further inquiries, please reach out to the manufacturer's support channels if available, or the customer service of your point of purchase.

