

Beautiful by Drew Barrymore 19565

Beautiful by Drew Barrymore 2 Qt Slow Cooker Set Instruction Manual

Model: 19565

1. PRODUCT OVERVIEW

This manual provides essential instructions for the safe and efficient use of your Beautiful by Drew Barrymore 2 Qt Slow Cooker Set. This set includes two individually packaged 2-quart slow cookers, ideal for preparing small meals, sauces, sides, or for keeping food warm during entertaining. Each slow cooker features three heat settings and a compact design for convenience.



Figure 1.1: Beautiful by Drew Barrymore 2 Qt Slow Cooker Set (Porcini Taupe and Thyme Green).

This image displays both slow cookers included in the set. One is a rich Thyme Green, and the other is a soft Porcini Taupe. Both units feature a sleek matte finish, gold accents on the control knob and lid handle, and clear glass lids, showcasing their elegant design.

Key Features:

- **Dual 2-Quart Capacity:** Two separate slow cookers, each with a 2-quart capacity, perfect for individual dishes or entertaining.
- **Three Heat Settings:** Offers Low, High, and Warm settings for versatile cooking and serving.
- **Removable Ceramic Pot:** The inner ceramic pot is removable for easy serving and cleaning.
- **Durable Construction:** Long-lasting steel exterior with a matte finish.
- **Cool-Touch Handles:** Designed for safe and convenient transport.
- **Tempered Glass Lid:** Shatter-resistant lid allows for easy monitoring of cooking progress.

- **Dishwasher-Safe Components:** Ceramic pot and glass lid are dishwasher safe for quick cleanup.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using your slow cooker. Failure to follow these safety guidelines may result in fire, electric shock, injury, or property damage.

- **Electrical Safety:** Always plug the slow cooker into a grounded electrical outlet. Do not immerse the base unit, cord, or plug in water or other liquids.
- **Hot Surfaces:** The exterior surfaces of the slow cooker become hot during operation. Use oven mitts or pot holders when handling. Always use the cool-touch handles for transport.
- **Lid Handling:** Always lift the lid away from your face to avoid steam burns.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Close supervision is necessary when any appliance is used near children.
- **Cord Safety:** Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- **Damage:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- **Intended Use:** Use the slow cooker only for its intended purpose, which is cooking food.
- **Stability:** Always place the slow cooker on a stable, heat-resistant surface.

3. SETUP AND FIRST USE

Unpacking:

1. Carefully remove all components from the packaging.
2. Remove any protective film or stickers from the appliance.

Initial Cleaning:

1. Wash the ceramic cooking pot and glass lid in warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the base unit with a damp cloth. Do not immerse the base unit in water.

Component Identification:



Figure 3.1: Removable Ceramic Pot and Glass Lid.

This image shows the two main removable components: the black ceramic cooking pot and the clear tempered glass lid with its distinctive gold-colored handle. These parts are designed for easy removal, cleaning, and serving.

- **Base Unit:** Contains the heating element and control knob.
- **Ceramic Cooking Pot:** The inner pot where food is cooked.
- **Glass Lid:** Covers the cooking pot to retain heat and moisture.
- **Control Knob:** Used to select heat settings (OFF, WARM, LOW, HIGH).

4. OPERATING INSTRUCTIONS

General Operation:

1. Place the base unit on a dry, flat, heat-resistant surface.
2. Insert the ceramic cooking pot into the base unit.
3. Add your ingredients to the ceramic pot. Do not overfill; ensure there is space between the food and the lid.
4. Place the glass lid securely on the ceramic pot.
5. Plug the slow cooker into a standard 110V AC electrical outlet.
6. Turn the control knob to your desired setting:
 - **LOW:** For slow cooking over a longer period.
 - **HIGH:** For faster cooking.
 - **WARM:** To keep cooked food at a serving temperature. Do not use the WARM setting for cooking raw food.
7. Once cooking is complete, turn the control knob to the 'OFF' position and unplug the appliance.
8. Allow the slow cooker to cool completely before cleaning.



Figure 4.1: Thoughtfully Designed Features.

This image illustrates the thoughtful design elements of the slow cooker, including the shatter-resistant tempered glass lid, cool-touch handles for safe portability, and the three distinct heat settings (Low, High, and Warm) accessible via the front control knob.

Tips for Best Results:

- Avoid lifting the lid frequently during cooking, as this can extend cooking times.
- For recipes requiring browning, sear meats in a separate pan before adding to the slow cooker.
- Liquids do not evaporate as quickly in a slow cooker, so reduce liquid amounts compared to conventional recipes.



Figure 4.2: Easy Serving with Removable Pot.

This image shows a user utilizing oven mitts to safely lift the removable ceramic pot from the slow cooker's base. This

highlights the convenience of the design, allowing for easy transfer of food from the cooker to the serving area.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your slow cooker.

Cleaning Instructions:

1. Always unplug the slow cooker and allow it to cool completely before cleaning.
2. The ceramic cooking pot and glass lid are dishwasher safe. Alternatively, they can be washed by hand in warm, soapy water. Avoid abrasive cleaners or scouring pads that could damage the surfaces.
3. Wipe the exterior of the base unit with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
4. Ensure all parts are thoroughly dry before storing or next use.

Storage:

Store the slow cooker in a dry place. You can store the lid inverted on the ceramic pot, and then place the pot inside the base unit to save space.

6. TROUBLESHOOTING

If you encounter any issues with your slow cooker, please refer to the following common problems and solutions:

- **Appliance does not turn on:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check if the control knob is set to 'LOW', 'HIGH', or 'WARM' (not 'OFF').
 - Verify that the outlet is functioning by plugging in another appliance.
- **Food is not cooking properly:**
 - Ensure the lid is properly seated on the ceramic pot to retain heat.
 - Confirm that the correct heat setting (LOW or HIGH) has been selected for your recipe.
 - Avoid frequently lifting the lid, as this releases heat and extends cooking time.
- **Food is sticking to the ceramic pot:**
 - Ensure there is sufficient liquid in the recipe.
 - For easier cleanup, you may lightly grease the ceramic pot before adding ingredients.
 - Soak the pot in warm, soapy water after use to loosen stuck-on food.
- **Exterior of the unit is hot:**
 - This is normal during operation. Always use the cool-touch handles for transport and oven mitts when handling the hot lid or ceramic pot.

7. SPECIFICATIONS

Feature	Specification
Brand	Beautiful by Drew Barrymore
Model Number	19565
Capacity	2 Quarts (each unit)
Color	Porcini Taupe and Thyme Green
Material	Ceramic (pot), Steel (exterior), Tempered Glass (lid)
Product Dimensions	8.34"D x 9.68"W x 6.53"H
Wattage	210 watts
Voltage	110 Volts
Control Method	Rotary Knob
Number of Settings	3 (Low, High, Warm)
Dishwasher Safe Parts	Ceramic Pot and Glass Lid
Item Weight	5 pounds (each unit)

8. WARRANTY AND SUPPORT

For detailed warranty information, product registration, or customer support, please refer to the documentation included with your product packaging or visit the official Beautiful by Drew Barrymore website. Please have your model number (19565) and purchase date available when contacting support.