

[Manuals.plus](#) /

> [Flgocexs](#) /

> Flgocexs Steam Cleaner User Manual

Flgocexs Steam Cleaners

Flgocexs Steam Cleaner User Manual

Model: Steam Cleaners

1. INTRODUCTION

Thank you for choosing the Flgocexs Steam Cleaner. This powerful and versatile cleaning device is designed to effectively clean various surfaces using high-temperature, chemical-free steam. With its quick heat-up time and adjustable steam levels, it provides a convenient and efficient cleaning solution for your home, car, and more.

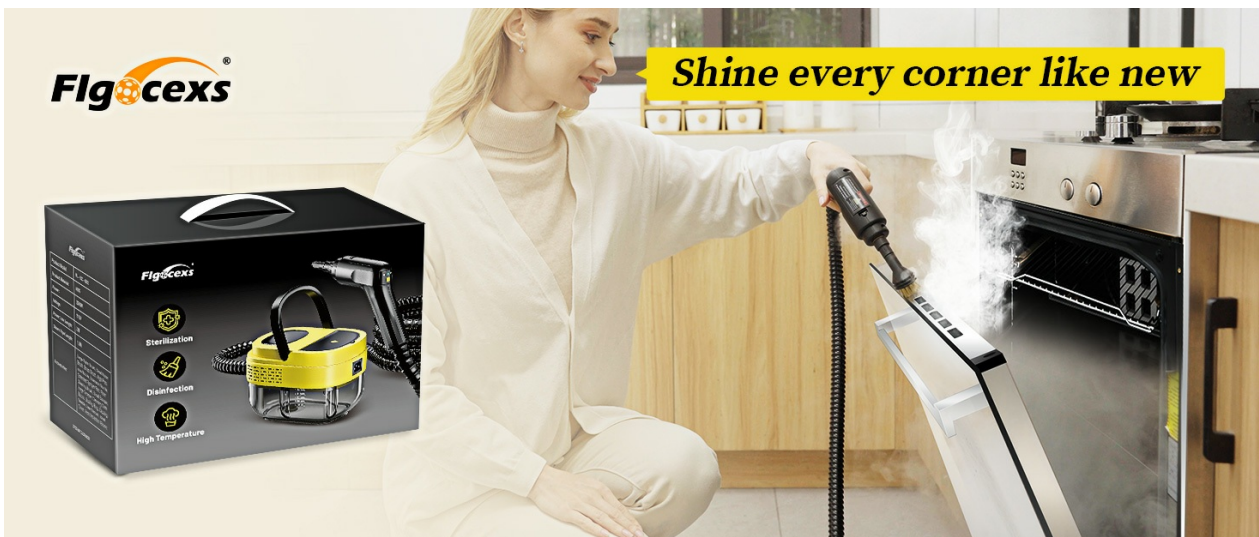


Image: Flgocexs Steam Cleaner in action, demonstrating its cleaning power on an oven door.

2. IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions before using this appliance.

- Always ensure the steam cleaner is unplugged before filling or emptying the water tank.
- The steam produced is extremely hot (up to 221°F / 105°C) and is under high pressure (3Bar). Keep hands, face, and body away from the steam nozzle and any hot surfaces during operation.
- The metal extension rod and copper spray nozzle become extremely hot during operation. Do not touch them with bare hands to avoid burns. Always use the provided heat-resistant gloves.
- When starting the unit, a small amount of water may initially spray out before steam is generated. Direct this initial spray into a sink or a safe area.
- Keep the steam gun close to the surface you are cleaning for optimal temperature and effectiveness. It is not designed for distant high-heat cleaning.
- This appliance is 100% chemical-free. Do not add any cleaning solutions, chemicals, or scented products to the water tank, as this may damage the unit or produce harmful fumes.
- Ensure the water tank cap is securely sealed before operating the device.
- Keep out of reach of children and pets.

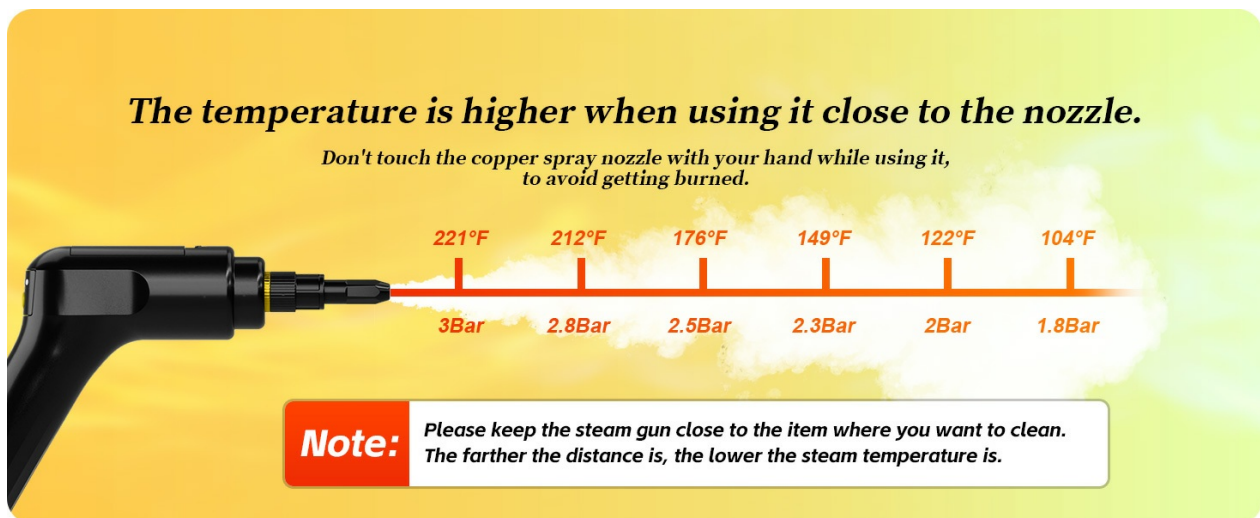


Image: Diagram illustrating that steam temperature is highest closest to the nozzle, with a warning not to touch the hot copper spray nozzle.

3. PRODUCT COMPONENTS

Your Flgocexs Steam Cleaner comes with a comprehensive set of accessories to tackle various cleaning tasks:

- 1x Steam Cleaner Handheld Unit
- 1x Extension Nozzle
- 1x Large Nylon Brush
- 1x Small Nylon Brush
- 1x High-Pressure Nozzle
- 1x Brass Brush
- 1x Extended Sprayer Rod
- 2x Sealing Rings (for attachments)
- 1x Cleaning Cloth Sleeve

- 1x Clearing Needle
- 1x Floor Cleaning Brush
- 1x Small Scraper
- 1x Large Scraper
- 1x User Manual
- 1x Heat-Resistant Gloves
- 1x Cleaning Towel



Image: Detailed diagram showcasing the multifunctional accessories included with the Flgocexs Steam Cleaner.

4. SETUP

1. **Prepare the Unit:** Place the steam cleaner on a stable, flat surface.
2. **Fill Water Tank:** Lift the top cover of the unit to access the funnel-shaped water filling port. Fill the 1600ML water tank with clean tap water. Do not overfill. Securely close the top cover.
3. **Install Batteries (Handle):** The remote control handle requires 2 AAA batteries (not included). Open the battery compartment on the handle and insert the batteries, ensuring correct polarity. Close the compartment.
4. **Attach Hose:** Connect the steam hose from the main unit to the handle, ensuring a secure fit.
5. **Select and Attach Nozzle:** Choose the appropriate cleaning attachment for your task. Attach it to the end of the steam gun handle. For extended reach, first attach the Extended Sprayer Rod, then your desired cleaning attachment. Ensure sealing rings are properly in place for a tight seal.
6. **Plug In:** Plug the power cord into a standard electrical outlet.



Image: Close-up view of the 1600ML water tank and funnel-shaped filling port, highlighting the ease of water addition.

5. OPERATING INSTRUCTIONS

1. **Power On:** Long press the power button on the handle for a few seconds to turn on the steam cleaner. The display on the main unit will show '0' initially, then indicate the current steam setting.
2. **Heat-Up:** The unit will begin heating up. It takes approximately 15 seconds to reach the operating temperature of 221°F (105°C).
3. **Adjust Steam Level:** The handle features an adjustment button with 3 indicator lights. Press this button to cycle through the 3 levels of steam intensity (Level 1, Level 2, Level 3). The display on the main unit will update to show the selected level.
4. **Begin Cleaning:** Once the desired steam level is set and steam is consistently flowing, direct the nozzle towards the surface to be cleaned. Move the nozzle slowly and steadily over the area.
5. **Using Attachments:** Utilize the various brushes and scrapers for different cleaning needs. For example, the brass brush is effective for stubborn grease, while the scrapers can help remove adhesive residues.
6. **Power Off:** Long press the power button on the handle again to turn off the steam cleaner when finished.



Image: Close-up of the ergonomic handle with remote control buttons and indicator lights for easy steam intensity adjustment.



Image: Visual comparison showing the thicker steam hose and button-type spray handle, designed for enhanced steam output and easier handling.

6. MAINTENANCE

- **Empty Water Tank:** After each use, ensure the unit is unplugged and cooled down. Use the convenient drainage hole at the bottom of the unit to empty any remaining water from the tank. This prevents mineral buildup and prolongs the life of the appliance.
- **Clean Attachments:** Wash all removable attachments with warm, soapy water and rinse thoroughly. Allow them to air dry completely before storing.
- **Store Properly:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Descaling (Periodic):** Depending on your water hardness, periodic descaling may be necessary. Consult the full user manual for detailed descaling instructions.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or weak steam output.	Water tank is empty or low. Unit not heated sufficiently. Nozzle/hose clogged.	Fill water tank. Allow 15 seconds for heat-up. Use clearing needle to remove clogs.
Water sprays out before steam.	Normal during initial heat-up or after refilling.	Direct initial spray into a sink or safe area until consistent steam is produced.
Steam not hot enough.	Using the steam gun too far from the surface.	Keep the steam gun closer to the item being cleaned. The temperature is higher near the nozzle.
Attachments not staying on.	Missing or worn sealing rings.	Ensure both sealing rings are properly installed. Replace if worn.

8. SPECIFICATIONS

- **Brand:** Flgocexs
- **Model Name:** Handheld Steam Cleaners
- **Power:** 2500W
- **Heat-Up Time:** 15 seconds
- **Max Steam Temperature:** 221°F (105°C)
- **Steam Pressure:** Up to 3Bar
- **Water Tank Volume:** 1600 Milliliters (1.6L)
- **Continuous Steam Time:** Up to 45 minutes (per fill)
- **Form Factor:** Handheld
- **Color:** Yellow

- **Power Source:** Corded Electric
- **Voltage:** 110V
- **Product Dimensions:** 8.66 x 10.6 x 7.68 inches
- **Item Weight:** 5.63 pounds

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Flgocexs website. Keep your purchase receipt for warranty claims.