

S4210, S210W

Replacement Remote Control User Manual

For TCL S Class 2.1 Channel Sound Bar Models S4210, S210W

1. INTRODUCTION

This document provides essential information for the operation and maintenance of your replacement remote control, designed for use with TCL S Class 2.1 Channel Sound Bar models S4210 and S210W. This remote is a dedicated replacement and offers stable performance and ease of use. Please note that as a replacement, some functions may differ from your original remote control.



Figure 1: The replacement remote control. This image displays the black replacement remote control. It features various buttons for power, volume, playback, sound modes, and bass/treble adjustments.

2. SETUP

This replacement remote control requires no programming or complex setup. Simply install the batteries to begin operation.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.

3. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

The remote is now ready for use.

3. OPERATING INSTRUCTIONS

Point the remote control directly at your TCL sound bar. Ensure there are no obstructions between the remote and the sound bar's sensor.

3.1 Button Functions

Button Name	Function
Power	Turns the sound bar on or off.
Mute	Mutes or unmutes the sound.
Bluetooth	Activates Bluetooth pairing mode or switches to Bluetooth input.
Sound Mode	Cycles through available sound modes (e.g., Movie, Music, News).
Input/Source	Switches between different audio input sources (e.g., HDMI, Optical, AUX).
Volume + / -	Increases or decreases the master volume level.
Play/Pause	Plays or pauses media playback.
Previous Track	Skips to the beginning of the current track or the previous track.
Next Track	Skips to the next track.
DTS VX	Activates or deactivates DTS Virtual:X sound enhancement.
Bass Boost	Enhances the bass output.
DTS T-VOL	Activates or deactivates DTS TruVolume for consistent volume levels.
AI SONIC	Activates or deactivates AI Sonic mode for optimized audio.
Treble	Adjusts the treble level.
Voice	Enhances dialogue clarity.
Bass	Adjusts the bass level.

Note: As a replacement remote, some advanced or specific functions of your original sound bar remote may not be supported.

4. MAINTENANCE

4.1 Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

4.2 Battery Replacement

- Replace batteries when the remote's responsiveness decreases or it stops functioning.
- Always replace both batteries at the same time with new ones of the same type (AAA).
- Dispose of used batteries according to local regulations.

4.3 Storage

- Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding.	<ul style="list-style-type: none"> • Check if batteries are inserted correctly with proper polarity. • Replace old batteries with new ones. • Ensure there are no obstructions between the remote and the sound bar. • Make sure you are within the effective operating range.
Some functions do not work.	<ul style="list-style-type: none"> • This is a replacement remote; some specific functions of the original remote may not be supported. • Verify the remote is compatible with your exact sound bar model (S4210, S210W).
Short operating distance.	<ul style="list-style-type: none"> • Batteries may be low; replace them. • Ensure no strong light sources are interfering with the sound bar's IR receiver.

6. SPECIFICATIONS

Feature	Detail
Material	ABS/Plastic
Compatible Devices	TCL S Class 2.1 Channel Sound Bar (Models S4210, S210W), Audio/Video Players, TV, AC, Projector (<i>Note: Compatibility may vary for non-sound bar devices</i>)
Max Number of Supported Devices	1 (Dedicated to the primary device)
Power Source	2 x AAA Batteries (not included)
Color	Black (Color may vary slightly from images)

7. WARRANTY AND SUPPORT

For warranty information or technical support regarding this replacement remote control, please contact the seller or manufacturer directly. When seeking support, it is helpful to provide your original remote's part number or your sound bar's unit model (e.g., S4210, S210W) to ensure accurate assistance.

This product has been tested to ensure functionality before shipping.