

[Manuals.plus](#) /

› [SIMPLETASTE](#) /

› SIMPLETASTE 4-in-1 Electric Milk Frother User Manual

SIMPLETASTE 706NA-0014

SIMPLETASTE 4-in-1 Electric Milk Frother User Manual

Model: 706NA-0014

1. PRODUCT OVERVIEW

The SIMPLETASTE 4-in-1 Electric Milk Frother is designed to create various milk textures for your favorite beverages, including warm dense foam, warm airy foam, cold foam, and warmed milk. Its intuitive one-button operation and non-stick interior ensure ease of use and cleaning.



Figure 1: SIMPLETASTE 4-in-1 Electric Milk Frother with included accessories.

2. SETUP AND COMPONENTS

2.1 Unboxing and Component Check

Carefully unpack all components from the box. Ensure all parts are free of visible damage. The package should contain:

- 1 x Milk Frother Unit (main body)
- 1 x Power Base with Cord
- 1 x Transparent Lid

- 2 x Frothing Whisks (one pre-installed, one spare)
- 1 x Instruction Manual



Figure 2: Packaging and all components of the milk frother.

2.2 Initial Cleaning

Before first use, wash the inside of the milk frother using warm water and a soft damp cloth **DO NOT** immerse the frother or the power base in water. **DO NOT** put any parts of the frother in the dishwasher. Use a clean and damp cloth to clean the surface if necessary.

3. OPERATING INSTRUCTIONS

The SIMPLETASTE Milk Frother offers four distinct modes for preparing your favorite milk-based beverages. Ensure the frothing whisk is installed on the shaft at the bottom of the frother before adding milk.

Tap, Froth, Enjoy

Simple one-tap operation, four functions via different tap counts

Red – Tap once
Warm Dense Foam Frothing

Green – Tap twice
Warm Airy Foam Frothing

Purple – Tap three times
Warming Milk

Blue – Tap four times
Cold Milk Foam Frothing



Figure 3: Simple One-Tap Operation for various milk preparations.

3.1 Mode Selection

Plug the power base into a properly grounded wall outlet. Successively press the power button to cycle through the modes:

- **Press Once: Warm Dense Foam Frothing (Red Light)**
Max. Capacity: 115ml
Completion Time: 80-140 seconds
- **Press Twice: Warm Airy Foam Frothing (Green Light)**

Max. Capacity: 115ml

Completion Time: 80-140 seconds

- **Press Three Times: Heating Milk (Purple Light)**

Max. Capacity: 240ml

Completion Time: 150-250 seconds

- **Press Four Times: Cold Milk Foam Frothing (Blue Light)**

Max. Capacity: 115ml

Completion Time: 55-60 seconds (No Cooling)

After selecting your preferred mode, the indicator light flashes for 3 seconds and stays on, and the milk frother will start operating. The indicator light flashes for 5 seconds and goes out, meaning the frother has completed frothing or heating. It then enters standby mode.

Large Capacity

8.2oz/240ml

Max-level for Warming

3.9oz/115ml

Max-level for Frothing Milk

Min-level for Frothing Milk



Figure 4: Examples of beverages prepared with the 4-in-1 frother.

3.2 Milk Recommendations

For best results, it is recommended to use milk with a fat content greater than 3% for richer and creamier foam. Ensure the milk level is between the MIN and MAX markings inside the frother to prevent overflow or insufficient frothing.

Easy to Clean

Quick rinse, spotless clean



***This device is not suitable for dishwasher use**

Figure 5: Internal markings for maximum warming (8.2oz/240ml) and frothing (3.9oz/115ml) capacities.

3.3 Official Product Video

Video 1: Official SIMPLETASTE 4-in-1 Electric Milk Frother and Steamer demonstration. This video provides a visual guide to the product's features, operation modes, and ease of cleaning.

4. MAINTENANCE

4.1 Cleaning

The milk frother features a scratch-resistant material and a non-stick interior coating for easy cleaning. After each use, simply rinse the interior with warm water. For the exterior, use a clean and damp cloth to wipe the surface. Its detachable base ensures both safety and effortless cleaning.



Figure 6: The non-stick interior allows for quick and easy rinsing after use.

5. TROUBLESHOOTING

Issue	Reason	Solution
Indicator light does not work. The milk frother does not work.	Plug is not inserted correctly.	Re-insert the plug.
The jug does not work after operation.	The milk frother is not connected to power base correctly.	Remove the jug and replace it on the base correctly.
The temperature of jug is too high.		Rinse cold water inside the jug to reduce temperature.
The whisk does not spin.	Jug is not cleaned thoroughly, and the motor is stuck.	Remove the whisk carefully. Clean the jug and whisk again to remove any leftover.
Milk either too little or too much.		Ensure that the amount of milk is between min and max mark.
Charring.	The milk frother is not cleaned thoroughly before next use.	Always clean the milk frother after each use.

6. SPECIFICATIONS

- **Brand:** SIMPLETASTE
- **Model Name:** Electric Milk Frother and Steamer
- **Item Model Number:** 706NA-0014
- **Color:** Blue
- **Material:** Plastic
- **Special Features:** Indicator Light, Auto Shut-Off, Variable Froth Setting, Overheat Protection, Non-Stick, Programmable
- **Number of Settings:** 4
- **Power Source:** Corded Electric
- **Max Capacity (Milk Heating):** 240 ml (8.2 oz)
- **Max Capacity (Milk Frothing):** 115 ml (3.9 oz)
- **Item Weight:** 1.85 pounds
- **Package Dimensions:** 8.11 x 5.8 x 4.5 inches
- **Product Care Instructions:** Hand Wash Only
- **Country of Origin:** China
- **UPC:** 842120106725

7. WARRANTY AND SUPPORT

SIMPLETASTE stands by its products and offers comprehensive support:

- **90 Day Refund Guarantee:** If you are not satisfied with your purchase.
- **24 Month Full Warranty:** For any manufacturing defects or issues.

- **24 Hour Customer Service:** Dedicated support available to assist you.

For customer service inquiries, please refer to the contact information provided in your product packaging or visit the official SIMPLETASTE website.

© 2025 SIMPLETASTE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question