



Manuals.plus /

› BHNYBWUL /

› BHNYBWUL S47 Snow White Wireless Earbuds User Manual

BHNYBWUL S47 Snow White

BHNYBWUL Wireless Earbuds User Manual

Model: S47 Snow White

1. INTRODUCTION

Thank you for choosing the BHNYBWUL S47 Snow White Wireless Earbuds. These earbuds are designed to provide a superior audio experience with advanced Bluetooth 5.3 technology, long battery life, and intuitive touch controls. This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal performance and longevity.



Image: The BHNYBWUL S47 Snow White Wireless Earbuds in their charging case, displaying the LED battery indicator.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- BHNYBWUL S47 Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable

- User Manual



Image: A visual representation of the package contents, including the earbuds, charging case, charging cable, and user manual.

3. SETUP

3.1 Initial Charge

Before first use, fully charge the earbuds and the charging case. Connect the provided USB-C cable to the charging port on the case and a power source. The LED digital display on the case will show the charging status and battery levels for both the case and individual earbuds.

LED Digital Display

The LED display that keeps you informed about battery life and charging status.



Digital Power Display of Case



Digital Power Display of Earbuds

Image: The charging case with its LED digital display indicating battery levels for the case and both earbuds.

3.2 Pairing with Your Device

The S47 earbuds feature one-step pairing for convenience.

1. Ensure the charging case is charged and your device's Bluetooth is enabled.
2. Open the charging case. The earbuds will automatically power on and enter pairing mode.
3. On your device, search for Bluetooth devices and select "S47" from the list.
4. Once connected, the earbuds will indicate successful pairing (e.g., a voice prompt or LED indicator change).

The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

Bluetooth 5.3 Technology

One Step Pairing



Desktop



Phone



TV



Watch



Notebook



Pad

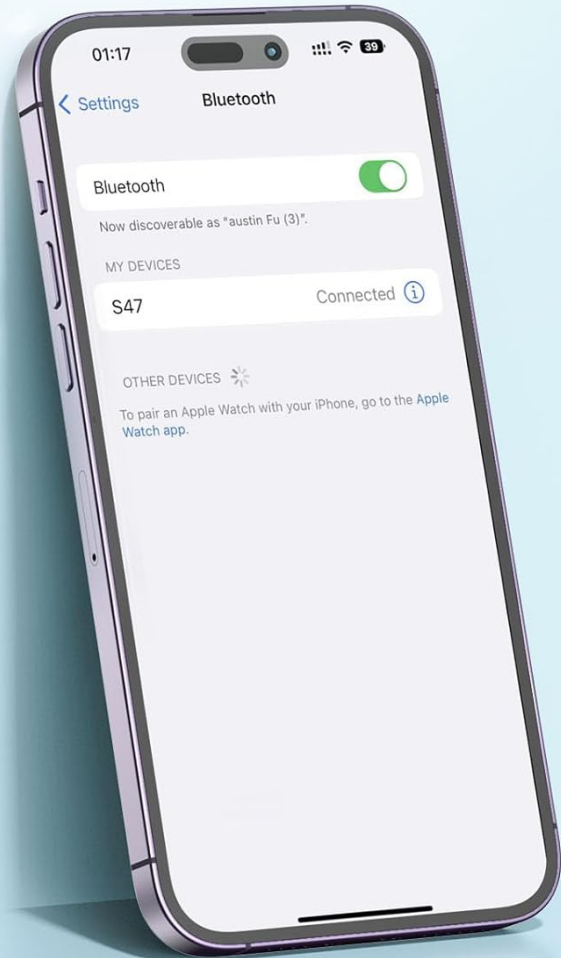


Image: Illustration showing the earbuds pairing with a smartphone, demonstrating compatibility with various devices like desktops, phones, TVs, watches, notebooks, and tablets.

4. OPERATING

4.1 Smart Touch Controls

The S47 earbuds feature sensitive touch control areas on each earbud. Refer to the table below for common functions:

One-step pairing

Pair your earbuds by picking them up from the charging case.

Compatible Widely



Image: A detailed diagram illustrating the touch control area on the earbuds and the corresponding gestures for various functions.

Action	Left Earbud (L)	Right Earbud (R)
Play/Pause	Double Tap	Double Tap
Next Track	N/A	Tap and Hold (2s)
Previous Track	Tap and Hold (2s)	N/A
Volume Down	Single Tap	N/A
Volume Up	N/A	Single Tap
Answer/End Call	Double Tap	Double Tap
Reject Call	Tap and Hold (2s)	Tap and Hold (2s)
Activate Voice Assistant (Siri/Google Assistant)	Triple Tap	Triple Tap

4.2 Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on. Alternatively, press and hold the touch control area on both earbuds for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging. Alternatively, disconnect Bluetooth and the earbuds will power off after 5 minutes of inactivity.

4.3 Single/Dual Earbud Mode

The S47 earbuds support both single and dual earbud use. You can use either the left or right earbud independently, or both together for a stereo experience. Simply take one earbud out of the case to use it in mono mode, or both for stereo mode. The earbuds will automatically switch between modes.

Smart Touch Control



Image: A visual guide demonstrating the flexibility of using the earbuds in single (mono) or dual (stereo) mode, and switching between them.

5. MAINTENANCE

5.1 Cleaning

To maintain sound quality and hygiene, regularly clean your earbuds and charging case:

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging case.
- For earwax or debris in the earbud tips, use a small, soft brush or cotton swab.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

5.2 Storage

When not in use, store the earbuds in their charging case to protect them from dust and damage, and to keep them charged. Store the case in a cool, dry place away from extreme temperatures.



Image: The compact charging case easily fits into a pocket, highlighting its portability and ease of storage.

5.3 Water Resistance (IPX7)

The S47 earbuds are IPX7 waterproof, meaning they can resist sweat, rain, and minor water splashes. They are suitable for workouts and outdoor activities. However, they are not designed for swimming or submersion in water. Ensure the earbuds are dry before placing them back into the charging case to prevent damage.



Image: A person wearing the earbuds while being splashed with water, illustrating their IPX7 water resistance for active use.

6. TROUBLESHOOTING

If you encounter issues with your earbuds, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Earbuds not pairing	Bluetooth off, out of range, or pairing mode not active.	Ensure Bluetooth is on. Place earbuds in case, close, then open to re-enter pairing mode. Try resetting earbuds (see below).
No sound from one earbud	Low battery, earbud not connected, or individual earbud issue.	Check battery level. Place both earbuds in case, close, then open. Try resetting earbuds.
Low volume or poor sound quality	Earwax buildup, incorrect fit, or device volume settings.	Clean earbuds. Adjust earbud position. Increase volume on both earbuds and connected device.
Earbuds not charging	Charging cable issue, dirty charging contacts, or case battery low.	Ensure cable is securely connected. Clean charging contacts on earbuds and case. Charge the charging case.
Connection drops frequently	Interference, too far from device, or low battery.	Move closer to your device. Avoid areas with strong Wi-Fi or other Bluetooth signals. Charge earbuds.

6.1 One-Key Reset

If you experience persistent issues, you can perform a one-key reset:

1. Place both earbuds back into the charging case.
2. Press and hold the reset button (usually located inside or on the back of the charging case) for approximately 10 seconds until the LED indicators on the earbuds or case flash.
3. Close the case, then open it again. The earbuds should now be reset and ready for re-pairing.

7. SPECIFICATIONS

Key technical specifications for the BHNYBWUL S47 Wireless Earbuds:

Feature	Detail
Model Number	S47 Snow White
Connectivity Technology	Wireless (Bluetooth 5.3)
Wireless Range	Up to 15 meters (49 feet)
Audio Driver Type	13mm Dynamic Driver
Frequency Range	20 Hz - 20,000 Hz
Control Method	Touch
Battery Life (Earbuds)	8-10 hours (single charge)
Total Playtime (with case)	Up to 40 hours
Charging Port	USB-C
Waterproof Rating	IPX7
Microphones	4 ENC Mics (Environmental Noise Cancellation)
Item Weight	Approx. 3g per earbud
Compatible Devices	Smartphones, Laptops, Desktops, Tablets, Smart Speakers, Televisions, Car Audio Systems

8. WARRANTY AND SUPPORT

BHNYBWUL products are manufactured to the highest quality standards. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or further assistance, please contact BHNYBWUL customer service through the retailer's platform or the contact information provided with your purchase. Our support team is available to help you with any questions or issues you may encounter.