

XINFUTE RM-F04

XINFUTE RM-F04 Replacement Remote Control User Manual

Compatible with Humax TV Set Top Box Models: HDR-7500T, TN5050HD

1. INTRODUCTION

This manual provides instructions for the XINFUTE RM-F04 replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of Humax TV Set Top Box models HDR-7500T and TN5050HD. No programming is required; simply insert batteries for immediate use.

2. SETUP: BATTERY INSTALLATION

The RM-F04 remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating correct battery placement.

3. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready for use with your compatible Humax TV Set Top Box. Point the remote control directly at the set-top box and press the desired buttons.



Image: Front view of the RM-F04 remote control, displaying its button layout.

Key Functions:

- **Power Button:** Turns the set-top box on or off.
- **Number Buttons (0-9):** For direct channel selection.
- **Channel Up/Down:** Navigates through channels.
- **Volume Up/Down:** Adjusts the audio volume.
- **Mute Button:** Silences the audio output.
- **Navigation Pad (Up/Down/Left/Right/OK):** Used for menu navigation and selection.
- **Menu/Guide:** Accesses the main menu or program guide.
- **Back/Exit:** Returns to the previous screen or exits a menu.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.
- **Color Buttons (Red, Green, Yellow, Blue):** For specific functions within menus or applications, as indicated on-screen.

4. MAINTENANCE

To ensure optimal performance and longevity of your remote control:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops

working. Always replace both batteries simultaneously with new AAA alkaline batteries.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

If you experience issues with your remote control, consider the following:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the set-top box's infrared receiver.
 - Confirm the remote is pointed directly at the set-top box.
- **Limited Range:**
 - The maximum effective range is approximately 5 meters (16 feet). Ensure you are within this range.
 - Weak batteries can reduce the remote's operating range. Replace them if necessary.

6. SPECIFICATIONS

Model Number	RM-F04
Compatible Devices	Humax TV Set Top Box (HDR-7500T, TN5050HD)
Material	ABS Material
Connectivity Technology	Infrared
Batteries Required	2 x AAA (Alkaline, not included)
Maximum Range	5 Meters
Item Weight	0.08 Kilograms
Dimensions (L x W x H)	6"L x 3"W x 1"H (Approximate)

7. WARRANTY INFORMATION

This product comes with a one-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

8. CUSTOMER SUPPORT

If you are not satisfied with your purchase or require assistance, please contact us within 24 hours of receiving your product. Our customer support team is available to help with any issues or questions you may have.

