

Jeazans OC101

Jeazans OC101 Android Tablet 10.1 inch User Manual

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your Jeazans OC101 Android Tablet. Please read this manual thoroughly before operating the device and retain it for future reference. The Jeazans OC101 is a 10.1-inch Android tablet designed for versatile use, featuring an Octa-Core processor, Android 14 operating system, and extensive storage capabilities.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Operating System:** Android 14
- **Processor:** 2.0 GHz Octa-Core (Allwinner A523 Chipset)
- **Display:** 10.1-inch IPS HD Touchscreen (1280 x 800 pixels) with Eye Protection Technology
- **Memory:** 10GB RAM (4GB physical + 6GB virtual)
- **Storage:** 128GB ROM, expandable up to 1TB via TF/MicroSD card (not included)
- **Cameras:** 5MP Front Camera, 8MP Rear Camera
- **Connectivity:** Wi-Fi 6 (5G/2.4G Dual Band), Bluetooth 5.0
- **Audio:** Dual Speakers, Built-in Microphone, 3.5mm Headphone Jack
- **Battery:** Large capacity lithium polymer battery (approximately 5000mAh), with fast charging via USB Type-C
- **Design:** Lightweight and slim (8mm thin body)

2.2 Tablet Components



This diagram shows the location of the headphone jack, speakers, volume buttons, power ON/OFF button, microSD card slot, USB-C port, front camera, rear camera, and flash on the Jeazans OC101 Android Tablet.



An overview of the Jeazans OC101 tablet's key features, including its Android 14 OS, HD display, Octa-Core processor, Wi-Fi 6, Bluetooth 5.0, battery, cameras, and dual speakers.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your tablet. Connect the provided USB Type-C cable to the tablet's USB-C port and the other end to the power adapter. Plug the adapter into a wall outlet. The charging indicator will show the charging status. A full charge typically takes approximately 1.5 hours.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side, as shown in the components diagram) for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the Power button until a menu appears. Select 'Power off' and confirm.
- **To Restart:** Press and hold the Power button until a menu appears. Select 'Restart' and confirm.

3.3 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network and enter the password to connect to the internet.
3. **Google Account:** Sign in with your Google account or create a new one. This is necessary for accessing the Google Play Store and other Google services.
4. **Date & Time:** Set the correct date and time, or allow the network to set it automatically.
5. **Security:** Set up a screen lock (PIN, pattern, or password) for device security.



The Jeazans OC101 Android Tablet, ready for initial setup.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

- **Tap:** Select an item or activate a function.
- **Touch & Hold:** Access contextual menus or drag items.
- **Swipe:** Navigate through screens, lists, or content.
- **Pinch:** Zoom in or out on images and web pages.

4.2 Wi-Fi Connection

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi ON.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.



The tablet supports dual-band Wi-Fi 6 and Bluetooth 5.0 for enhanced connectivity.

4.3 Bluetooth Pairing

To pair with a Bluetooth device:

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth ON.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the 'Available devices' list and follow any on-screen prompts.

4.4 Using the Cameras

The tablet features a 5MP front camera and an 8MP rear camera.

1. Open the **Camera** application.
2. Tap the camera icon to switch between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.



The tablet's dual cameras are suitable for video calls and capturing moments.

4.5 Expanding Storage

The tablet supports storage expansion up to 1TB using a TF (MicroSD) card.

1. Locate the microSD card slot on the side of the tablet (refer to the components diagram).
2. Gently insert the TF card into the slot until it clicks into place.
3. The tablet will detect the new storage. You may be prompted to format it for use as portable or internal storage.



The tablet offers 10GB RAM and 128GB ROM, with an expandable microSD slot for up to 1TB additional storage.

4.6 Downloading Applications

Access the Google Play Store to download and install applications.

 
1. Ensure you are connected to Wi-Fi and logged into your Google account.
2. Tap the **Play Store** icon on your home screen or app drawer.
3. Search for the desired application and tap **Install**.

10.1-inch Brilliant Display

Android 14 Tablet has a 10.1-inch display with 1280* 800 resolution and a screen-to-body ratio of 84%. With a large dazzling screen, every frame is a visual feast.



10.1-inch
Display



1280x800
Resolution

The 10.1-inch display provides a clear viewing experience for applications and media.

4.7 Eye Protection Mode

The tablet's display features low blue light technology to reduce eye strain.

1. Go to **Settings > Display**.
2. Look for options like 'Eye Comfort Shield', 'Night Light', or 'Reading Mode' and enable them as desired.

Full Viewing Angle Wide Field of View

Eyes Care Protection, The 10.1-inch full-laminate display gives you a cinematic audio-visual experience. With a resolution of up to 1280x800, it gives you a vivid viewing experience. Take care of your eyes, safer and more



10.1-inch

IPS

IPS Wide
Viewing Angle



16:9



HD Resolution



Eyes Protection



The 10.1-inch IPS HD display offers a wide field of view and includes eye protection features.

5. MAINTENANCE

5.1 Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Do not use harsh chemicals, abrasive cleaners, or aerosol sprays.
- Avoid getting moisture into openings.

5.2 Battery Care

- Avoid exposing the tablet to extreme temperatures (hot or cold).
- Do not allow the battery to fully discharge frequently. Charge it before it drops below 20%.
- Use only the provided charger or a certified compatible charger.

5.3 Software Updates

Regularly check for and install software updates to ensure optimal performance and security.

1. Go to **Settings > System > System update**.
2. Follow the on-screen instructions to check for and install any available updates.

5.4 Storage Management

To maintain performance, periodically manage your tablet's storage.

- Delete unnecessary apps and files.
- Clear cache data for apps in **Settings > Apps > [App Name] > Storage & cache**.
- Move large files to an external TF card if you have one installed.

6. TROUBLESHOOTING

6.1 Common Issues and Solutions

Issue	Solution
-------	----------

Issue	Solution
Tablet does not power on	Ensure the battery is charged. Connect to the charger for at least 30 minutes. If still unresponsive, press and hold the power button for 10-15 seconds.
Wi-Fi connection issues	Restart your Wi-Fi router. Go to Settings > Network & internet > Wi-Fi, toggle Wi-Fi off and then on. Forget the network and reconnect.
Slow performance	Close unused applications. Clear app caches. Restart the tablet. Check for available software updates.
Apps crashing or freezing	Force close the app (Settings > Apps > [App Name] > Force stop). Clear the app's cache and data. Reinstall the app.
Screen unresponsive	Restart the tablet by holding the power button. If unresponsive, use the reset pinhole (refer to components diagram) with a thin object like a paperclip.

6.2 Factory Reset

A factory reset will erase all data from your tablet and restore it to its original factory settings. Back up important data before proceeding.

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision and enter your PIN/pattern/password if prompted.

7. SPECIFICATIONS

Feature	Detail
Brand	Jeazans
Model Name	OC101
Operating System	Android 14
Screen Size	10.1 inches
Screen Resolution	1280 x 800 pixels (IPS HD)
Processor	2 GHz Octa-Core
Chipset Brand	Allwinner
RAM	10GB (4GB physical + 6GB virtual)
Internal Storage	128 GB
Expandable Storage	Up to 1TB via MicroSD/TF Card
Wireless Type	802.11ax (Wi-Fi 6, 5G/2.4G Dual Band)
Bluetooth	Bluetooth 5.0
Front Camera	5MP

Feature	Detail
Rear Camera	8MP
Battery Life (Average)	6 Hours (mixed usage)
Item Weight	0.634 ounces
Product Dimensions (LxWxH)	9.68 x 6.42 x 0.43 inches
Color	Black

8. WARRANTY AND SUPPORT

The Jeazans OC101 Android Tablet comes with a ONE-YEAR limited warranty. For any product inquiries, technical assistance, or warranty claims, please refer to the contact information provided on your product packaging or the official Jeazans website. Customer support is available 7 days a week, 24 hours a day.