

## LICAEVEY LICAEVEYdkqcghib95-12

# LICAEVEY 5K 80MP Digital Camera Instruction Manual

Model: LICAEVEYdkqcghib95-12

[Introduction](#)

[Features](#)

[Components](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warr](#)

[& Support](#)

## 1. INTRODUCTION

Thank you for purchasing the LICAEVEY 5K 80MP Digital Camera. This compact camera is designed for both photography and video recording, offering high-resolution imaging and user-friendly features. Please read this manual carefully to understand the camera's functions and ensure optimal performance.

## 2. PRODUCT FEATURES

- **High Resolution Imaging:** Capture photos at 80MP and record videos in 5K at 15 frames per second.
- **2.8-inch Display:** Convenient screen for framing shots and reviewing content.
- **18X Digital Zoom:** Adjust magnification to suit various photography needs using the W/T keys.
- **Built-in Flash:** Provides additional illumination in low-light conditions.
- **Versatile Shooting Modes:** Includes continuous photography, time-lapse photography, loop video, composition lines, and recognition functions.
- **Portable Design:** Compact and lightweight, suitable for travel and outdoor activities.
- **Rechargeable Battery:** Integrated 750mAh battery with Type-C charging for extended use.

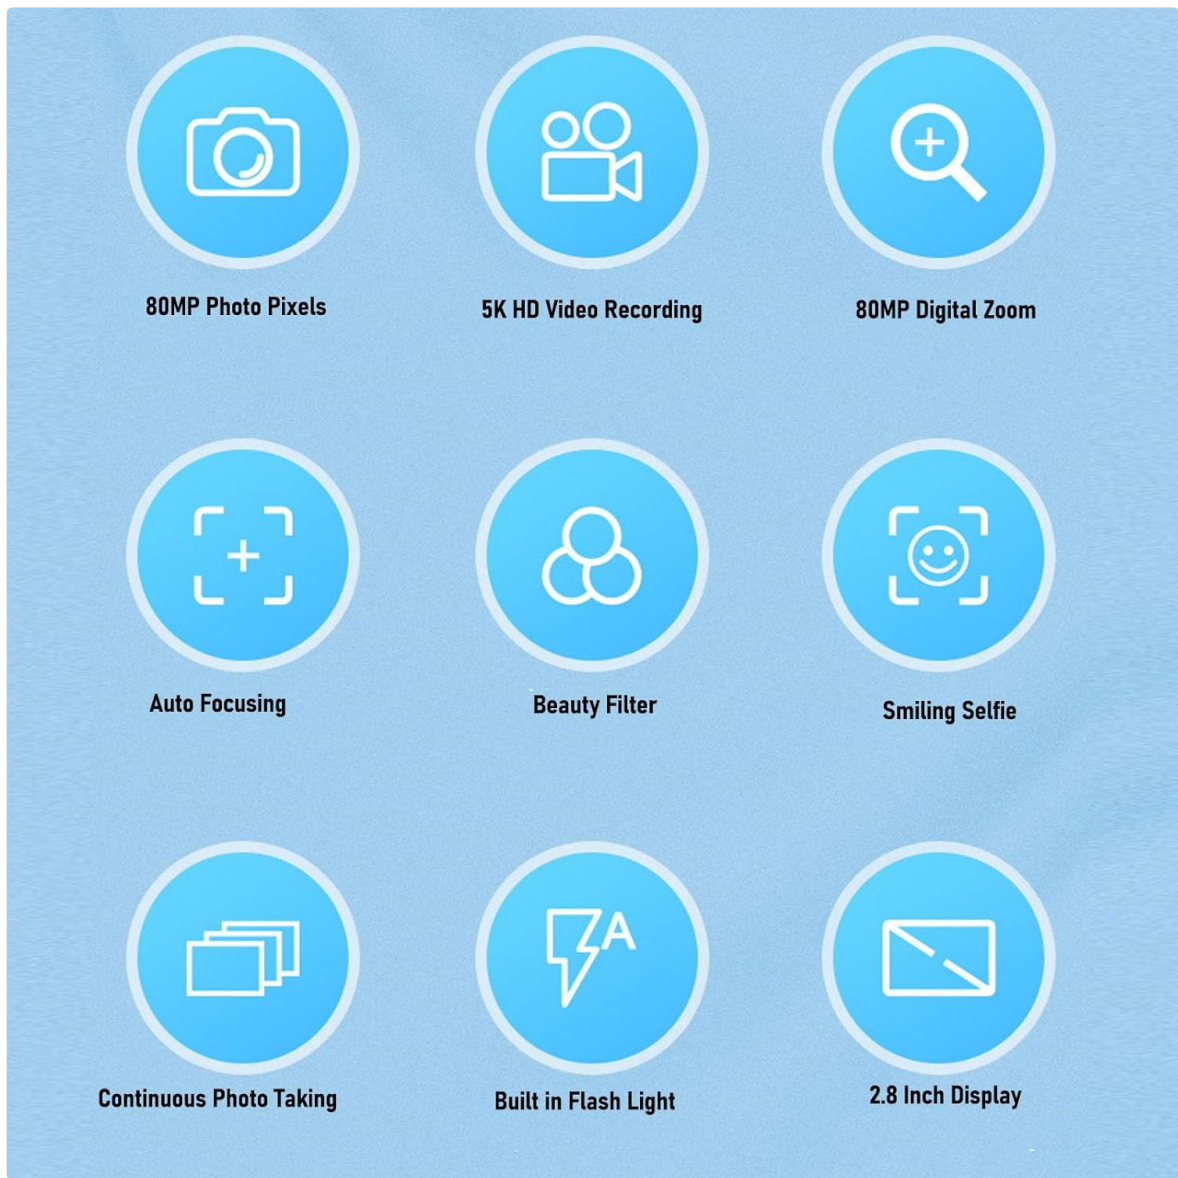


Figure 2.1: Overview of key camera features.

### 3. PRODUCT LAYOUT AND COMPONENTS

---

#### 3.1 Package Contents

Upon unpacking, ensure all items are present:

- LICAEEVEY 5K 80MP Digital Camera
- USB Type-C Charging Cable
- Wrist Strap
- User Manual (this document)



Figure 3.1: Camera and included accessories.

### 3.2 Camera Overview



Figure 3.2: Front view of the camera.

The camera features a prominent lens with 18X Powerful Zoom and FNO.2.2 f=3.83mm specifications. A built-in flash is located to the left of the lens, and a wrist strap attachment point is on the right side.



Figure 3.3: Rear view of the camera with screen and controls.

The rear of the camera features a 2.8-inch display. Control buttons include:

- **W/T Buttons:** For controlling digital zoom.
- **Power Button:** To turn the camera on/off.
- **Shutter Button:** To capture photos or start/stop video recording.
- **Mode Button:** To switch between different shooting modes.
- **OK Button:** For selection and confirmation.
- **DISP Button:** To change display information.
- **MENU Button:** To access camera settings.

## 4. SETUP

---

### 4.1 Charging the Battery

The camera has a built-in 750mAh rechargeable battery. Before first use, fully charge the camera.

1. Connect the supplied USB Type-C cable to the camera's charging port.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's

USB port.

3. The charging indicator light will illuminate. Charging typically takes about 3 hours.
4. Once fully charged, the indicator light may change or turn off. Disconnect the cable.

A full charge provides approximately 2 hours of endurance time.



**Built in 750mAh Battery, Type C Cable Charging**  
**Suitable for vacation, travel, gathering, camping use**



Figure 4.1: Battery information and charging via Type-C cable.

## 4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen illuminates.
- **To Power Off:** Press and hold the Power button until the screen turns off.

## 5. OPERATING INSTRUCTIONS

### 5.1 Taking Photos

1. Turn on the camera.
2. Ensure the camera is in photo mode (check the icon on the screen). If not, press the Mode button to switch.
3. Frame your shot using the 2.8-inch display.
4. Press the Shutter button to capture the image.

### 5.2 Recording Videos

1. Turn on the camera.

2. Press the Mode button to switch to video recording mode.
3. Press the Shutter button once to start recording. A timer or indicator will appear on the screen.
4. Press the Shutter button again to stop recording.

### 5.3 Using Digital Zoom

The camera supports 18X digital zoom.

- While in photo or video mode, press the 'W' button to zoom out (wide angle).
- Press the 'T' button to zoom in (telephoto).



Figure 5.1: Camera lens with zoom capabilities.

### 5.4 Using the Built-in Flash

The camera's built-in flash provides illumination for low-light conditions.

- Access the flash settings via the Menu button or a dedicated flash button/icon (refer to on-screen prompts).
- Select desired flash mode (e.g., Auto, Fill-flash, Red-eye reduction, Off).



Figure 5.2: Location of the built-in flash.

## 5.5 Advanced Shooting Modes

The camera offers several advanced modes:

- **Continuous Photography:** Captures a series of photos rapidly.
- **Time-Lapse Photography:** Takes photos at set intervals to create a time-lapse video.
- **Loop Video:** Records video in segments, overwriting older footage when storage is full.
- **Composition Lines:** Displays grid lines on the screen to aid in framing.
- **Recognition Functions:** May include features like face detection or smile capture.

Access these modes through the Mode button or the camera's menu settings.

## 6. MAINTENANCE

---

### 6.1 Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.

- For the lens and screen, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- Do not spray cleaning solution directly onto the camera. Apply it to the cloth first.

## 6.2 Battery Care

- Charge the battery regularly, even if the camera is not in frequent use, to maintain battery health.
- Avoid exposing the camera to extreme temperatures, which can affect battery life.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted.	Charge the camera fully using the Type-C cable.
Images are blurry.	Lens is dirty; insufficient light; camera shake.	Clean the lens. Use flash in low light. Hold the camera steady.
Cannot record video.	Insufficient storage; incorrect mode.	Ensure sufficient storage space. Switch to video mode.
Battery drains quickly.	Frequent use of flash; continuous recording; old battery.	Reduce flash usage. Limit continuous recording. Ensure battery is fully charged.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	LICAEVEYdkqcghib95-12
Photo Resolution	80 Megapixels
Video Resolution	5K at 15 FPS
Display Screen	2.8 inch
Digital Zoom	18X
Lens Aperture	F/2.2 f=3.83mm
Battery	Built-in 750mAh rechargeable
Charging Port	Type-C
Charging Time	Approx. 3 hours
Endurance Time	Approx. 2 hours
Item Weight	9.1 ounces
Package Dimensions	5.91 x 4.72 x 1.57 inches
Manufacturer	LICAEVEY

# 5K Digital Camera

## F/2.2 f=3.83mm Wide Angle Lens

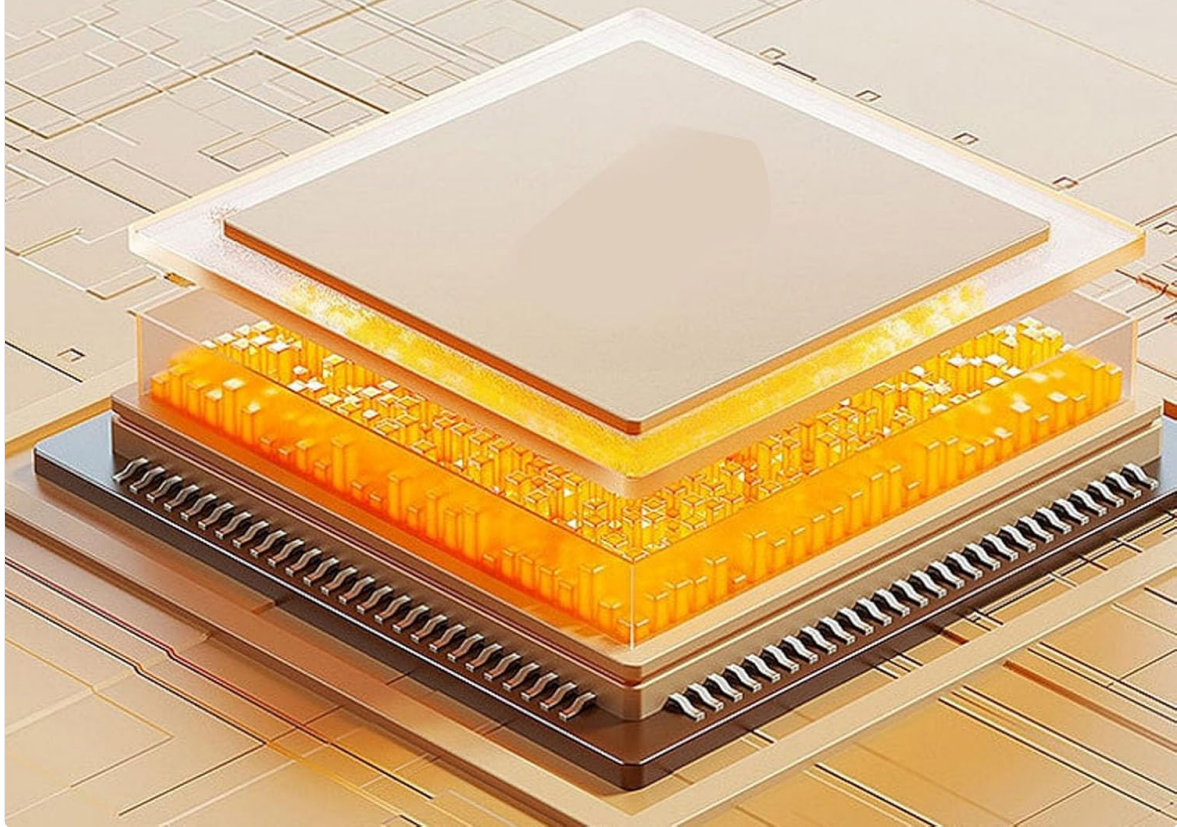


Figure 8.1: Lens technology overview.

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Specific warranty terms and support channels are typically outlined by the seller or manufacturer.