

[Manuals.plus](#) /

› [TECKEEN](#) /

› Dewoitine D.520 Fighter Aircraft Model User Manual

TECKEEN D.520 Fighter Model

Dewoitine D.520 Fighter Aircraft Model User Manual

Detailed instructions for assembly, display, and care of your 1:72 scale diecast model.

INTRODUCTION

This manual provides essential information for the proper setup, display, and maintenance of your TECKEEN France Dewoitine D.520 Fighter Aircraft Model. This highly detailed 1:72 scale diecast model is designed for enthusiasts and collectors, accurately restoring the original aircraft's proportions and details.



Image: The TECKEEN Dewoitine D.520 Fighter Aircraft Model, showcasing its detailed design and included display stand.

SETUP

Unboxing

Carefully remove all components from the packaging. Ensure you have the following items:

- 1 x France Dewoitine D.520 Fighter Model Airplane
- 1 x Display Stand

Attaching to the Display Stand

The model is designed to be displayed on the included stand. Locate the small slot on the underside of the aircraft model. Align this slot with the peg on the display stand. Gently press the model onto the peg until it is securely seated. Do not force the connection.



Image: The model airplane correctly mounted on its display stand, ready for exhibition.

DISPLAY AND HANDLING

Recommended Display Environments

To preserve the model's finish and details, display it in a stable environment away from direct sunlight, extreme temperatures, and high humidity. A display cabinet or a sturdy shelf is ideal.

Handling Precautions

Always handle the model by its main body or the display stand. Avoid touching delicate parts such as the propeller, antenna, or tail fins, as these can be fragile. When moving the model, support it from the base to prevent accidental drops or damage.



Image: Side view of the model, illustrating its detailed paint scheme and overall form.

MAINTENANCE

Cleaning Instructions

To clean the model, gently wipe it with a soft, dry, lint-free cloth. For stubborn dust, a slightly damp cloth (water only) can be used, followed immediately by a dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the paint and material.

Storage Recommendations

If storing the model for an extended period, place it back in its original packaging or a protective container to prevent dust accumulation and accidental damage. Store in a cool, dry place.

TROUBLESHOOTING

Loose Components

In rare cases, small components may become slightly loose due to handling or transit. If a part feels loose, gently try to re-seat it. Avoid using excessive force or adhesives unless specifically recommended by the manufacturer, as this may damage the finish or material.

Dull Finish

If the model's finish appears dull, it may be due to dust or residue. Follow the cleaning instructions in the Maintenance section. Ensure the display environment is free from excessive dust or airborne particles.

SPECIFICATIONS

Attribute	Detail
Product Model	France Dewoitine D.520 Fighter
Product Scale	1:72
Product Material	Alloy + PC
Product Size (L x W x H)	14cm x 12cm x 8cm (5.51in x 4.72in x 3.15in)
Package Dimensions	5.51 x 4.72 x 3.15 inches
Product Weight	10.58 ounces (approx. 300g)
Manufacturer	TECKEEN
Country of Origin	China

WARRANTY INFORMATION

Specific warranty details for the TECKEEN Dewoitine D.520 Fighter Aircraft Model are typically provided at the point of purchase or included with the product packaging. Please refer to any documentation received with your model or contact the seller directly for warranty terms and conditions.

CUSTOMER SUPPORT

For any questions, concerns, or assistance regarding your TECKEEN Dewoitine D.520 Fighter Aircraft Model, please contact the seller from whom you purchased the product. They will be able to provide direct support or guide you to the appropriate manufacturer's contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question