



Manuals.plus /

- › Schaub Lorenz /
- › Schaub Lorenz Dishwasher User Manual

## Schaub Lorenz 9120047686959

# Schaub Lorenz Dishwasher User Manual

*Model: 9120047686959*

## 1. INTRODUCTION

Thank you for choosing a Schaub Lorenz appliance. This user manual provides essential information for the safe and efficient operation of your new dishwasher. Please read this manual thoroughly before using the appliance and keep it for future reference.

This dishwasher is designed for household use and is suitable for washing standard household dishes and glasses. It features a mechanical control system, Mini Active drying, and a capacity for 13 place settings.

## 2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

### General Safety

- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children and pets away from the dishwasher when it is in operation.
- Only use detergents and rinse aids specifically designed for dishwashers.
- Do not open the door during operation, especially during the hot wash or drying cycle, as hot water or steam may escape.
- The appliance is equipped with a door lock safety mechanism and anti-overflow protection.

### Electrical Safety

- Before cleaning or maintenance, always unplug the appliance or switch off the power supply.
- Do not pull the power cord to disconnect the appliance. Always grasp the plug firmly.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

### 3. SETUP AND INSTALLATION

This Schaub Lorenz dishwasher is a freestanding model, designed for easy installation. Ensure the installation area meets the required dimensions and has access to water and electrical connections.

#### Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage during transit. Report any damage to your retailer immediately.

#### Placement

Place the dishwasher on a flat, stable surface. Ensure there is adequate space around the appliance for ventilation and door opening. The dimensions of the product are approximately 59.8 cm (width) x 59.8 cm (depth) x 85 cm (height).

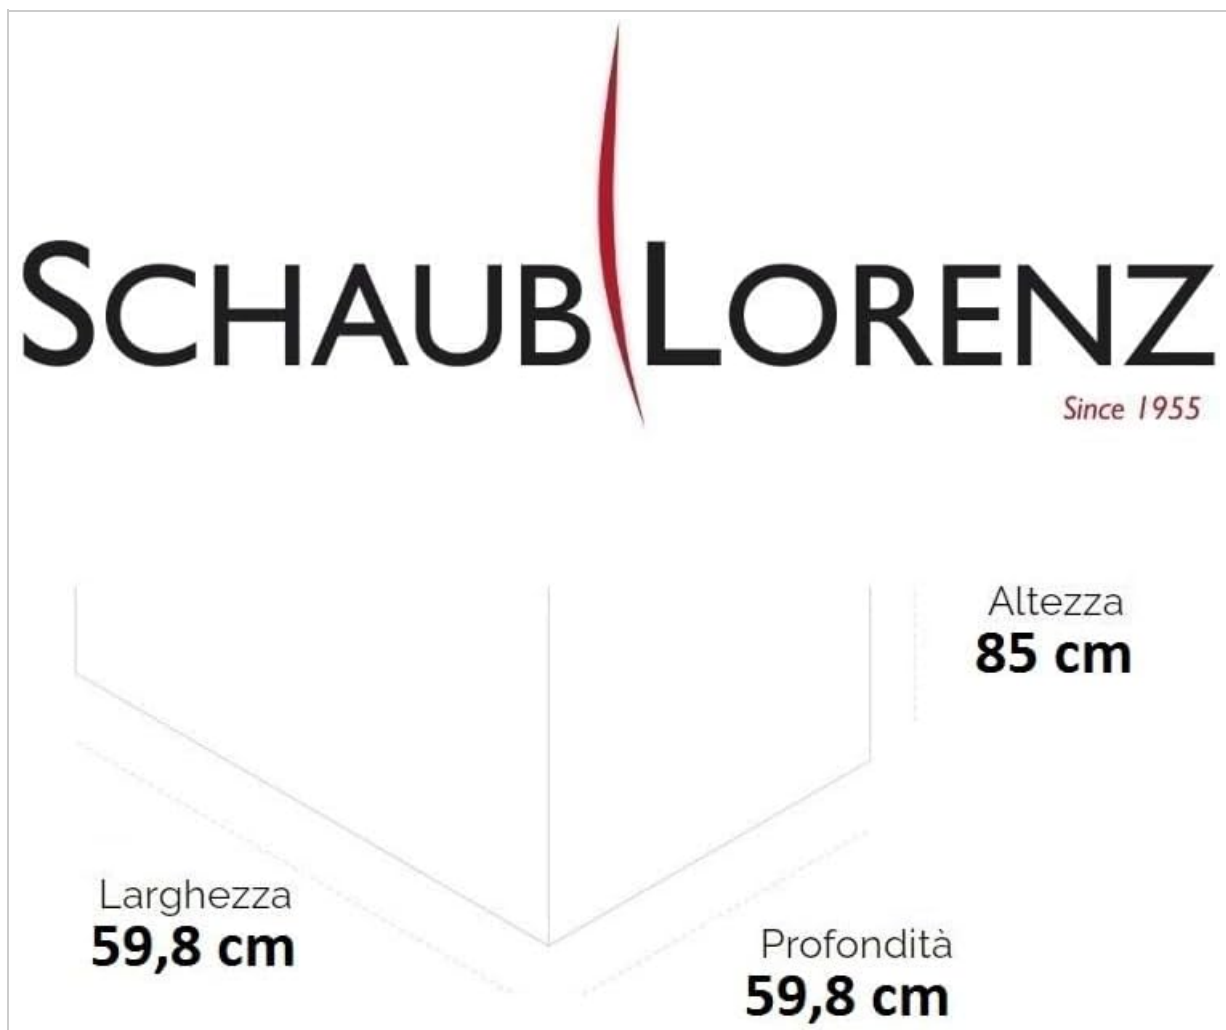


Figure 3.1: Dishwasher Dimensions. This image illustrates the height, width, and depth of the dishwasher, which are 85 cm, 59.8 cm, and 59.8 cm respectively.

#### Water Connection

Connect the water inlet hose to a cold water supply. Ensure all connections are tight to prevent leaks. The dishwasher consumes approximately 12 liters of water per cycle.

#### Drain Connection

Connect the drain hose to a suitable drain pipe or sink trap. Ensure the hose is not kinked or obstructed.

#### Electrical Connection

Plug the dishwasher into a grounded electrical outlet. Verify that the voltage and frequency match the specifications on the appliance's rating plate.

## **4. OPERATING INSTRUCTIONS**

---

Your Schaub Lorenz dishwasher features a mechanical control system and an LED display for easy operation.



Figure 4.1: Front View of the Dishwasher. This image displays the overall appearance of the dishwasher, including its white finish and the control panel at the top.

## Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place larger items in the lower basket and smaller items, cups, and glasses in the upper basket. The dishwasher includes 2 cup racks and a removable cutlery basket.
- Ensure dishes do not block the spray arms.

## Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the rinse aid indicator and refill the rinse aid dispenser if necessary.
- Check the salt indicator and refill the salt dispenser if necessary.

## Program Selection

The dishwasher offers 6 washing programs:

1. **Pre-wash:** For rinsing dishes that will be washed later.
2. **Rapid Wash 30' 40°C:** A quick wash cycle for lightly soiled dishes.
3. **ECO Wash:** An energy-efficient program for normally soiled dishes.
4. **Super Rapid Wash 50' 65°C:** A faster wash for moderately soiled dishes.
5. **Hygiene 70°C:** A high-temperature wash for heavily soiled items requiring sanitization.
6. **Intensive 65°C:** For very dirty pots, pans, and dishes.

Select the desired program using the mechanical control. The LED display will show relevant information.

## Starting a Cycle

- Close the dishwasher door firmly.
- Press the Start button.
- You can set a delayed start from 1 to 19 hours.
- A half-load function is available for smaller loads.

## Cycle Indicators

The dishwasher features indicators for the washing cycle, rinse aid, and salt levels.

## 5. MAINTENANCE AND CLEANING

---

Regular maintenance ensures optimal performance and extends the lifespan of your dishwasher.

### Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

### Interior Cleaning

- Clean the spray arms regularly to ensure water jets are not blocked.
- Remove and clean the filters at the bottom of the dishwasher to prevent food particle buildup.
- The interior tub is made of stainless steel, which is durable and easy to clean.

### Salt and Rinse Aid Refill

Monitor the salt and rinse aid indicators and refill as needed to ensure effective washing and drying results.

## 6. TROUBLESHOOTING

Before contacting service, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Fuse blown.	Check power connection; Ensure door is latched; Check household fuse/circuit breaker.
Dishes not clean	Improper loading; Clogged spray arms; Insufficient detergent; Incorrect program selected.	Reload dishes correctly; Clean spray arm nozzles; Add more detergent; Select a more intensive program.
Water not draining	Clogged filter; Kinked drain hose; Drain pump malfunction.	Clean the filter system; Straighten the drain hose; Contact service if pump is faulty.
Excessive noise	Dishes rattling; Foreign object in pump; Improper installation.	Rearrange dishes; Check for foreign objects; Ensure dishwasher is level.

## 7. TECHNICAL SPECIFICATIONS

Below are the key technical specifications for your Schaub Lorenz dishwasher, model 9120047686959.

- **Model Number:** 9120047686959
- **Type:** Freestanding Dishwasher
- **Capacity:** 13 Place Settings
- **Control System:** Mechanical
- **Drying System:** Mini Active
- **Number of Programs:** 6
- **Display Type:** LED
- **Delayed Start:** 1-19 hours
- **Half Load Function:** Yes
- **Water Inlet:** Cold Water
- **Tub Material:** Stainless Steel
- **Color:** White
- **Dimensions (W x D x H):** 59.8 cm x 59.8 cm x 85 cm
- **Annual Energy Consumption:** 261 kWh/year
- **Energy Consumption per Cycle:** 0.910 kWh/cycle
- **Annual Water Consumption:** 3360 Liters/year
- **Water Consumption per Cycle:** 12 Liters/cycle
- **Noise Level:** 49 dB(A)
- **Energy Efficiency Class:** E (equivalent to A++ under old rating system)
- **Washing Performance Class:** A
- **Drying Performance Class:** A
- **Country of Origin:** Turkey



SCHAUB LORENZ


SVDW136D



94 kWh / 100



 13 x



12,0 L



3:25



49 dB  
ABCD

2019/2017

Figure 7.1: Energy Label. This label provides key energy efficiency and performance data for the dishwasher, including its Class E rating and consumption figures.

<p><b>SVDW136D</b>  <b>Bianco</b>  13 Coperti  Regolazione cesto superiore  Consumo medio annuo energia 261 kw/h  Consumo medio annuo acqua 3.360 lt  Rumorosità 49 dBA</p> <p><b>Caratteristiche generali</b>  Classe E (A++)  Display  6 Programmi  Partenza ritardata 1-19 h  Mezzo carico</p> <p><b>Dimensioni cm (AxLxP)</b>  85 x 59,8 x 59,8</p>	<div data-bbox="1061 91 1289 320">  <p><b>E</b> (A++)</p> </div> <p><b>Classe Energetica</b></p> <div data-bbox="1061 483 1289 712">  </div> <p><b>13 Coperti</b></p> <div data-bbox="1061 826 1289 1055">  </div> <p><b>49 dBA</b> <b>Silenziosità</b></p>
---	--

Figure 7.2: Product Specifications Summary. This image summarizes key features and specifications, including capacity, programs, and dimensions.

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact your retailer. Schaub Lorenz provides a standard warranty for manufacturing defects.

If you receive a defective or damaged product, please consult your retailer's return policy. For purchases made on Amazon, you can refer to their help pages regarding returns and defective products.

