

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Schaub Lorenz](#) /
- › [Schaub Lorenz SV1008D1IN Washing Machine User Manual](#)

Schaub Lorenz SV1008D1IN

Schaub Lorenz SV1008D1IN Washing Machine User Manual

Model: SV1008D1IN

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Schaub Lorenz SV1008D1IN 8 kg 1000 RPM Inverter Washing Machine. Please read these instructions carefully before installation, use, or maintenance. Keep this manual for future reference.

Your washing machine features an inverter motor, electronic control, a clear display, and a large door for convenient loading. It offers a variety of programs and safety features designed to provide optimal washing results.



Figure 1: Front view of the Schaub Lorenz SV1008D1IN washing machine, showing the control panel, detergent drawer, large front-loading door, and the drum inside.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Ensure the appliance is properly grounded and connected to a suitable power supply.
 - Do not allow children to play with or operate the washing machine.
 - Never force the door open during operation. The door lock safety mechanism prevents this.
 - In case of a water leak, immediately turn off the water supply and disconnect the power. The anti-overflow safety system helps prevent major leaks.
 - Do not wash items that have been cleaned, washed, soaked, or dabbed with combustible or explosive substances.
 - Regularly check the water inlet and drain hoses for damage.
-

3. INSTALLATION AND SETUP

3.1 Unpacking

Carefully remove all packaging materials. Ensure all transit bolts are removed from the rear of the machine before use. Refer to the separate installation guide for detailed instructions on transit bolt removal.

3.2 Positioning

The Schaub Lorenz SV1008D1IN is a freestanding appliance. Place it on a firm, level surface. Adjust the leveling feet to ensure the machine is stable and does not wobble during operation. Proper leveling is crucial for reducing noise and vibration.

3.3 Water and Electrical Connections

Connect the water inlet hose to a cold water tap. Ensure the drain hose is properly installed into a standpipe or sink, preventing kinks. Connect the power cord to a grounded electrical outlet. Do not use extension cords.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The washing machine features an electronic control system with a digital display and touch controls. A rotary knob is used for program selection, while touch buttons allow for additional options and settings.

4.2 Loading Laundry

Open the large front door and load laundry into the drum. Do not exceed the maximum load capacity of 8 kg. Overloading can affect washing performance and cause excessive wear.

4.3 Adding Detergent

Pull out the detergent drawer located at the top left of the control panel. Add appropriate amounts of detergent and fabric softener to the designated compartments. Refer to your detergent packaging for dosage recommendations.

4.4 Program Selection

Turn the program selection knob to choose one of the 15 available washing programs:

- Cotton Eco 40-60
- Cotton with Prewash
- Cotton 20°C
- Colored
- Wool
- Rinse
- Anti-Allergic
- Spin/Drain
- Delicates/Hand Wash
- Synthetics
- Mixed
- Duvets
- Dark Clothes/Jeans
- Rapid 60' 60°C
- Rapid 15 Min

4.5 Starting a Cycle

After selecting a program, you can adjust options such as temperature and spin speed using the touch controls. The display will show the program phase indicator and the time remaining until the cycle finishes. Press the Start/Pause button to begin the wash cycle. The delayed start function allows you to set a later start time.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

- **Cleaning the Detergent Drawer:** Periodically remove and clean the detergent drawer to prevent residue buildup.
- **Cleaning the Drum:** Run a maintenance wash cycle (e.g., a hot cotton cycle with no laundry and a descaling agent) regularly to clean the drum.
- **Cleaning the Filter:** The drain pump filter should be cleaned periodically to remove lint and small objects. Refer to the full manual for location and cleaning instructions.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, consult the following common troubleshooting tips. The fault detection system may display error codes on the screen.

- **Machine not starting:** Check if the power cord is properly plugged in, the door is securely closed, and the water supply is open.
- **Water not draining:** Check the drain hose for kinks or blockages. Clean the drain pump filter.
- **Excessive vibration/noise:** Ensure the machine is level and all transit bolts have been removed. The load balancing system helps minimize vibration.

- **Excessive foam:** Reduce the amount of detergent used. The anti-foam protection system will activate if too much foam is detected.

For persistent issues or error codes not listed, contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Schaub Lorenz
Model	SV1008D1IN
Capacity	8 kg
Maximum Spin Speed	1000 RPM
Motor Type	Inverter
Control Type	Electronic, Touch
Installation Type	Freestanding
Access Position	Front Load
Drum Material	Stainless Steel
Color	White
Number of Programs	15
Eco 40-60 Program Duration (Full Load)	218 minutes
Eco 40-60 Program Duration (Half Load)	168 minutes

8. WARRANTY AND SUPPORT

For warranty information and terms, please refer to the warranty card included with your appliance or contact Schaub Lorenz customer service. Keep your proof of purchase for any warranty claims.

For technical support or service requests, please contact the authorized service center in your region. Contact details can typically be found on the manufacturer's website or in the product documentation.