

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Machenike](#) /
- › [Machenike Machcreator N17A Laptop User Manual](#)

## Machenike N17A

# Machenike Machcreator N17A Laptop User Manual

Model: N17A

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Machenike Machcreator N17A Laptop. Please read these instructions thoroughly before using your device and retain them for future reference. This laptop is designed for personal use, offering a balance of performance and energy efficiency for tasks such as web browsing, word processing, and media consumption.



Image: Machenike Machcreator N17A Laptop in its premium packaging, illustrating the unboxing experience.

## 2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Machenike Machcreator N17A Laptop
- Power Adapter
- User Manual (this document)

### 3. PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your laptop.

#### 3.1. External Components

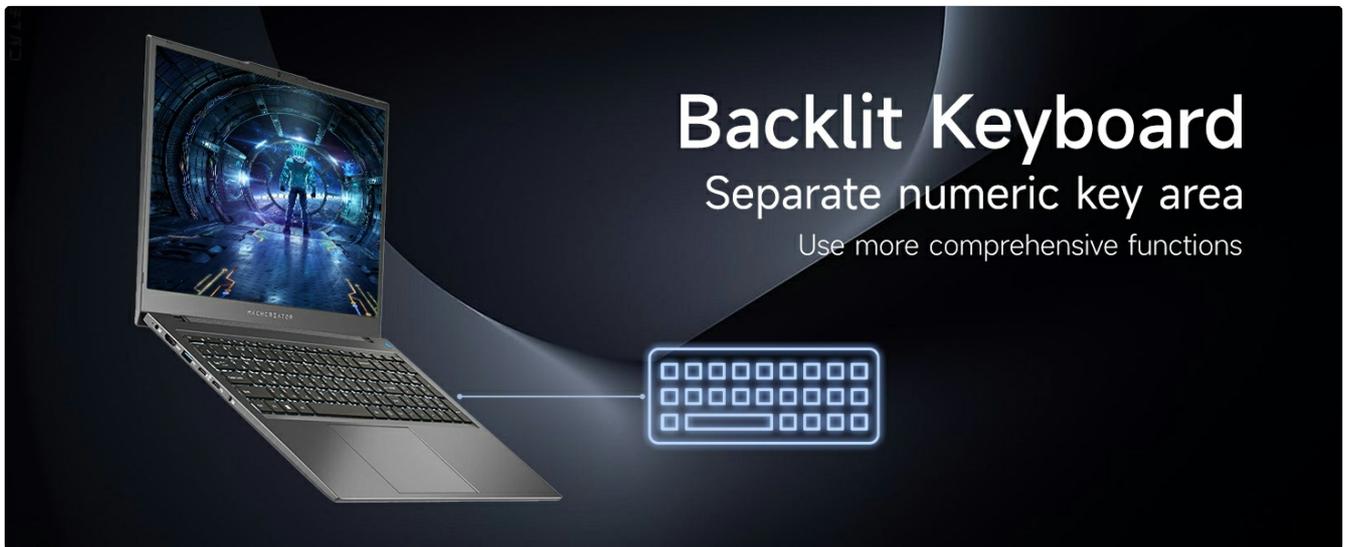


Image: The Machenike Machcreator N17A Laptop showcasing its modern design and the ability to open to a 170-degree angle for flexible viewing.

#### 3.2. Ports and Connectors

The Machenike Machcreator N17A is equipped with a variety of ports for connectivity:



Image: A detailed diagram highlighting the location and type of ports on the Machenike Machcreator N17A Laptop, including MicroSD Card Reader, Audio jack, RJ45 Ethernet, DC-in, USB Type-A, USB Type-C, HDMI, and Camera Shutter.

- **MicroSD Card Reader:** For reading and writing to MicroSD cards.
- **DC-in:** Connect the power adapter here.
- **Thunderbolt 4 (x2):** High-speed data transfer, video output, and power delivery.
- **USB 2.0 Type-A (x2):** For connecting USB devices.
- **HDMI:** For connecting to external displays.
- **RJ45:** For wired Ethernet network connection.
- **Audio Jack:** For headphones or external speakers.

- **Webcam:** Integrated front-facing camera.

## 4. SETUP

### 4.1. Connecting the Power Adapter

1. Connect the power adapter to the DC-in port on the laptop.
2. Plug the power adapter into a wall outlet.
3. The battery will begin charging automatically.

### 4.2. Initial Power On and Windows 11 Setup

1. Open the laptop lid.
2. Press the power button located on the keyboard deck.
3. Follow the on-screen instructions to complete the Windows 11 Home setup process. This includes selecting your region, keyboard layout, connecting to a Wi-Fi network, and creating a user account.

## 5. OPERATING INSTRUCTIONS

### 5.1. Power Management

- **Turning On:** Press the power button.
- **Turning Off:** Click the Start button in Windows, then select Power > Shut down.
- **Sleep Mode:** Close the lid or select Power > Sleep from the Start menu.
- **Restart:** Select Power > Restart from the Start menu.

### 5.2. Keyboard and Touchpad

**Intel N100**  
Intel N100 Processor  
4Core 4 Threads  
up to 3.40GHz  
max turbo frequency

**Intel UHD**  
Intel UHD Graphics  
up to 45W  
Power consumption

Up to **32GB** DDR5  
4800MHZ

Up to **16GB**  
PCIe 4.0ssD  
Double M.2 ports

**Machcreator N17A**

Image: Close-up view of the Machenike Machcreator N17A Laptop's keyboard, highlighting the backlit keys, numeric keypad, and large touchpad for comfortable and efficient input.

- **Backlit Keyboard:** The keyboard features backlighting for improved visibility in low-light conditions. Use the designated function keys (Fn + F key combination) to adjust brightness or toggle the backlight.

- **Numeric Keypad:** A dedicated numeric keypad is included for efficient data entry and calculations.
- **Touchpad:** The large 5.5 x 3.9 inch touchpad supports multi-touch gestures for navigation. Refer to Windows settings for customizing touchpad gestures.

### 5.3. Display



Image: The Machenike Machcreator N17A Laptop display, emphasizing its 17.3-inch Full HD 120Hz screen with narrow bezels, designed to reduce motion blur and eliminate lag.

- The laptop features a 17.3-inch Full HD (1920x1080) IPS display with a 120Hz refresh rate.
- The screen hinge allows for a 170-degree angle adjustment, providing flexibility for presentations, collaborations, or personal viewing comfort.

### 5.4. Connectivity

- **Wi-Fi:** Connect to wireless networks via the built-in Wi-Fi (802.11ac). Access Wi-Fi settings through the Windows taskbar network icon.
- **Bluetooth:** Pair with Bluetooth devices such as headphones, mice, or keyboards. Enable Bluetooth in Windows settings.
- **External Displays:** Use the HDMI or Thunderbolt 4 ports to connect to external monitors or projectors.
- **USB Devices:** Connect USB peripherals to the USB Type-A or Thunderbolt 4 ports.
- **MicroSD Card:** Insert a MicroSD card into the card reader for file access.

### 5.5. Operating System (Windows 11 Home)

Your laptop comes pre-installed with Windows 11 Home. For detailed information on using Windows 11, refer to Microsoft's official documentation and support resources. Key features include:

- Streamlined user interface with new Start menu and taskbar.
- Snap Layouts and Snap Groups for improved multitasking.
- Integrated Microsoft Store for applications.

## 6. MAINTENANCE

### 6.1. Cleaning the Laptop

- Use a soft, lint-free cloth slightly dampened with water or a screen cleaner to clean the display.
- For the keyboard and chassis, use a soft, dry cloth. Avoid harsh chemicals or abrasive materials.
- Periodically clean the ventilation grilles to prevent dust buildup, which can affect cooling performance.

## 6.2. Battery Care

- Avoid fully discharging the battery frequently.
- Store the laptop in a cool, dry place if not used for extended periods.
- Do not expose the battery to extreme temperatures.

## 6.3. Software Updates

- Regularly check for and install Windows updates to ensure system stability and security.
- Keep device drivers updated for optimal performance.

# 7. TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Laptop does not power on.	No power, discharged battery, faulty power adapter.	Ensure power adapter is securely connected and plugged into a working outlet. Allow battery to charge for a few minutes before attempting to power on again.
Display is blank.	Laptop in sleep mode, display settings issue, hardware problem.	Press any key or move the touchpad to wake from sleep. Check if an external monitor is connected and set as primary display. Restart the laptop.
Wi-Fi not connecting.	Wi-Fi disabled, incorrect password, router issue.	Ensure Wi-Fi is enabled in Windows settings. Verify network password. Restart your Wi-Fi router.
Keyboard backlight not working.	Backlight turned off or brightness set to minimum.	Use the designated function key combination (e.g., Fn + F key) to toggle or adjust the keyboard backlight brightness.

# 8. SPECIFICATIONS

Detailed technical specifications for the Machenike Machcreator N17A Laptop.

1080p Full HD resolution  
**120Hz Display**



Image: Diagram illustrating the Intel Alder Lake-N Series CPU, highlighting its 4 Cores, 4 Threads, up to 3.4 GHz Max Turbo Frequency, and DDR5 RAM compatibility.

Feature	Specification
Model Name	N17A
Processor	Intel N100 Processor (4 Cores, 4 Threads, 6MB L3 Cache, up to 3.4 GHz)
Graphics	Intel UHD Graphics (Integrated)
Display	17.3-inch FHD (1920 x 1080) IPS, 120Hz
RAM	8GB DDR5 (4800 MHz)
Storage	256GB PCIe NVMe M.2 SSD
Operating System	Windows 11 Home
Ports	2x Thunderbolt 4, 2x USB 2.0 Type-A, 1x HDMI, 1x RJ45, 1x MicroSD Card Reader, 1x Audio Jack, 1x DC-in
Wireless Connectivity	Wi-Fi (802.11ac), Bluetooth 5.0
Keyboard	Backlit Keyboard, Numeric Keypad
Webcam	Integrated Front Camera
Battery	Lithium Ion, 6 Cells
Dimensions (L x W x Th)	15.6" x 10.32" x 1.02"

## 9. WARRANTY AND SUPPORT

Your Machenike Machcreator N17A Laptop comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support or service inquiries, please contact Machenike customer

service through their official website or the contact information provided with your purchase documentation.

© 2026 Machenike. All rights reserved.