

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY AXD7710 Replacement Remote Control User Manual for Pioneer CD DVD Receiver Stereo Systems

ECONTROLLY AXD7710

ECONTROLLY AXD7710 Replacement Remote Control User Manual

For Pioneer CD DVD Receiver Stereo Systems

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY AXD7710 Replacement Remote Control. It is designed to operate various Pioneer CD DVD Receiver Stereo System models. Please read this manual carefully to ensure proper setup and operation of your remote control.

The remote control is an infrared (IR) device and requires a clear line of sight to the Pioneer stereo system for optimal functionality.

2. PRODUCT OVERVIEW

The ECONTROLLY AXD7710 is a direct replacement remote control, pre-programmed for compatibility with specified Pioneer stereo systems. It features a standard layout for easy navigation and control of your audio and video functions.





Figure 2.1: Front view of the AXD7710 remote control, displaying all functional buttons for system operation.

3. SETUP

3.1 Battery Installation

The AXD7710 remote control requires two (2) AAA 1.5V alkaline batteries (not included). No programming or pairing is required after battery installation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 3.1: Open battery compartment, illustrating correct battery placement.

Once batteries are installed, the remote is ready for use with compatible Pioneer systems.

4. OPERATING INSTRUCTIONS

To operate your Pioneer stereo system, point the remote control directly at the system's infrared receiver. Ensure there are no obstructions between the remote and the system.

4.1 Key Functions Overview

- **STANDBY/ON:** Powers the system on or off (standby mode).
- **DVD/CD, USB, TUNER, AUDIO IN/LINE, BT AUDIO:** Selects the corresponding input source.
- **OPEN/CLOSE:** Opens or closes the disc tray.
- **CLOCK/TIMER, SLEEP:** Accesses clock/timer settings or sets the sleep timer.
- **AUDIO 1, 2, 3:** Direct selection for specific audio inputs.
- **SUBTITLE, ANGLE, EQUALIZER:** Controls DVD subtitle, viewing angle, or audio equalizer settings.
- **ZOOM, MEMORY, PROGRAM, P.BASS:** Functions related to video zoom, memory presets, program playback, or bass enhancement.
- **ST/MONO, VIDEO MODE, A-B, BASS/TREBLE:** Toggles stereo/mono, changes video output mode, sets A-B repeat, or adjusts bass/treble levels.
- **0-9, CLEAR:** Numeric keypad for direct track/chapter selection or clearing entries.
- **RPT/RDM, DISPLAY:** Controls repeat/random playback or changes display information.
- **TOP MENU, MENU/PBC:** Accesses the disc's top menu or Playback Control (PBC) menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Navigates menus and confirms selections.
- **HOME/MENU, RETURN:** Accesses the main menu or returns to the previous screen.
- **PRESET (+/-), TUNE (+/-):** Changes radio presets or manually tunes radio frequencies.
- **VOLUME (+/-), MUTE:** Adjusts volume levels or mutes audio output.
- **DIMMER:** Adjusts the brightness of the system's display.
- **Playback Controls (◀◀, ▶▶, ■, ▶▶, ■, ◀, ▶):** Standard controls for rewind, play/pause, fast forward, stop, skip back, and skip forward.
- **SHIFT, RDS, ASPM, PTY, DISPLAY, OPTION:** Advanced functions for radio data system (RDS), automatic sound program memory (ASPM), program type (PTY), display modes, and other options.

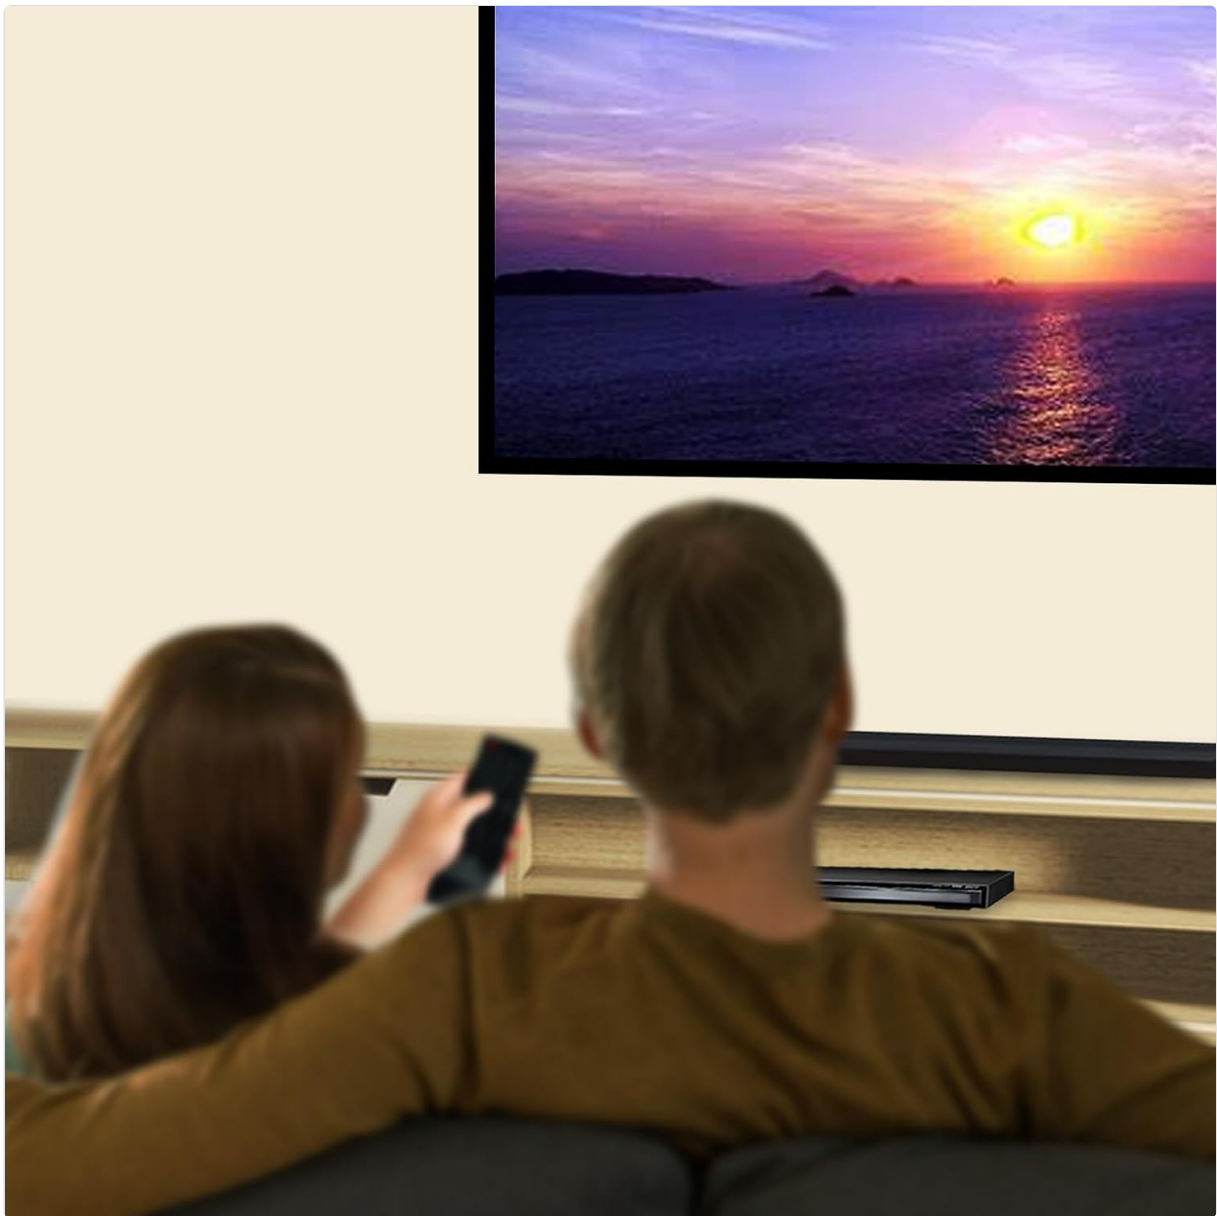


Figure 4.1: Illustrative example of remote control usage with a stereo system.

5. COMPATIBLE MODELS

The ECONTROLLY AXD7710 Replacement Remote Control is compatible with the following Pioneer CD DVD Receiver Stereo System models:

- X-HM21
- X-HM211
- XH-HM31
- X-HM41
- X-HM21V-K
- X-HM31V-K
- X-HM31V-S
- X-HM32V-K
- X-HM32V-S
- X-HM32VD-K
- X-HM21-K
- X-HM21-S

- X-HM11-S
- X-HM11-K

6. SPECIFICATIONS

Feature	Detail
Model Number	AXD7710
Brand	ECONTROLLY
Product Dimensions	5.91 x 1.57 x 0.59 inches
Item Weight	1.41 ounces
Color	Black
Special Feature	Ergonomic design
Power Source	2 x AAA 1.5V Batteries (not included)
Compatible Devices	Pioneer CD DVD Receiver Stereo Systems

7. TROUBLESHOOTING

7.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with new AAA alkaline batteries if necessary.
- **Line of Sight:** Verify there is a clear path between the remote control and the infrared sensor on your Pioneer stereo system. Remove any obstructions.
- **Distance:** Ensure you are within the effective operating range of the remote control (typically up to 20 feet or 6 meters).
- **System Power:** Confirm that your Pioneer stereo system is powered on.

7.2 Specific Functions Not Working

- Ensure your Pioneer system model is listed in the compatible models section (Section 5).
- Some advanced functions may require specific modes or settings on your Pioneer system. Refer to your Pioneer system's original manual for detailed operation of its features.

8. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

9. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your ECONTROLLY AXD7710 Replacement Remote Control, please refer to the product packaging or contact the seller directly. Keep your purchase receipt as proof of purchase.