



Manuals.plus /

› AreShark /

› AreShark 9 FT Patio Umbrella User Manual: Assembly, Operation, and Care

AreShark 9FT Patio Umbrella with Push Button Tilt and Crank

AreShark 9 FT Patio Umbrella User Manual

Model: 9FT Patio Umbrella with Push Button Tilt and Crank

1. INTRODUCTION

Thank you for choosing the AreShark 9 FT Patio Umbrella. This umbrella is designed to provide shade and comfort for your outdoor spaces, featuring a push-button tilt mechanism and a crank system for easy operation. Its robust construction with 8 sturdy ribs ensures durability. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your product.

2. COMPONENTS OVERVIEW

The AreShark 9 FT Patio Umbrella typically includes the following main components:

- Umbrella Canopy (Warm White, high-density polyester)
- Main Pole (Powder-coated iron)
- 8 Sturdy Ribs (Integrated into canopy structure)
- Crank Handle (for opening/closing)
- Push Button (for tilt adjustment)

Note: The umbrella base is not included. A compatible base (e.g., AreShark umbrella Base Stand ASIN: B0DPC4G9CS) is required for stability.



Image: The AreShark 9 FT Patio Umbrella shown fully open and also in its folded state, highlighting its overall design and the main pole.

3. ASSEMBLY AND SETUP

Follow these steps to assemble your patio umbrella:

1. **Unpack Components:** Carefully remove all parts from the packaging and ensure all components listed in Section 2 are present.
2. **Insert Pole into Base:** Place the lower section of the umbrella pole securely into a suitable umbrella base (not included). Ensure the base is heavy enough to provide adequate stability for a 9 FT umbrella.
3. **Attach Upper Pole:** Connect the upper section of the umbrella pole, which includes the canopy, to the lower section. Ensure the connection is firm and secure.
4. **Open Canopy:** Use the crank handle to slowly open the umbrella canopy until it is fully extended. Do not force the crank if resistance is met.

8 HEAVY DUTY RIBS

Extra strong & superior wind resistance



36 MPH
WIND RESISTANCE



25%
THICKER



Image: A detailed view of the umbrella's internal structure, showcasing the 8 sturdy ribs that provide support and wind resistance.

4. OPERATING INSTRUCTIONS

Your AreShark patio umbrella is designed for ease of use:

4.1 Opening and Closing the Umbrella

- To **open** the umbrella, turn the crank handle clockwise until the canopy is fully extended.
- To **close** the umbrella, turn the crank handle counter-clockwise until the canopy is fully retracted.

4.2 Tilting the Umbrella

- To **tilt** the umbrella, locate the push button on the pole. Press and hold the button while adjusting the canopy to your desired angle. Release the button to lock the tilt position.

4.3 Double-Layer Vent

The umbrella features a double-layer vent at the top of the canopy. This design allows for essential wind and heat ventilation, contributing to the umbrella's stability and comfort in breezy conditions.



Image: A diagram illustrating the key operational features: the double-layer vent for air circulation, the push-button for tilting, and the easy-grip crank for opening and closing the canopy.

4.4 Product Overview Video

For a visual guide on the features and operation of the AreShark 9FT Patio Umbrella, please watch the video below:

Your browser does not support the video tag.

Video: An official product video from the seller, HLI Inc., demonstrating the features and functionality of the AreShark 9FT Patio Umbrella.

5. MAINTENANCE AND CARE

Proper care will extend the life of your patio umbrella:

- **Cleaning the Canopy:** The high-density polyester canopy is water and UV resistant. Clean with mild soap and water. Rinse thoroughly and allow to air dry completely before folding or storing. Do not use harsh chemicals or abrasive cleaners.
- **Frame Care:** The powder-coated iron pole and ribs are designed for durability. Wipe down the frame with a damp cloth periodically to remove dirt and debris.
- **Storage:** In strong winds, heavy rain, or during off-season, it is recommended to close and secure

the umbrella. For prolonged storage, remove the umbrella from its base, clean it, and store it in a dry, protected area to prevent damage and prolong its lifespan.

- **Base Stability:** Always ensure your umbrella is placed in a stable, weighted base appropriate for its size to prevent tipping.

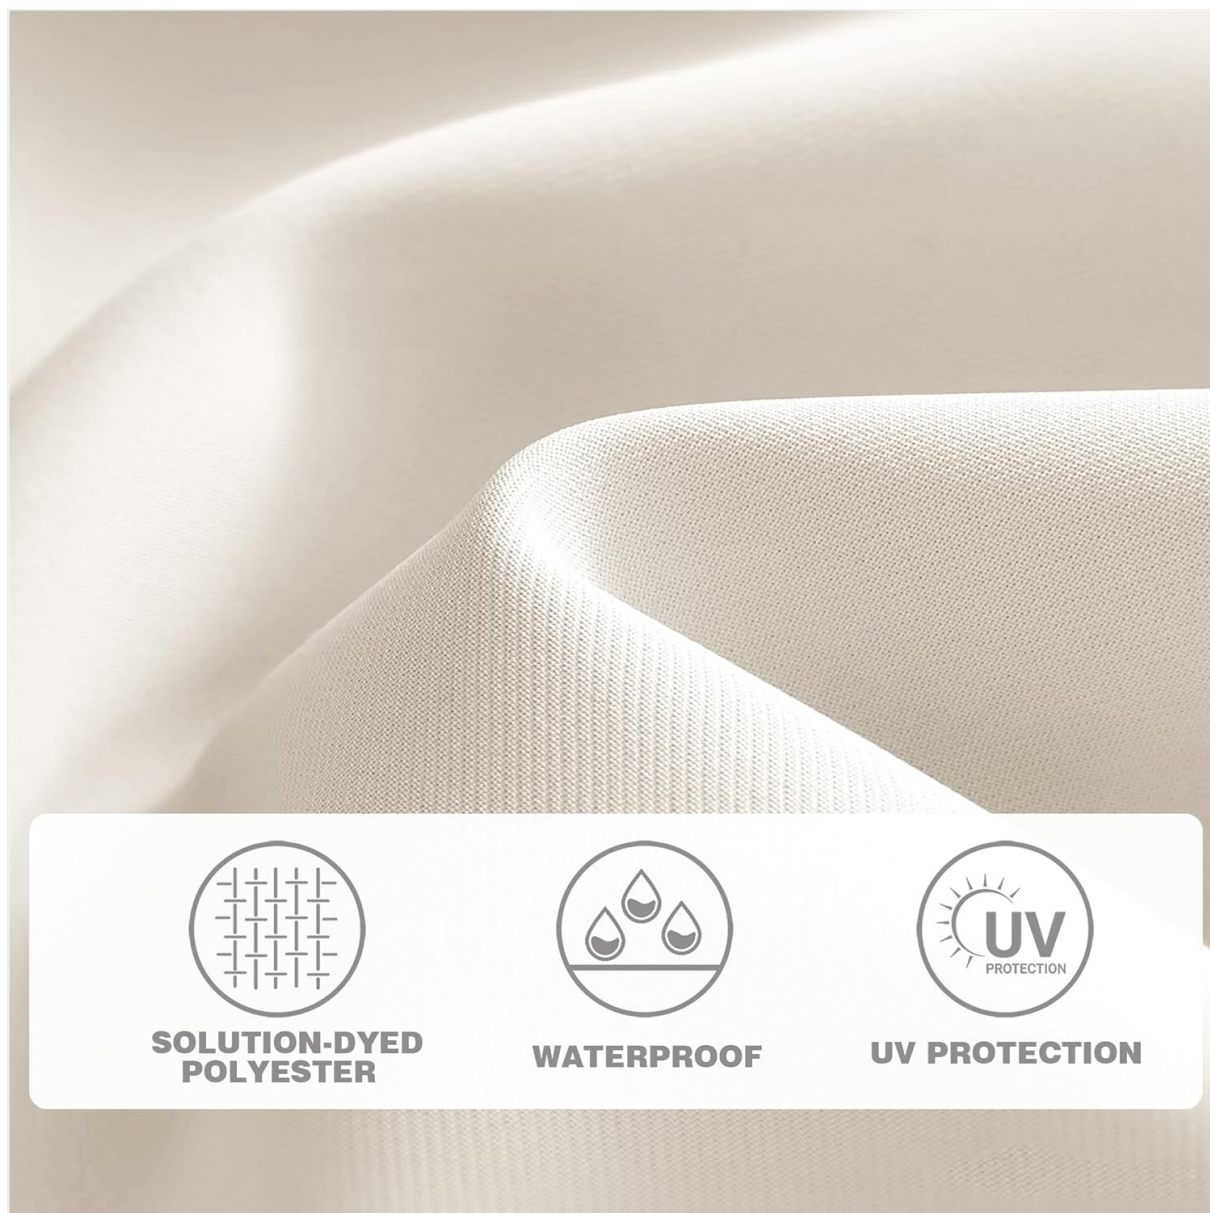


Image: A close-up of the umbrella fabric, highlighting its properties: solution-dyed polyester for color retention, waterproof coating, and UV protection for sun resistance.

6. TROUBLESHOOTING

If you encounter issues with your umbrella, consider the following common solutions:

- **Umbrella Not Opening/Closing Smoothly:** Check for any obstructions in the crank mechanism or canopy fabric. Ensure the pole sections are correctly aligned and securely connected.
- **Umbrella Not Tilting:** Ensure the push button is fully depressed when attempting to tilt. Check for any debris or obstruction around the tilt mechanism.
- **Umbrella Instability:** Verify that the umbrella pole is firmly seated in a sufficiently weighted base. Ensure the base is placed on a flat, level surface. Do not use the umbrella in high winds.

7. SPECIFICATIONS

Product Dimensions	108 x 108 x 108 inches (9 FT Diameter)
Item Weight	13.12 pounds
Brand	AreShark
Color	Warm White
Canopy Material	High-density Polyester
Frame Material	Alloy Steel (Powder-coated iron pole)
Special Features	Fade Resistant, UV Blocking, Vented, Waterproof, Windproof
Shape	Round

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact the retailer where the product was purchased. Specific warranty details are not provided in this manual.