



Manuals.plus /

› DOGNESS /

› DOGNESS W01 Automatic Dog Paw Cleaner Instruction Manual

## DOGNESS W01

# DOGNESS W01 Automatic Dog Paw Cleaner Instruction Manual

Model: W01

## 1. PRODUCT OVERVIEW

The DOGNESS W01 Automatic Dog Paw Cleaner is designed to provide a gentle and effective cleaning experience for your small to medium-sized dog's paws. Featuring a one-button operation and soft silicone bristles, it simplifies the process of removing dirt and mud, helping to keep your home clean.

The device is crafted with durable materials and includes a detachable brush for easy cleaning and versatile use as a grooming tool.



Image: The DOGNESS W01 Automatic Dog Paw Cleaner in light blue, showcasing its compact design and internal silicone bristles.

## 2. SAFETY INFORMATION

- Ensure the device is fully charged before initial use.
- Do not immerse the entire device in water. The electronic components are not waterproof.
- Use only pet-safe shampoo or cleaning solutions.
- Keep out of reach of children and pets when not in use.
- Inspect the device regularly for any damage. Discontinue use if damaged.
- Always supervise your pet during use.

## 3. PACKAGE CONTENTS

- DOGNESS W01 Automatic Dog Paw Cleaner Unit

- Detachable Silicone Bristle Brush Pad
- USB Charging Cable (plug not included)
- User Manual

## 4. SPECIFICATIONS

Feature	Detail
Model	W01
Dimensions	4.1 x 4.1 x 6.6 inches
Weight	1.48 Pounds
Battery	2000mAh Lithium Ion (included)
Charging Time	Approx. 2 hours for full charge
Battery Life	Up to 10 days on a full charge
Paw Opening Diameter	2.6 inches (best for paws less than 2 inches wide)
Bristle Material	Food-grade silicone

# Designed for Small & Medium Dog Breeds

Fits up to  2-inch-wide-paw



Image: Visual representation of the DOGNESS W01 Automatic Dog Paw Cleaner's dimensions, showing height, width, and paw opening diameter.

## 5. SETUP

- 1. Initial Charge:** Before first use, fully charge the device using the provided USB cable. Connect the cable to the charging port on the base of the unit and to a suitable USB power adapter (not included). The power button indicator light will show charging status.
- 2. Assemble (if disassembled):** Ensure the silicone bristle brush pad is securely placed inside the main unit and the top cover is attached.

# 2-Hour Full Charge Lasts 10 Days

Please fully charge before first use

USB

USB charging

2000mAh

2000mAh battery



Image: Close-up of the DOGNESS W01 Automatic Dog Paw Cleaner's base, showing the USB charging port and power button.

## 6. OPERATION


1. **Fill with Water:** Pour clean water into the paw cleaner cup. You may add a small amount of pet-safe shampoo if desired. Do not overfill.
2. **Insert Paw:** Gently guide your dog's muddy paw into the opening of the cleaner, ensuring it reaches the bristles.
3. **Start Cleaning:** Press the power button to activate the automatic cleaning. The internal bristles will rotate to clean the paw. The device offers two cleaning speeds; press the button again to switch speeds.
4. **Remove and Dry:** After a minute or until the paw is clean, remove the paw from the device. Use a towel to gently dry your dog's paw.
5. **Repeat:** Repeat the process for each paw.




Step1  
Pour the Water



Step2  
Spin Paw Cleaner

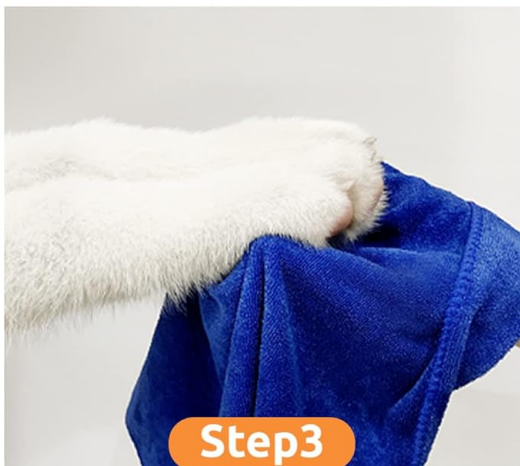

Step3  
Dry the Dog's Paw

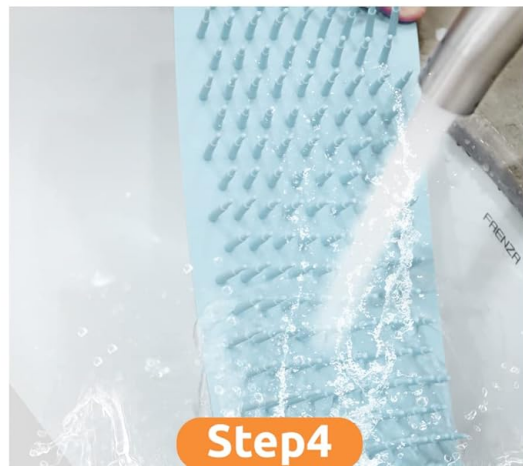

Step4  
Wash Brush Pad

Image: A four-step visual guide demonstrating how to use the DOGNESS W01 Automatic Dog Paw Cleaner: pour water, insert paw and spin, dry paw, and wash brush pad.

Video: An official product video demonstrating the 'W01 paw cleaner' in action, showing its ease of use and effectiveness.

Video: An official product video titled 'DOGNESS Rechargeable Paw Cleaner for Dogs', highlighting its features and how it cleans dog paws.

Video: An official product video demonstrating the 'Automatic Dog Foot Washer', showing the cleaning process and results.

## 7. MAINTENANCE

1. **Empty Dirty Water:** After each use, carefully empty the dirty water from the cleaner.
2. **Disassemble for Cleaning:** The device is easy to disassemble. Remove the top cover, then take out the silicone brush pad.
3. **Clean Components:** Wash the silicone brush pad and the inside of the cup with water. You can use mild soap if necessary. Ensure all dirt and debris are removed.
4. **Dry and Reassemble:** Allow all components to air dry completely before reassembling the

device.

## Detachable Soft Silicone Bristles



Image: The detachable soft silicone bristles of the DOGNESS W01 Automatic Dog Paw Cleaner, highlighting their flexibility and dual use as a grooming brush.

### 8. TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. If the battery is low, the indicator light may be red or off.
- **Bristles not spinning:** Check if the silicone brush pad is correctly installed. If the device detects an obstruction (e.g., paw stuck), it may temporarily stop spinning as a safety feature.
- **Ineffective cleaning:** Ensure enough water and/or shampoo is used. The paw opening is 2.6 inches in diameter, best suited for paws less than 2 inches wide. Larger paws may not be cleaned effectively.
- **Water leakage:** Ensure all components (silicone pad, top cover) are correctly assembled and tightened.

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty guide included in your package or visit the official DOGNESS website. Keep your purchase receipt as proof of purchase.

**Manufacturer:** DOGNESS