

food chopper

Generic Wireless Food Chopper 100ml User Manual

Model: food chopper

1. INTRODUCTION

Thank you for choosing the Generic Wireless Food Chopper. This compact and portable device is designed to simplify your food preparation tasks, allowing you to quickly chop garlic, ginger, chili, fruits, meat, and spices. Please read this manual carefully before use to ensure safe and optimal operation.

2. SAFETY INFORMATION

- Always keep the chopper out of reach of children.
- The blades are extremely sharp. Handle with care during assembly, disassembly, and cleaning.
- Do not immerse the motor unit in water or any other liquid. The motor unit is waterproof for rinsing, but not for submersion.
- Ensure the charging port is dry before connecting the USB charging cable.
- Do not operate the chopper if any part is damaged. Contact support for assistance.
- Avoid overfilling the chopping bowl.
- Do not use the appliance for purposes other than its intended use.

3. PACKAGE CONTENTS

The package includes the following items:

- 1 x Electric Mini Garlic Food Chopper (Motor Unit, Chopping Bowl, Blade Assembly)
- 1 x USB Charging Cable

4. PRODUCT FEATURES

- **Wireless Operation:** Enjoy the convenience of cordless chopping.
- **USB Rechargeable:** Easy charging via USB, perfect for portability.
- **Efficient Chopping:** Equipped with advanced 45-degree stainless steel blades for precise results.
- **Waterproof Design:** Allows for easy cleaning of the chopping bowl and blades.
- **Safety Lock:** Ensures safe operation by preventing the motor from running if not properly assembled.
- **Compact and Portable:** Lightweight design ideal for travel, camping, or small kitchens.

Product Details

01

Fine steel
three-blade
knife



03

Charging
indicator light
design



02

Safety lock



04

Waterproof
design



Image: Product details highlighting the three-blade knife, safety lock, charging indicator, and waterproof design.

5. SETUP

5.1 Initial Charging

1. Before first use, fully charge the device.
2. Connect the USB charging cable to the charging port on the motor unit.
3. Plug the other end of the USB cable into a suitable USB power source (e.g., wall adapter, computer, power bank).
4. The charging indicator light will illuminate during charging. It typically takes about 3 hours for a full charge, providing approximately one month of use depending on frequency.
5. Once fully charged, disconnect the USB cable.

USB Rechargeable Mini Electric

Garlic Vegetable Chopper

Easy to clean, fully
waterproof



Image: The mini electric chopper being charged via USB, illustrating its rechargeable and waterproof features.

Super long battery life

charge for 3 hours and use for one month



Image: The chopper demonstrating its compact size and long battery life after a 3-hour charge.

5.2 Assembly

1. Carefully place the blade assembly onto the central pin inside the chopping bowl.
2. Add your ingredients into the chopping bowl. Do not exceed the MAX fill line.
3. Align the motor unit with the chopping bowl and twist or press down firmly until it locks into place. The safety lock ensures the device will not operate unless properly assembled.

6. OPERATING INSTRUCTIONS

1. Prepare ingredients by cutting them into smaller pieces (approximately 1-2 cm) if necessary, to ensure efficient chopping.
2. Place the prepared ingredients into the chopping bowl.
3. Ensure the motor unit is securely attached to the chopping bowl.
4. Press and hold the power button on the top of the motor unit to start chopping.
5. Release the button to stop chopping. For finer results, pulse the button in short bursts.

6. For even chopping, you may need to briefly stop, remove the motor unit, and gently shake the bowl or use a spatula to redistribute ingredients before continuing.
7. Once chopping is complete, carefully remove the motor unit, then remove the blade assembly before emptying the chopped ingredients.

Electric Wireless Food Chopper



Image: The wireless food chopper actively chopping ingredients, demonstrating its use for various foods.

Flip and chop without leaving coarse particles

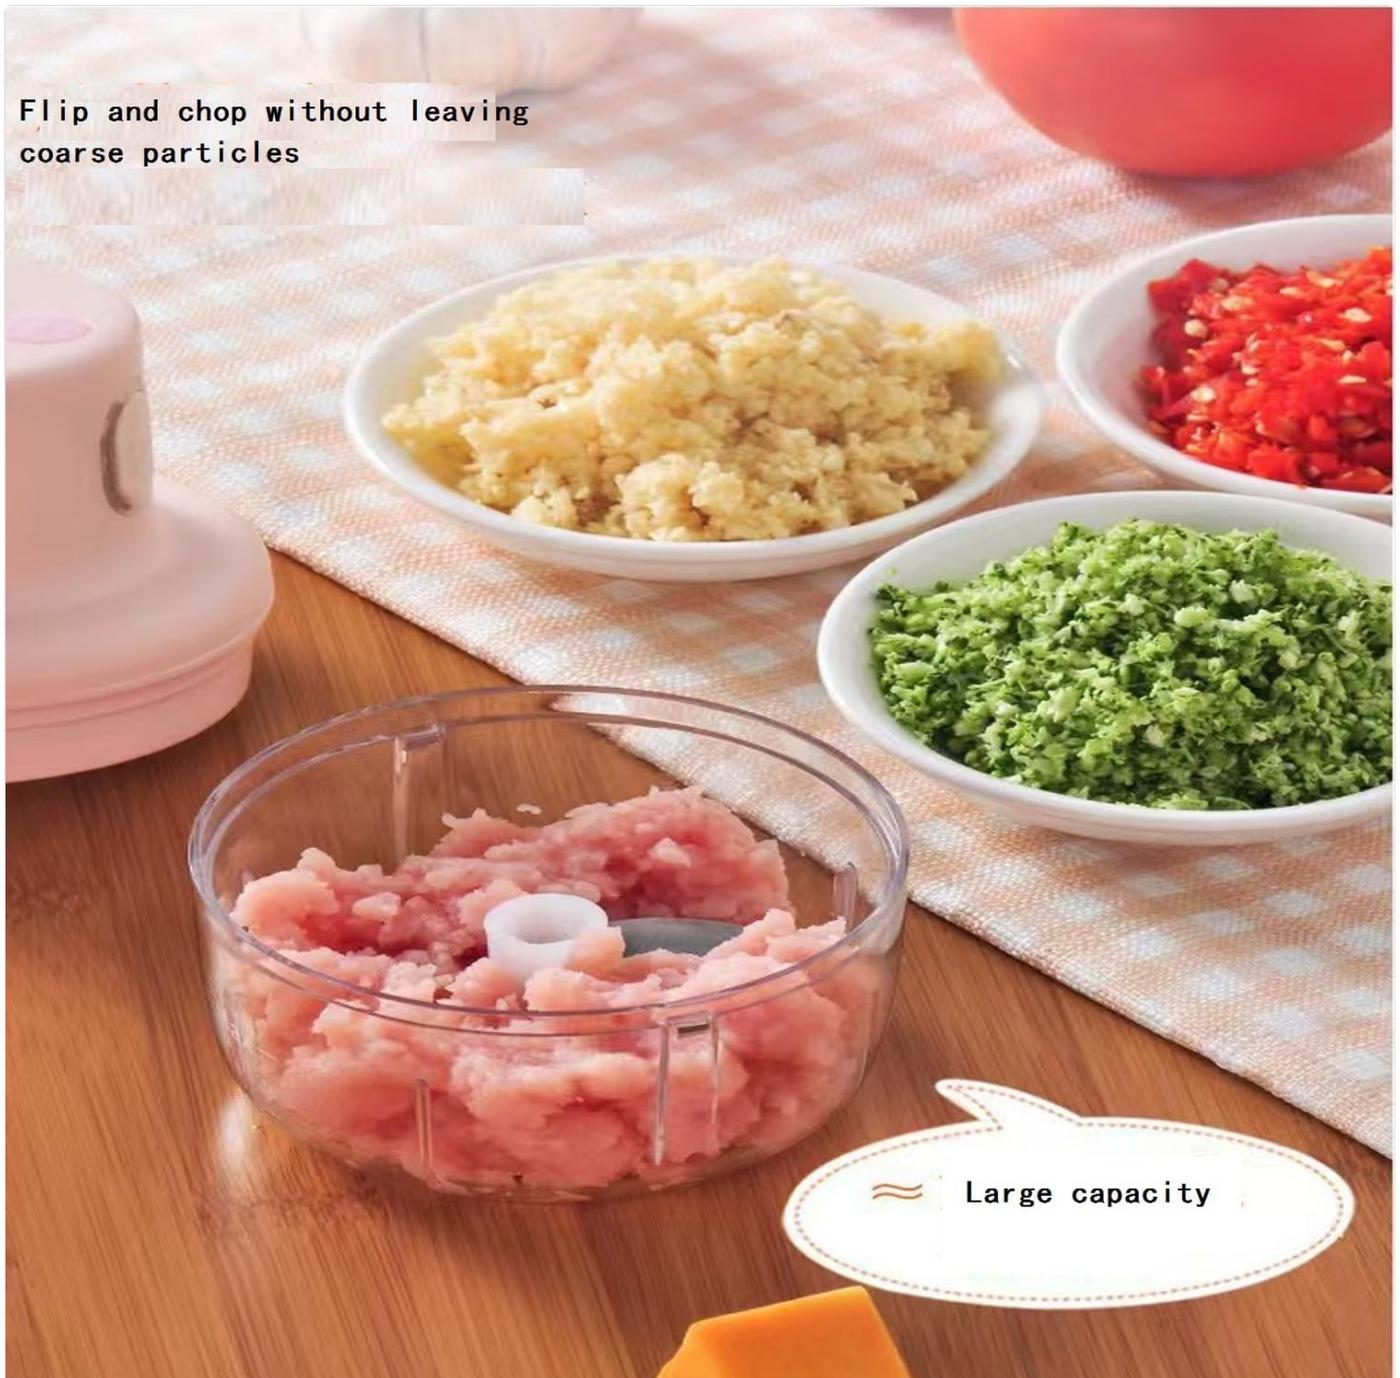


Image: The chopper's effectiveness in processing meat and other ingredients, highlighting its capacity.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your food chopper.

1. Always ensure the device is turned off and disconnected from any charging cable before cleaning.
2. Disassemble the motor unit, blade assembly, and chopping bowl.
3. The chopping bowl and blade assembly are dishwasher safe or can be hand washed with warm, soapy water. Be extremely careful when handling the sharp blades.
4. The motor unit has a waterproof design, allowing it to be rinsed under running water. **Do not immerse the motor unit in water.** Wipe it with a damp cloth if necessary.
5. Ensure all parts are thoroughly dried before reassembling or storing.
6. Store the chopper in a dry place.

Product Care Instructions: Hand Wash (for blades and bowl, motor unit rinse only).

8. TROUBLESHOOTING

If you encounter issues with your Wireless Food Chopper, please refer to the following common problems and solutions:

- **Device does not turn on:**
 - Ensure the battery is charged. Connect to a USB power source and charge for at least 30 minutes.
 - Verify that the motor unit is correctly assembled and locked onto the chopping bowl. The safety lock prevents operation if not properly secured.
- **Ingredients are not chopping effectively:**
 - Ensure ingredients are cut into small, manageable pieces before placing them in the chopper.
 - Do not overfill the chopping bowl. Reduce the quantity of ingredients.
 - The blades may be dull. If the device is new, this is unlikely. If it has been used extensively, consider replacement if available.
 - Pulse the button instead of holding it down continuously for better results with some ingredients.
- **Chopper stops during operation:**
 - The battery might be low. Recharge the device.
 - The motor might be overheating due to continuous use or tough ingredients. Allow it to cool down for a few minutes before resuming.
 - Check for any obstructions or large pieces of food jamming the blades.
- **Charging indicator light does not turn on:**
 - Ensure the USB cable is securely connected to both the chopper and the power source.
 - Try a different USB cable or power adapter.
 - Check if the charging port is clean and free of debris.

If the problem persists after trying these solutions, please contact customer support.

9. SPECIFICATIONS

Brand	Generic
Model Name	wireless food chopper mini
Capacity	100ml
Product Dimensions	5.1"D x 5.1"W x 3.6"H (approx. 92 x 130mm)
Weight	Approx. 11.4 oz (323g)
Material	Stainless steel blades + PP plastic body
Power Source	Battery Powered (USB Rechargeable)
Battery Type	500mAh Polymer Lithium Battery
Battery Voltage	3.7V
Rated Power	45W
Working Current	6A

Working Time	Approximately 30 seconds per ingredient cycle
Color	Pink
Manufacturer	baijimu

Product size



Image: Dimensions of the 100ml and 250ml food chopper models.

10. WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not provided in the product details. Please refer to your purchase documentation or contact the seller directly for warranty claims or technical assistance.