

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Best Choice Products](#) /

› [Best Choice Products Wooden Pretend Play Cottage Kitchen Instruction Manual](#)

## Best Choice Products SKY8537

# Best Choice Products Wooden Pretend Play Cottage Kitchen Instruction Manual

Model: SKY8537

## INTRODUCTION

This instruction manual provides important information for the assembly, operation, and maintenance of your Best Choice Products Wooden Pretend Play Cottage Kitchen. Please read this manual thoroughly before assembly and use to ensure safe and proper functionality. This playset is designed to encourage imaginative play with its unique cottage details, interactive features, and included accessories.

## SAFETY INFORMATION

**WARNING:** Not for children under 3 years old. This product contains small parts which may present a choking hazard. Adult supervision is required during assembly and play. Ensure all fasteners are securely tightened before use. Always use the included anti-tipping wall mount to secure the playset to a wall, preventing accidental tipping.



Image: Certification seal indicating compliance with ASTM F963 and CPSIA safety standards.

## WHAT'S IN THE Box

Your Best Choice Products Wooden Pretend Play Cottage Kitchen package includes the following items:

- All necessary wooden panels and components for the kitchen playset.

- Hardware (screws, fasteners, etc.) for assembly.
- Assembly Guide (this instruction manual).
- Three cooking utensils (ladle, spatula, slotted spoon).
- One play pot with lid.
- One play Dutch oven.
- Anti-tipping wall mount hardware.

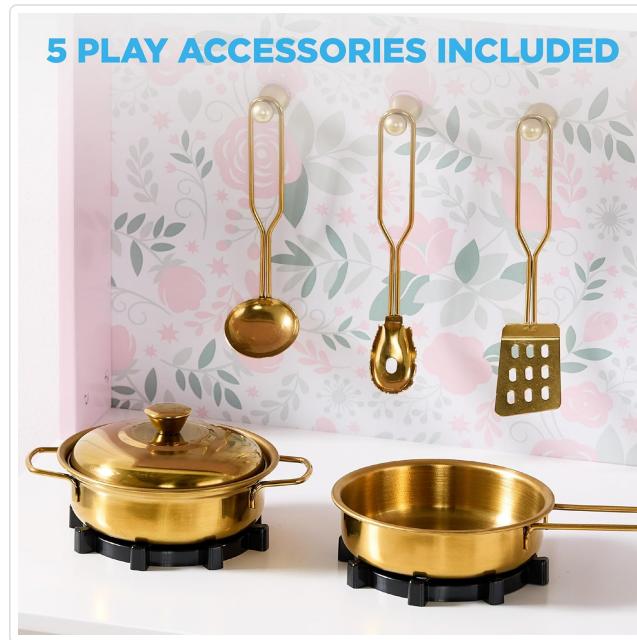


Image: A close-up of the five included gold play accessories: a pot with lid, a pan, a ladle, a spatula, and a slotted spoon.

## SETUP AND ASSEMBLY

Assembly of the Cottage Kitchen is required. Please follow the detailed instructions provided in the included Assembly Guide. It is recommended to have a Phillips screwdriver and a hammer for assembly. Organize all parts and hardware before beginning. The assembly process typically takes 1-2 hours.

**Important:** After assembly, securely attach the playset to a wall using the provided anti-tipping wall mount hardware. This is crucial for stability and safety, especially for active children. A drill may be required for wall mounting.



Image: The fully assembled pink wooden pretend play cottage kitchen, showcasing its design and features.

## OPERATING INSTRUCTIONS

The Cottage Kitchen is designed for imaginative play. It features several interactive elements:

- **Stovetop Knobs:** The gold knobs on the stovetop produce realistic clicking sounds when turned, simulating a real stove.
- **Microwave:** The microwave door opens and closes, and features a pretend control panel with buttons for enhanced play.
- **Oven:** The oven door opens and closes, providing space for play food and accessories. The clear part of the oven door is not real glass, ensuring safety.
- **Sink:** The gold-colored sink and faucet allow for pretend washing and cleaning.
- **Storage:** The playset includes ample storage space in the oven and sink shelves, as well as an open pantry section, to keep play accessories tidy.

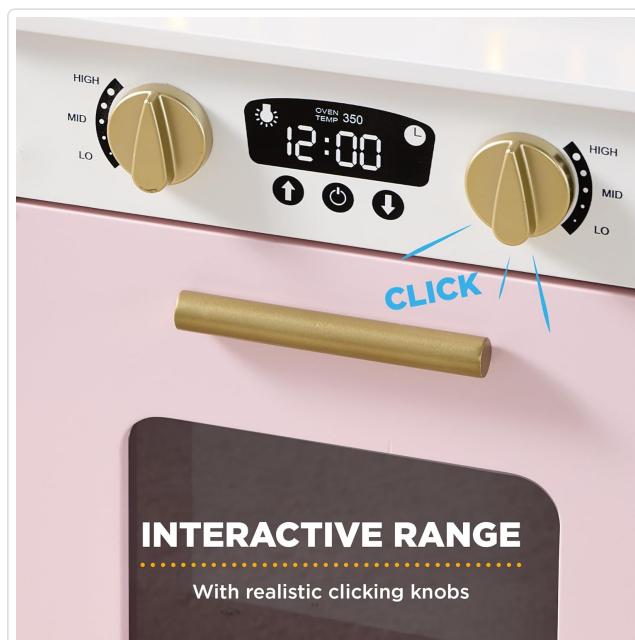


Image: Detailed view of the stovetop with gold knobs, indicating their clicking functionality.

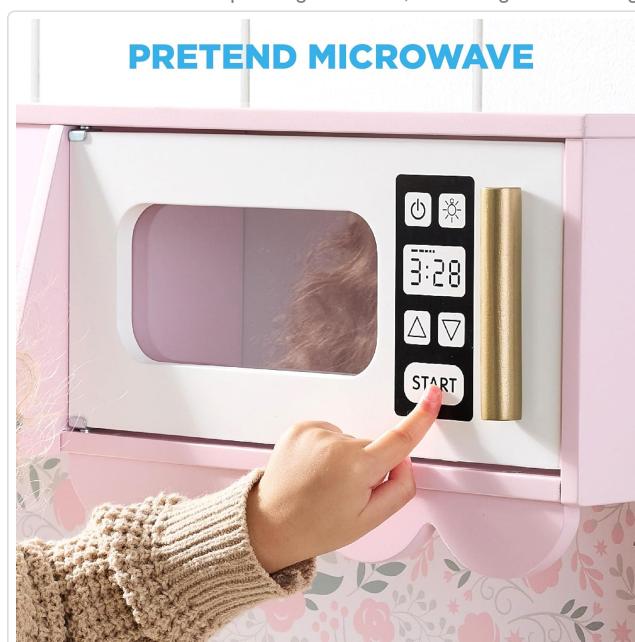


Image: A child's hand interacting with the pretend microwave, highlighting its functional door and control panel.



Image: The play kitchen with its doors open, revealing the spacious storage compartments for toys and accessories.

## Maintenance

To ensure the longevity and cleanliness of your playset, follow these simple maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as they may damage the finish.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Storage:** Store the playset indoors in a dry environment to prevent damage from moisture or extreme temperatures.

## Troubleshooting

If you encounter any issues with your Best Choice Products Wooden Pretend Play Cottage Kitchen, please refer to the following common solutions:

- **Loose Parts:** If any parts feel loose, re-tighten the corresponding screws.
- **Stability Issues:** Ensure the playset is placed on a flat, stable surface and is securely anchored to the wall using the anti-tipping hardware.
- **Missing Components:** Double-check the packaging for any overlooked parts. If components are genuinely missing or damaged upon arrival, please contact customer support.

For further assistance, please contact Best Choice Products customer service.

## Specifications

Feature	Detail
Product Dimensions (L x W x H)	24 x 12 x 36 inches
Item Weight	23 pounds
Model Number	SKY8537

Manufacturer Recommended Age	36 months - 10 years
Materials	Engineered wood with metal components
Certifications	ASTM & CPSIA-certified



Image: Dimensional diagram of the play kitchen, showing its height, width, and depth.

## WARRANTY AND SUPPORT

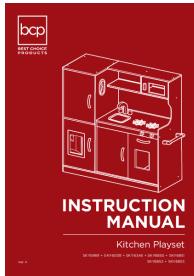
For information regarding product warranty, returns, or to purchase replacement parts, please contact Best Choice Products directly. You can typically find their contact information on their official website or through the retailer where the product was purchased.

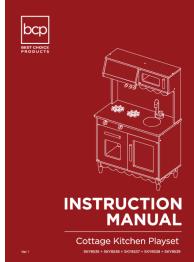
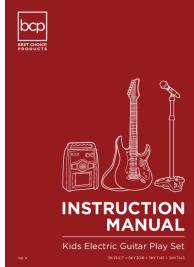
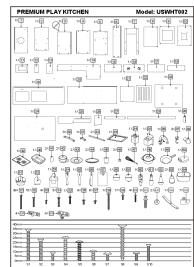
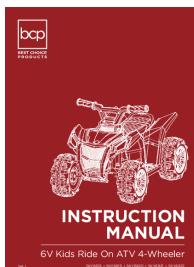
### Best Choice Products Inc

[Visit the Best Choice Products Store on Amazon](#)

© 2025 Best Choice Products. All rights reserved.

## Related Documents - SKY8537

	<p><a href="#">Best Choice Products Kitchen Playset Instruction Manual</a></p> <p>Comprehensive instruction manual for assembling the Best Choice Products Kitchen Playset, including parts lists, hardware details, and step-by-step assembly instructions for models SKY5969, SKY6009, SKY6346, SKY6850, SKY6851, SKY6852, and SKY6853.</p>
---	---

	<p><a href="#"><u>Best Choice Products Cottage Kitchen Playset Instruction Manual</u></a></p> <p>Detailed instruction manual for assembling the Best Choice Products Cottage Kitchen Playset, including parts list, tools required, and assembly steps. Model numbers: SKY8535, SKY8536, SKY8537, SKY8538, SKY8539.</p>
	<p><a href="#"><u>Best Choice Products Kids Electric Guitar Play Set Instruction Manual</u></a></p> <p>Official instruction manual for the Best Choice Products Kids Electric Guitar Play Set (SKY3017, SKY3018, SKY7142, SKY7143). Learn how to set up, operate, and maintain your toy guitar, amplifier, and microphone.</p>
	<p><a href="#"><u>Premium Play Kitchen Assembly Instructions - Model USWHT002</u></a></p> <p>Detailed assembly guide for the Premium Play Kitchen, model USWHT002. Includes a comprehensive parts list, step-by-step assembly instructions with textual descriptions of diagrams, and important safety warnings from the manufacturer, Ningbo Nien Maternal and Infant Products Co., Ltd.</p>
	<p><a href="#"><u>Best Choice Products 110-Piece Magnetic Building Tiles - Building Examples</u></a></p> <p>Explore creative building possibilities with the Best Choice Products 110-Piece Multicolor Magnetic Building Tiles. This guide showcases various examples of structures that can be created, encouraging imagination and skill development in children aged 3-8.</p>
	<p><a href="#"><u>6V Kids Ride On ATV 4-Wheeler Instruction Manual</u></a></p> <p>Instruction manual for the Best Choice Products 6V Kids Ride On ATV 4-Wheeler (models SKY6818-SKY6822), covering safety, assembly, operation, charging, and troubleshooting.</p>