

[Manuals.plus](#) /

> [Droyek](#) /

> Droyek Candle Warmer Lamp with Timer, Adjustable Height, Dimmable (Model XY124s)

Droyek XY124s

Droyek Candle Warmer Lamp with Timer (Model XY124s)

User Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Droyek Candle Warmer Lamp. Please read it thoroughly before use and retain it for future reference.

The Droyek Candle Warmer Lamp offers a flameless method to release fragrance from jar candles by heating them from above. It features adjustable height, dimmable light, and a timer function for convenience and safety.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the lamp, cord, or plug in water or other liquids.
- Always unplug the lamp from the outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors. This appliance is for indoor use only.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Place the lamp on a stable, heat-resistant surface.
- Ensure the candle is placed centrally under the heating bulb.
- The melted wax can become very hot. Avoid direct contact with melted wax.
- Keep out of reach of children and pets.
- Use only the specified 50W halogen bulbs (E26 base).

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon unpacking:

- 1 x Droyek Candle Warmer Lamp
- 2 x 50W Halogen Bulbs (E26 base)
- 1 x User Manual



Image: The Droyek Candle Warmer Lamp, two replacement bulbs, and the user manual, indicating the items included in the package.

4. PRODUCT FEATURES AND COMPONENTS

Familiarize yourself with the main components of your Droyek Candle Warmer Lamp:

- **Glass Lampshade:** Directs heat downwards to melt the candle.
- **Metal Lamp Pole:** Provides structural support and houses the wiring.
- **Adjustment Function:** Allows for height adjustment of the lampshade.
- **Halogen Bulb (50W):** The heat source for melting the candle wax.
- **Wooden Base:** Stable platform for the lamp and candle.
- **Timing Dimming Controller:** Inline control for power, brightness, and timer settings.

CANDLEWARMER PRODUCT DETAILS



Glass
Lampshade



Metal Lamp
Pole



Timing Dimming
Controller



Adjustment
Function



Halogen
Bulb-50w



Wooden
Base

Image: Detailed view of the candle warmer lamp highlighting its key components and their functions.

5. SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all components from the packaging.
2. **Place the Lamp:** Position the lamp on a flat, stable, and heat-resistant surface, away from flammable materials.
3. **Install the Bulb:** Gently screw one of the provided 50W halogen bulbs into the socket under the lampshade. Ensure it is securely fastened but do not overtighten.
4. **Adjust Height:** The lamp pole features an adjustment mechanism. Loosen the knob on the pole, adjust the height of the lampshade to accommodate your candle, and then tighten the knob to secure it. Ensure there is sufficient space between the bulb and the top of your candle (approximately 1-2 inches) to allow for optimal melting and fragrance diffusion.
5. **Place Candle:** Place your jar candle (not included) on the wooden base, centered directly beneath the bulb. This lamp is compatible with various candle sizes, including large jar candles.
6. **Connect Power:** Plug the power cord into a standard 110V AC electrical outlet.

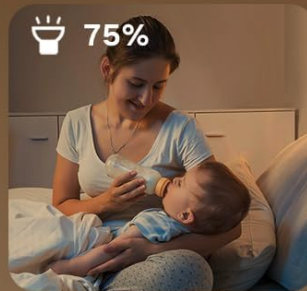


Image: The Droyek Candle Warmer Lamp set up with a candle, demonstrating proper placement.


6. OPERATING INSTRUCTIONS

The Droyek Candle Warmer Lamp is controlled via an inline timing dimming controller.

4 DIMMING OPTIONS AVAILABLE FOR DIRECTUSE



Long press +/- to adjust the light infinitely

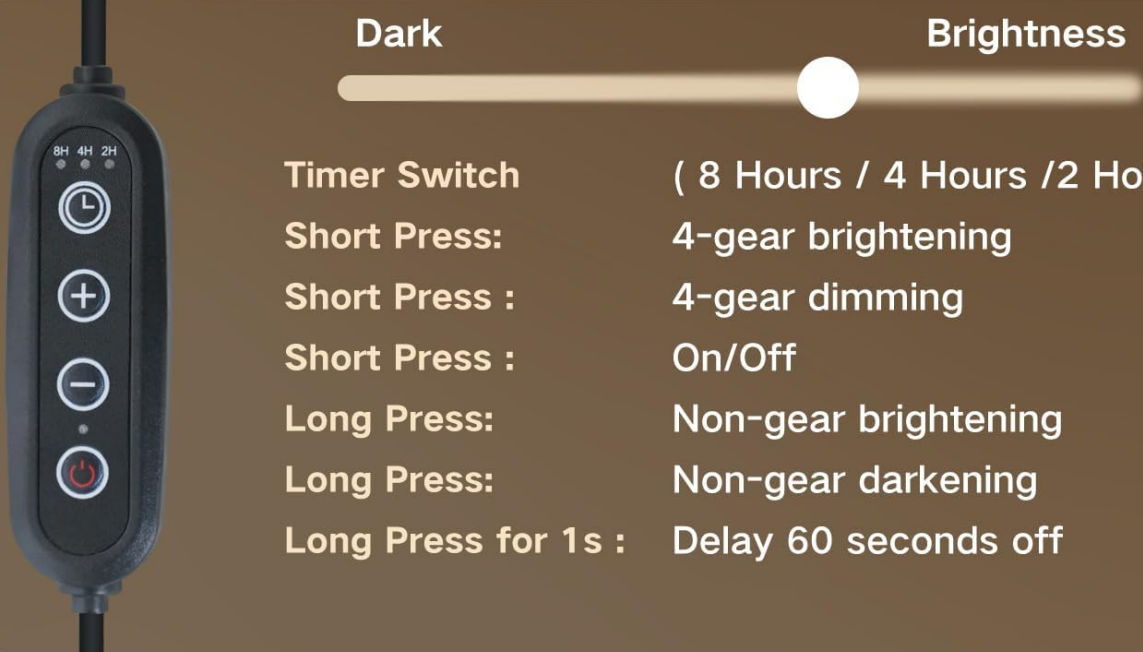

Dark	Brightness
Timer Switch	(8 Hours / 4 Hours / 2 Hours)
Short Press:	4-gear brightening
Short Press :	4-gear dimming
Short Press :	On/Off
Long Press:	Non-gear brightening
Long Press:	Non-gear darkening
Long Press for 1s :	Delay 60 seconds off

Image: The control panel for the candle warmer, showing buttons for power, dimming, and timer.

Power On/Off

- **Short Press:** Press the power button () once to turn the lamp on or off.

Brightness Adjustment (Dimming)

- **Short Press (+/-):** Use the '+' button to increase brightness (4-gear brightening) or the '-' button to decrease brightness (4-gear dimming).
- **Long Press (+/-):** Press and hold the '+' or '-' button for stepless brightness adjustment.

Timer Function

- **Short Press:** Press the timer button () to cycle through the available timer settings: 2 hours, 4 hours, or 8 hours. The lamp will automatically turn off after the selected duration.
- **Long Press (for 1s):** Press and hold the timer button for 1 second to activate a 60-second delay before turning off.

For optimal fragrance release, allow the lamp to operate for at least 30 minutes to melt the top layer of wax.

Video: Demonstration of the Droyek Candle Warmer Lamp in operation, showing how to adjust brightness and use the timer function.

7. MAINTENANCE

Cleaning

- Always unplug the lamp before cleaning.
- Allow the lamp and any melted wax to cool completely.
- Wipe the lamp's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If wax spills onto the base, allow it to cool and harden, then gently scrape it off.

Bulb Replacement

- Ensure the lamp is unplugged and the bulb is cool before attempting to replace it.
- Carefully unscrew the old bulb from the socket.
- Screw in a new 50W halogen bulb (E26 base). Two bulbs are included in the package.
- Do not exceed the recommended wattage of 50W.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Not plugged in. Power outlet is not working. Bulb is loose or burnt out.	Ensure the lamp is securely plugged into a working outlet. Test the outlet with another appliance. Check if the bulb is screwed in tightly. Replace the bulb if burnt out.
Candle wax is not melting or fragrance is weak.	Lampshade height is too high. Brightness setting is too low. Bulb wattage is incorrect.	Adjust the lampshade height closer to the candle (ensure at least 1 inch clearance). Increase the brightness setting using the controller. Ensure a 50W halogen bulb is installed.
Timer function not working.	Timer not activated or incorrectly set.	Short press the timer button to select 2H, 4H, or 8H. The indicator light will confirm the setting.

9. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Droyek
Model Name	candle lamp-124

Feature	Detail
Item Model Number	XY124s
Power Source	Corded Electric
Voltage	110 Volts (AC)
Wattage	50 watts (for bulb)
Light Source Type	Halogen
Bulb Base	E26
Included Components	Lamp Base, Shade, 2 x 50W Halogen Bulbs
Material	Metal (Base Material), Glass (Lampshade)
Finish Type	Gold
Product Dimensions	6.6 x 5.4 x 10.7 inches
Item Weight	1.98 pounds (approx. 0.9 kg)
Indoor/Outdoor Usage	Indoor
Switch Type	Rotary, Push Button (via inline controller)
Special Features	Adjustable Height, Dimmable, Timer Function (2H/4H/8H)

FOR DIFFERENT TYRES OF CANDLES



Image: Technical drawing illustrating the dimensions of the candle warmer lamp.

Lighting Facts Per Bulb

Brightness **2572 lumens**

Estimated Yearly Energy Cost \$6.02

Based on 3 hrs/day, 11¢/kWh

Cost depends on rates and use

Life

Based on 3 hrs/day

2 years

Light Appearance

Warm

Cool



Energy Used

50 watts

Image: Lighting facts label for the included 50W halogen bulb, detailing its brightness (2572 lumens), estimated yearly energy cost (\$6.02 based on 3 hrs/day, 11¢/kWh), life (2 years based on 3 hrs/day), light appearance (Warm, 2500K), and energy used (50 watts).

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Droyek website. Keep your purchase receipt as proof of purchase.

