

10297AST

Generic Member Mark Wicker Outdoor Dining Set, 7-Piece (Model 10297AST) User Manual

Comprehensive instructions for assembly, use, and care.

INTRODUCTION

Thank you for choosing the Generic Member Mark 7-Piece Wicker Outdoor Dining Set. This set is designed to enhance your outdoor living space with its durable construction and comfortable seating. This manual provides essential information for the safe assembly, proper use, and effective maintenance of your new dining set. Please read all instructions carefully before assembly and use.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions:** Ensure you understand all assembly and safety instructions before beginning.
- Adult assembly required:** This product should be assembled by at least two adults.
- Stable surface:** Always place the dining set on a flat, level, and stable surface to prevent tipping.
- Weight limits:** Do not exceed the recommended weight capacity for chairs or the table.
- Weather precautions:** While weather-resistant, it is recommended to cover or store the set during extreme weather conditions (heavy rain, snow, strong winds) to prolong its lifespan.
- Keep away from heat:** Do not place hot items directly on the table surface without protection.
- Regular inspection:** Periodically check all bolts and connections to ensure they are tight and secure.

PACKAGE CONTENTS

Your 7-piece dining set includes the following components:

- 1 x Dining Table
- 6 x Dining Chairs
- Hardware Pack (bolts, washers, Allen wrench)



Image: The complete 7-piece outdoor dining set, featuring a rectangular table and six chairs, set up in an outdoor patio area.

ASSEMBLY INSTRUCTIONS

Assembly of this dining set is designed to be straightforward. Please follow these general steps. Refer to the included hardware pack for specific fasteners.

- 1. Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a soft, clean surface to prevent scratches. Verify all parts are present according to the packing list.
- 2. Assemble the Table:** Attach the table legs to the tabletop using the provided bolts and washers. Ensure all connections are finger-tight before fully tightening.
- 3. Assemble the Chairs:** For each chair, attach the backrest to the seat, and then attach the legs. Ensure all connections are finger-tight.
- 4. Final Tightening:** Once all components are loosely assembled, place the table and chairs upright on a level surface. Gradually tighten all bolts with the Allen wrench until secure. Do not overtighten.
- 5. Check Stability:** Gently rock each piece to ensure it is stable and does not wobble. Adjust leg levelers if necessary (if included).

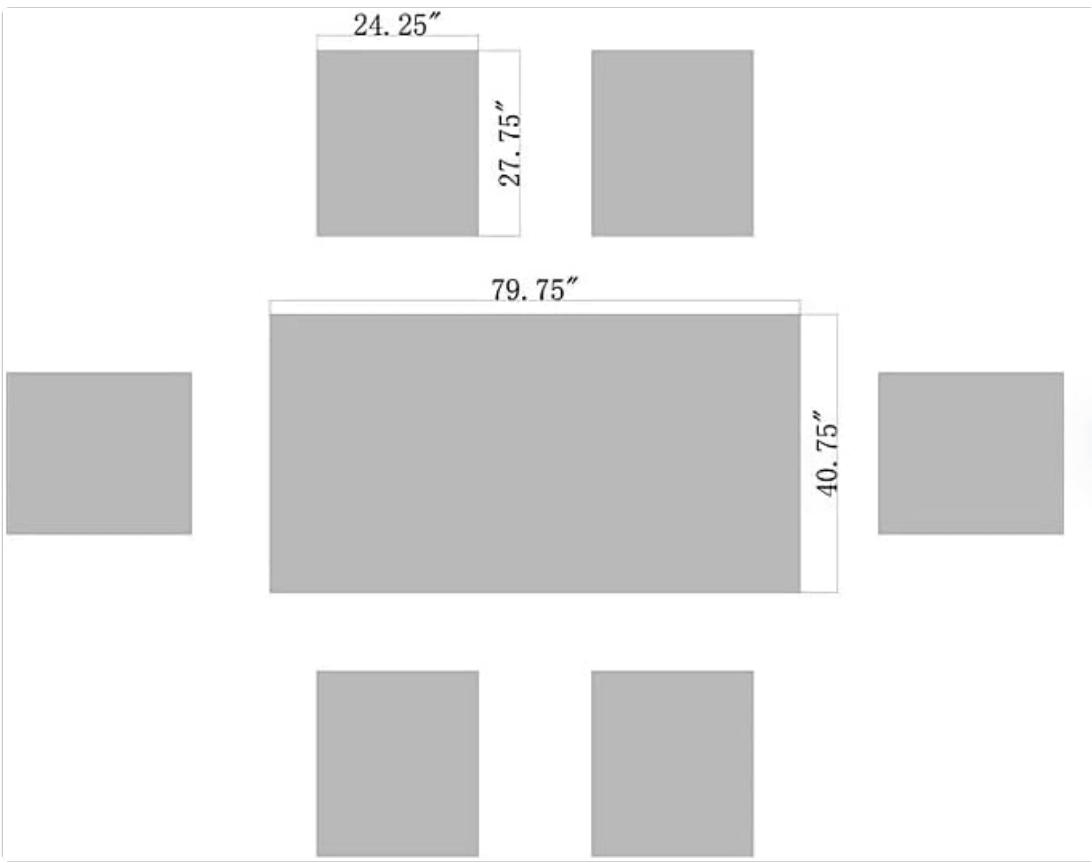


Image: A top-down diagram showing the dimensions of the rectangular dining table (79.75" x 40.75") and the individual chairs (24.25" x 27.75").

USING YOUR DINING SET

This 7-piece dining set is designed for comfortable outdoor dining and entertaining. The spacious rectangular table provides ample room for meals and gatherings, while the six high-back chairs with plush cushions offer comfortable seating. The set's weather-resistant construction, including UV-resistant wicker and water-repellent cushions, ensures durability for long-lasting outdoor use.



Image: A close-up view of the dining table's surface, showcasing its wood-grain pattern and the central umbrella hole with a decorative cover.



Image: A detailed view of a chair's armrest, highlighting the woven wicker texture and the smooth wooden top of the armrest.

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your outdoor dining set.

- **Cleaning Wicker and Frames:** Wipe down the wicker and aluminum/steel frames with a soft cloth dampened with mild soap and water. Rinse thoroughly with clean water and dry completely. Avoid harsh chemicals or abrasive cleaners.
- **Cushion Care:** The cushions are water-repellent. For spills, blot immediately with a clean cloth. For deeper cleaning, remove cushion covers (if removable) and hand wash with mild soap and water, or spot clean. Air dry completely before reattaching or storing. Do not machine wash or tumble dry.
- **Tabletop Care:** The tempered glass tabletop can be cleaned with a glass cleaner and a soft cloth. For the main table surface, use mild soap and water.
- **Protective Cover:** A 1-piece custom cover made from recycled content is included. Use this cover to protect the entire set from dust, dirt, and harsh weather when not in use.
- **Winter Storage:** During prolonged periods of non-use or harsh winter conditions, it is recommended to store cushions indoors and cover the furniture, or store the entire set in a dry, sheltered area.



Custom Covers

Includes 1-piece custom cover made from recycled content for the set



Image: The 7-piece dining set fully covered by its custom-fit black protective cover, designed to shield it from the elements.

TROUBLESHOOTING

- Wobbly Table/Chairs:** Check all bolts and connections. Tighten any loose fasteners. Ensure the furniture is on a completely level surface.
- Stains on Wicker:** For stubborn stains, use a soft brush with mild soap and water. Rinse thoroughly.
- Fading:** While UV-resistant, prolonged exposure to direct sunlight can cause some fading over time. Using the protective cover when not in use can minimize this.

PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	10297AST
Item Weight	186 pounds
Package Dimensions	84 x 60 x 30 inches
Color	Rustic Brown

Feature	Specification
Brand	Generic
Size	7-piece
Style	Modern
Chair Dimensions (each)	28.34"D x 24.21"W x 36.02"H
Chair Weight (each)	26 lbs
Table Dimensions	79.92"D x 41.92"W x 29.92"H
Table Weight	160 lbs
Frame Material	Aluminum and Steel
Wicker Material	All-weather wicker (fade-resistant)
Cushion Material	Reticulated foam (water-repellent)