



Manuals.plus /

› FOREDOM /

› FOREDOM Rechargeable Walkie Talkies for Kids (Model FD688) - Instruction Manual

FOREDOM FD688

FOREDOM Rechargeable Walkie Talkies for Kids (Model FD688) - Instruction Manual

Your guide to setting up and using your new walkie talkies.

PRODUCT OVERVIEW

The FOREDOM FD688 Rechargeable Walkie Talkies are designed for clear and reliable communication for children aged 3-12. This 3-pack set features a durable, child-friendly design with a long-range capability and multiple channels for private conversations.



This image displays the three walkie talkies in cyan, pink, and blue, along with their individual charging cables and the product packaging. The walkie talkies are compact and designed for children.

SAFETY INFORMATION

- Keep small parts away from young children to prevent choking hazards.
- Do not expose the walkie talkies to extreme temperatures or direct sunlight for extended periods.
- Avoid submerging the devices in water as they are not water-resistant.
- Use only the provided charging cable. Do not attempt to charge with damaged cables or incompatible chargers.
- Adult supervision is recommended during use, especially when children are playing outdoors.

PACKAGE CONTENTS

- 3 x FOREDOM FD688 Rechargeable Walkie Talkies (Cyan, Pink, Blue)
- 1 x 3-in-1 USB Charging Cable
- 3 x Nonstandard Rechargeable Batteries (pre-installed)
- 1 x User Manual (this document)

SETUP

1. Initial Charging

Before first use, fully charge all walkie talkies.

1. Connect the 3-in-1 USB charging cable to a compatible USB power adapter (not included).
2. Plug each of the three micro-USB connectors into the charging port located on the top side of each walkie talkie.
3. The charging indicator light (if present, or screen icon) will show charging status. A full charge typically takes approximately 2.5 hours.
4. Once fully charged, disconnect the walkie talkies from the charging cable.

ECONOMICAL ECO-FRIENDLY



7 Days
Stand by



48 Hour
Working Time




2.5 Hour
Full Charge



This image shows three walkie talkies, one pink, one blue, and one yellow, connected to a single USB wall adapter via a 3-in-1 charging cable. They are placed on a wooden surface next to a small plant, illustrating the charging process.

2. Powering On/Off

To power on or off, press and hold the **Power** button (usually labeled with a power icon) located on the front of the walkie talkie until the screen illuminates or turns off.

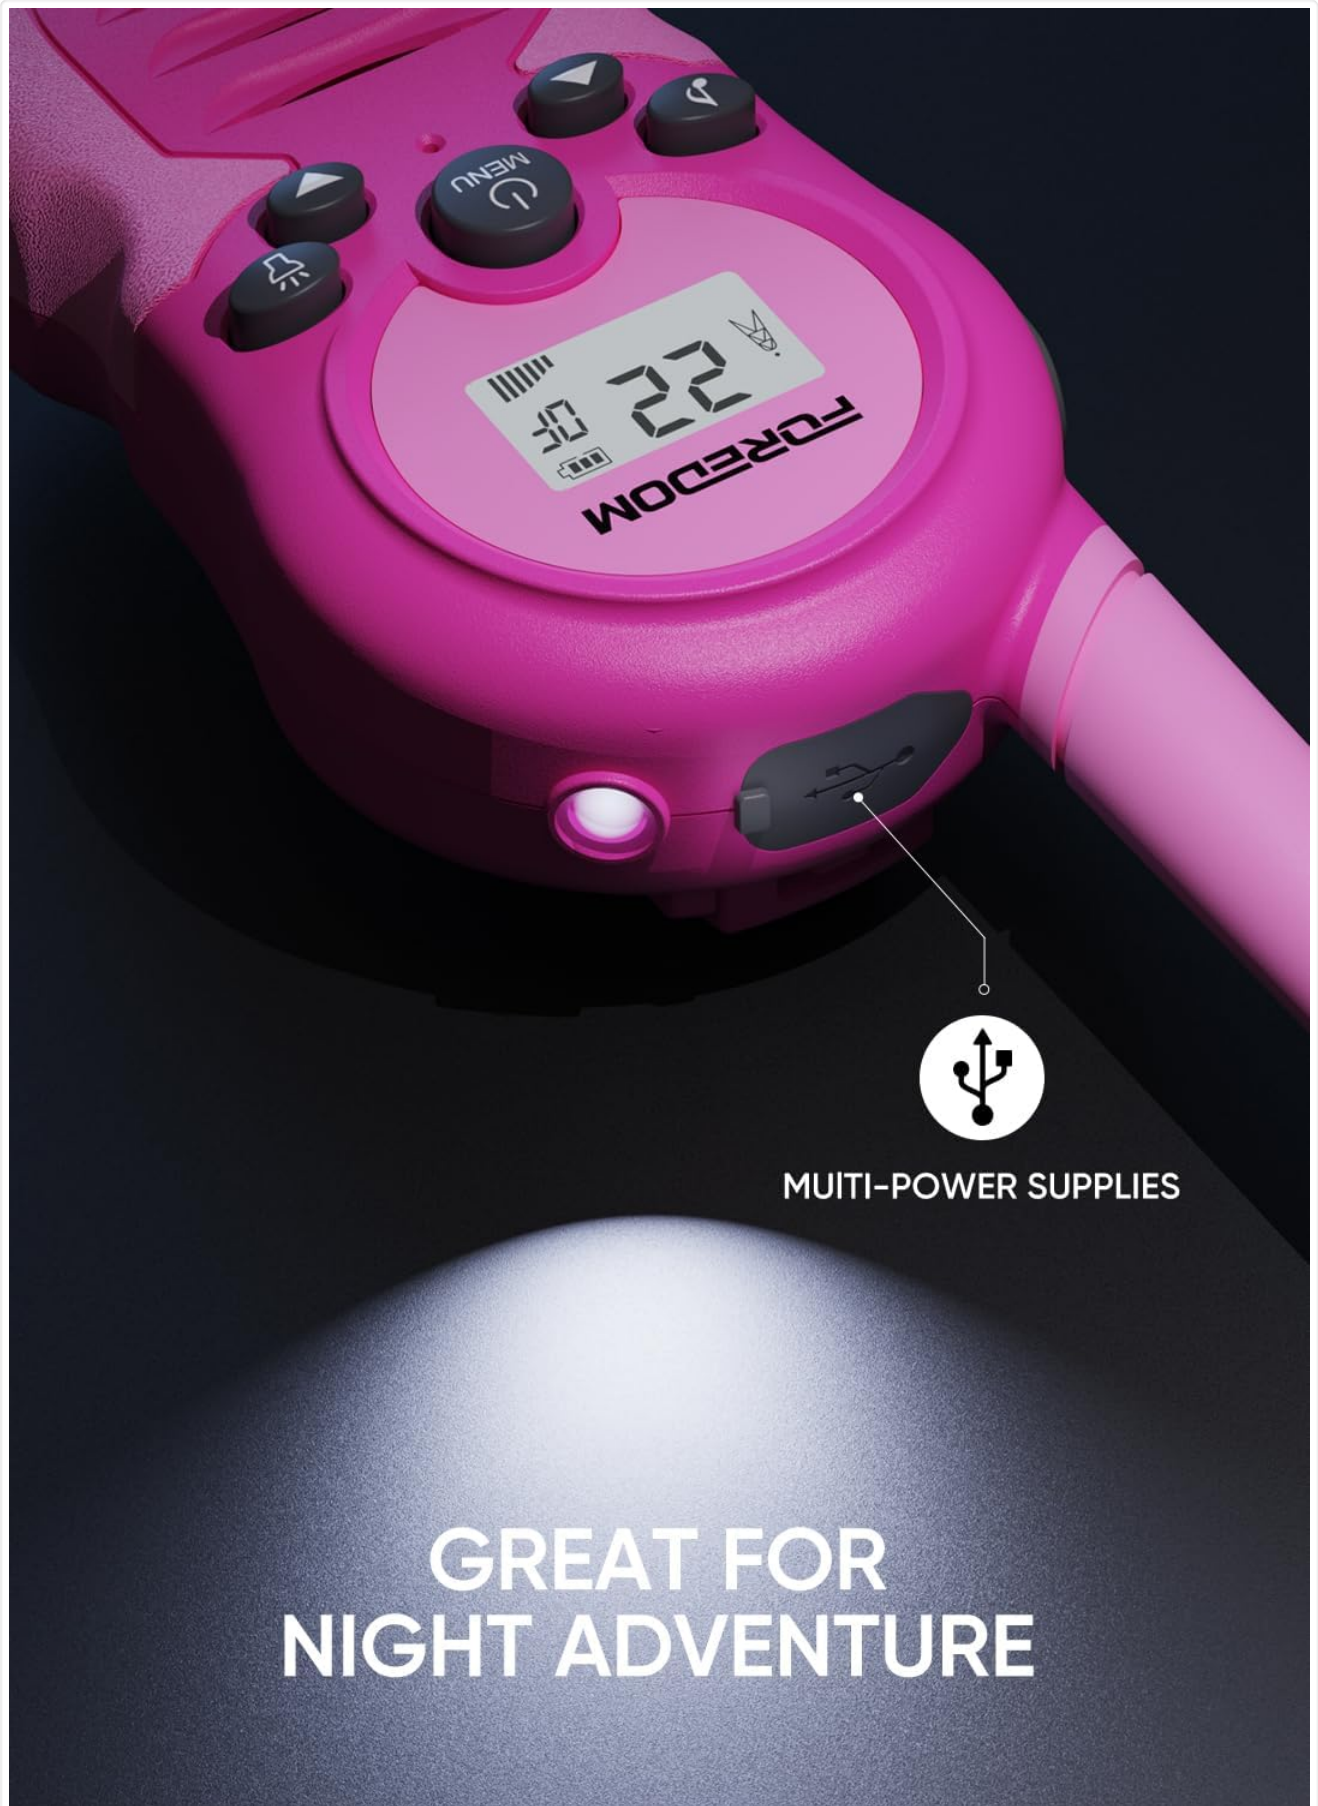

A close-up view of a pink walkie talkie, highlighting its LCD screen displaying '22' for the channel and battery level. Below the screen are the power button, menu button, and up/down arrow buttons. The speaker grille is visible at the bottom.

OPERATING INSTRUCTIONS

1. Setting Channels

For two or more walkie talkies to communicate, they must be set to the same channel and sub-channel.

1. Press the **MENU** button once. The channel number will flash on the LCD screen.
2. Use the **Up** or **Down** arrow buttons to select your desired primary channel (1-22).
3. Press the **MENU** button again. The sub-channel number (CTCSS code) will flash.
4. Use the **Up** or **Down** arrow buttons to select your desired sub-channel (1-99). Select '0F' to turn CTCSS off.
5. Press the **PTT** (Push-to-Talk) button to confirm your settings and exit the menu.

CHILD FRIENDLY DESIGN



This image illustrates the three steps for setting channels on the walkie talkies. Step 1 shows setting the primary channel (1-22), Step 2 shows setting the sub-channel (1-99), and Step 3 shows confirming settings with the PTT key.

2. Transmitting and Receiving

1. To transmit your voice, press and hold the **PTT** (Push-to-Talk) button located on the side of the walkie talkie. Speak clearly into the microphone.
2. Release the **PTT** button to stop transmitting and listen for a response.

3. Ensure the walkie talkie is held approximately 2-3 inches from your mouth for optimal sound clarity.

This video demonstrates children actively using the FOREDOM walkie talkies in various outdoor settings, highlighting their ease of use and clear communication capabilities during play.

3. VOX (Voice Operated Exchange) Feature

The VOX feature allows hands-free communication without pressing the PTT button.

1. With the walkie talkie on, press the **MENU** button three times until "VOX" appears on the screen.
2. Use the **Up** or **Down** arrow buttons to select a VOX sensitivity level (1-3, with 3 being the most sensitive). Select "0F" to turn VOX off.
3. Press the **PTT** button to confirm. When VOX is active, the walkie talkie will automatically transmit when it detects your voice.

4. Flashlight Function

Each walkie talkie is equipped with a built-in flashlight for use in low-light conditions.

1. To turn the flashlight on, press the **Flashlight** button (usually indicated by a light bulb icon).
2. Press the button again to turn it off.

PRIVATE CHANNELS

Block interference from strangers



STEP 1

Press “MENU” to set the primary channel (channels 1-22)



STEP 2

Press “MENU” again to select sub-channel (channels 1-99)



STEP 3

Press the “PTT key” to confirm settings

Tip: Ensure the device is powered on before adjusting settings

A pink walkie talkie is shown in a dark setting, with its integrated flashlight shining brightly. The image emphasizes the 'Great for Night Adventure' aspect, showcasing the multi-power supplies and the flashlight's utility.

MAINTENANCE

- **Cleaning:** Wipe the walkie talkies with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store in a cool, dry place away from direct sunlight when not in use.

- **Battery Care:** To prolong battery life, avoid fully discharging the batteries frequently. Recharge regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or poor sound quality	Incorrect channel/sub-channel, low battery, out of range	Verify all walkie talkies are on the same channel and sub-channel. Recharge batteries. Move closer to the other user.
Cannot transmit	PTT button not pressed, low battery, channel busy	Ensure PTT button is fully pressed. Recharge batteries. Wait for the channel to clear.
Walkie talkie does not power on	Dead battery	Charge the walkie talkie for at least 30 minutes.
Short range	Obstructions, environmental interference, low battery	Move to an open area. Recharge batteries.

This video showcases the FOREDOM walkie talkies being used by children in various outdoor adventures, demonstrating their long-range capabilities and durable design in a playful context.

SPECIFICATIONS

- **Brand:** FOREDOM
- **Model:** FD688
- **Channels:** 22 FRS Channels
- **Sub-channels (CTCSS):** 99
- **Frequency Range:** 462-467 MHz
- **Maximum Talking Range:** Up to 2 miles (actual range may vary based on terrain and conditions)
- **Battery Type:** Nonstandard Rechargeable Lithium Battery (included)
- **Talk Time:** Up to 48 hours
- **Standby Time:** Up to 7 days
- **Charging Interface:** Micro-USB (3-in-1 cable included)
- **Special Features:** Backlit LCD Screen, Built-in Flashlight, VOX Function, Key Lock, Belt Clip
- **Product Dimensions:** 6.1 x 2.38 x 1.4 inches
- **Item Weight:** 12.3 ounces
- **Water Resistance Level:** Not Water Resistant

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official FOREDOM website. Keep your purchase receipt as proof of purchase.

